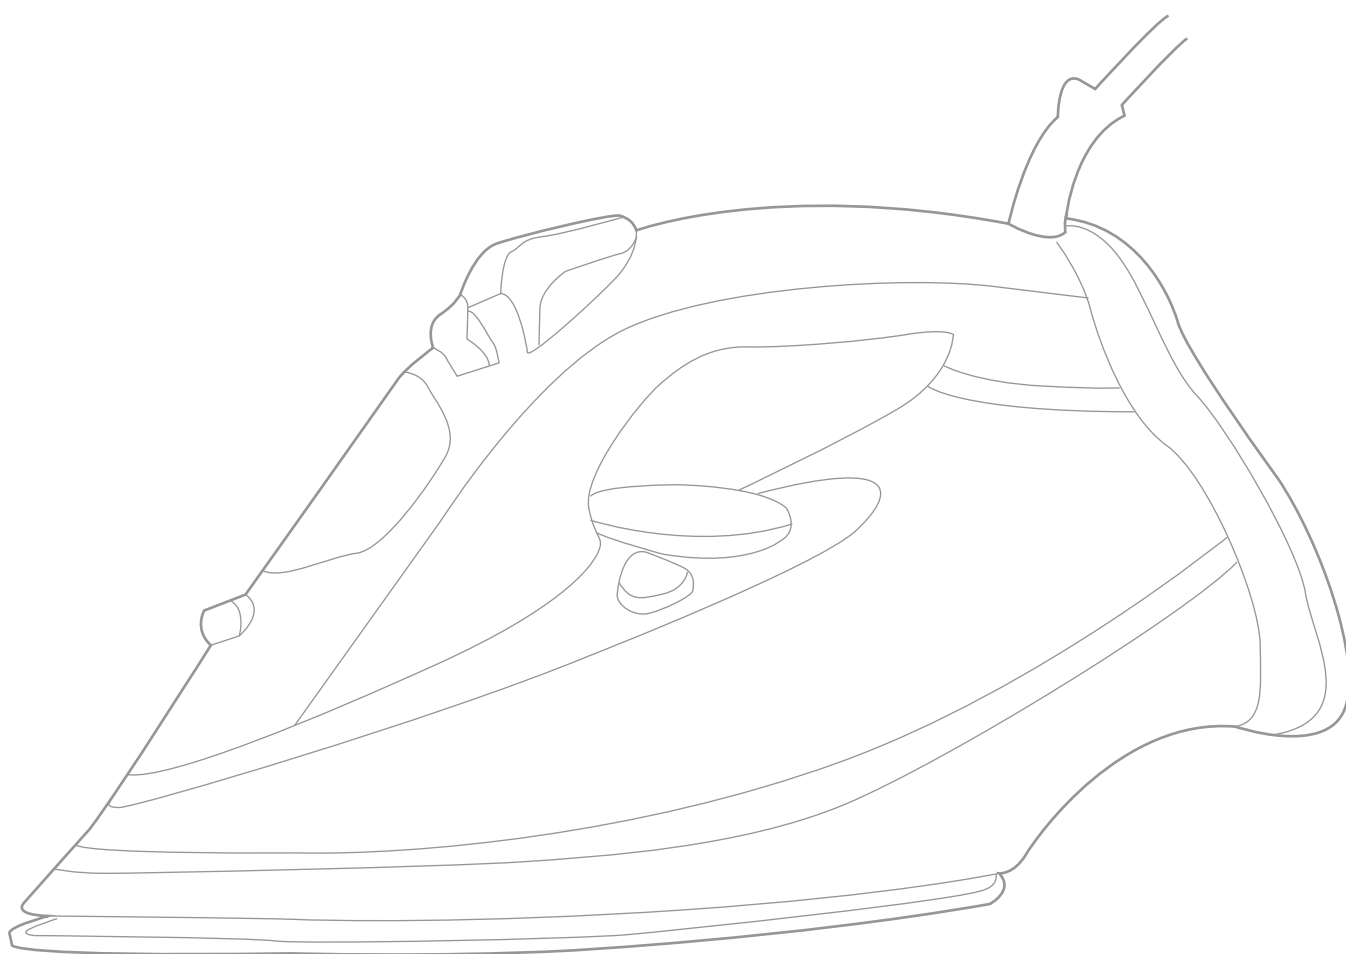 


Goodmans

3000W ULTRA STEAM IRON



Welcome

Thank you for choosing this Goodmans product. We've been making electronics for the British people for 70 years. Each of our projects has been carefully designed to be great at what it does and this one is no exception. We hope you enjoy your new 3000W Steam Iron.

Your 3000W Ultra Steam Iron

In The Box

Carefully remove your Steam Iron from the box.

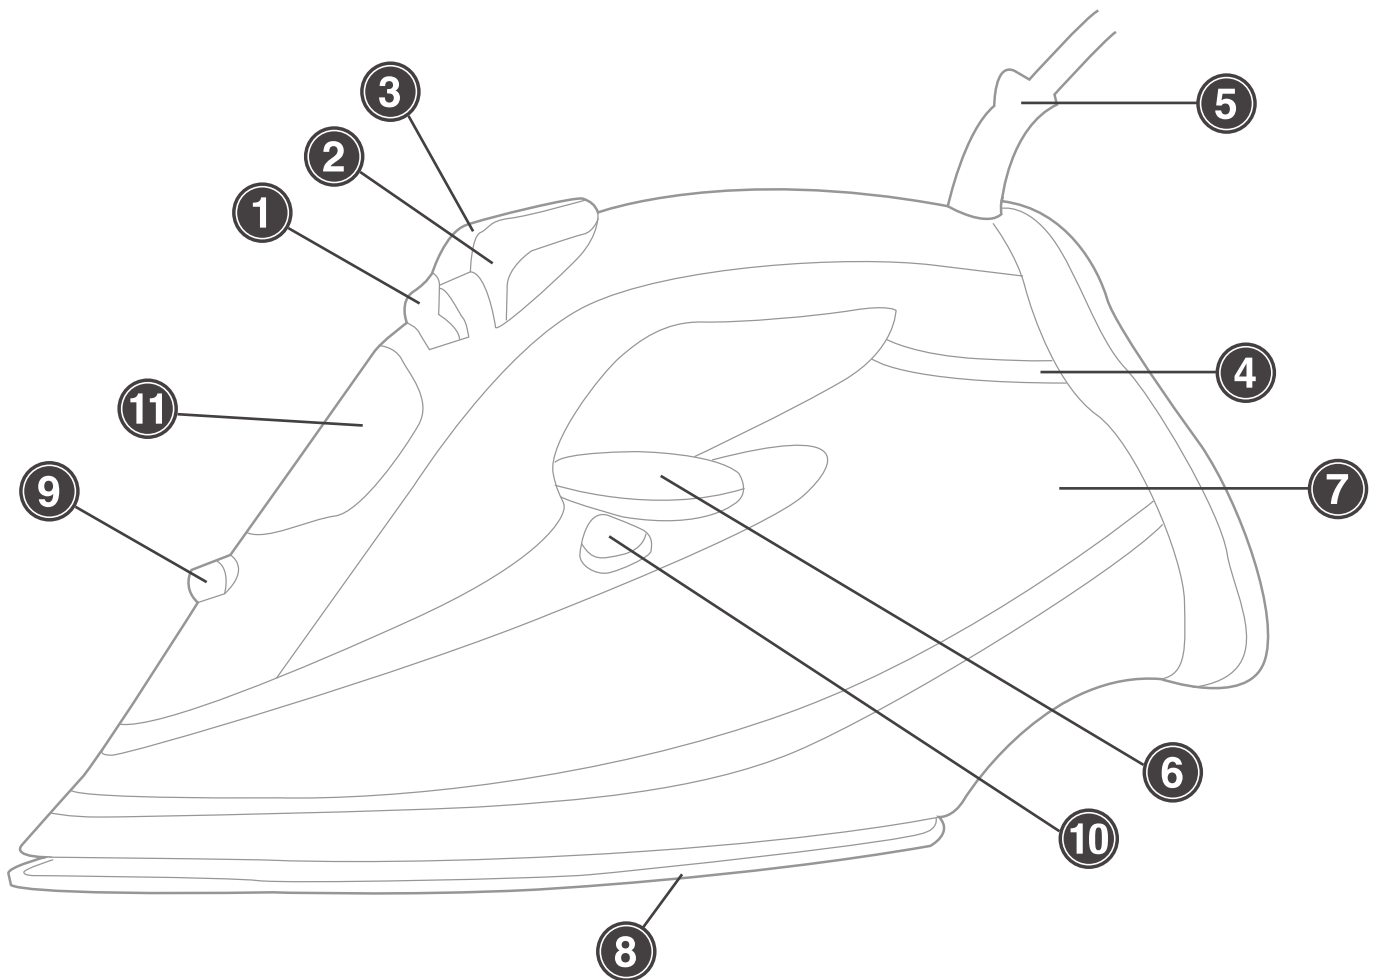 
- Steam Iron
- Measuring Cup
- Safety & Guarantee Booklet
- Instruction Manual

If any of these items are missing contact Customer Support at goodmans@bmstores.co.uk

Mains Power

Your 3000W Steam Iron requires a mains supply of 220-240V AC ~ 50 Hz. Please ensure that your mains supply is compatible before use. Disconnect the Power Cord from the mains when not in use.

Description Of Parts



- ① Variable steam control
- ② Water spraying button
- ③ Steam burst button
- ④ Indicator light
- ⑤ Mains cable
- ⑥ Temperature control
- ⑦ 380ml water tank
- ⑧ Ceramic soleplate
- ⑨ Spraying outlet
- ⑩ Self clean button
- ⑪ Cover of water filling inlet

Using your Steam Iron

- Remove any stickers, protective foil or storage cover from the soleplate.
- Use the measuring cup supplied to fill with water. Do not fill above the “max” mark.
- After filling the steam iron, ensure it is placed on a flat level surface that is stable.
- Plug the power cord into unobstructed wall socket and then switch on.
- Set the temperature dial on the iron to the correct temperature for the fabric that is to be ironed (as shown in the temperature guide) then switch on the steam iron.
- Ensure all switches are in the off position when you are finished the appliance.

Functions

Anti-Drip Function

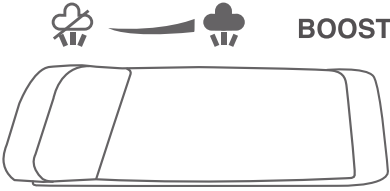
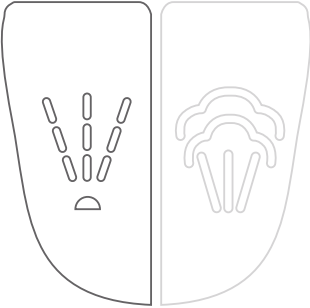


This function controls the water flow to the soleplate at all times. Below a certain temperature, the anti-drip function cuts off the flow of water and stops the iron from dripping onto the fabric.

Auto-Shut Off Function

The iron will automatically switch off if it has not been moved for a while, usually 30 seconds in horizontal position and approx. 8 minutes in vertical position.

To indicate that the iron has been switched off, the indicator light will start flashing and the iron will make a beeping tone.

To heat up the iron again, pick it up and move it slightly.

Description of function	Image	To use
<p>1 Steam Regulator</p>		<p>Adjust the amount of steam produced when ironing. To iron without steam, set the steam regulator to the minimal position. For an extra boost of steam slide the slider all the way to the right. <i>NOTE: At the lowest temperature, the soleplate is not hot enough to produce steam so the steam regulator should be set to the minimum position.</i></p>
<p>2 Water Spray Button</p>		<p>Can be used to remove stubborn creases. Press the spray button and water will spray out of the spray outlet onto the garment. <i>NOTE: do not use this function with silk as staining may occur</i></p>
<p>3 Steam Shot Button</p>		<p>Can be used to remove stubborn creases or to press a sharp crease or pleats. Set the temperature control and steam regulator to the maximum position and then press the steam shot button repeatedly at intervals of 5 seconds. To remove creases from hanging clothes, curtains etc, hold the iron in an upright position approximately 15cm away from the garment. Press the steam shot button at intervals of 5 seconds. However after 4 jets of steam, wait for 10 seconds for continued steam production. WARNING: DO NOT VERTICAL STEAM WHILE ITEM IS BEING WORN.</p>
<p>10 Self Clean Button</p>		<p>When soleplate is heating up, press the self-clean button. The strong steam with some water will come out from the soleplate for self cleaning.</p>



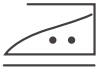
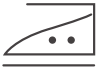 
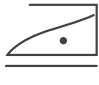 
NOTE: Make sure there is water in the tank in order to iron with steam/spray.

Ironing tips

Setting the temperature

The temperature control ⑥ adjusts the temperature of the soleplate ⑧

Check the temperature instructions shown on the care label of the garment you are ironing and set the temperature control ⑥ to the corresponding position by lining it up with the temperature control pointer on the iron:

Cloth material	Temperature setting	Marks in clothes	Preferable ironing method
Man-made cotton	●		Ironing the back of clothes without any water or cover a piece of cloth on the goods you want to iron
Synthetic fibre	●		
Silk	● ●		Dry ironing the back of the clothes
Wool	● ●		
Cotton	● ● ●	 	Normal ironing using steam and higher temperature settings
Linen	● ● ●		

- If you are unsure what type of material the garment is made from, start ironing on the lowest temperature setting and increase accordingly.
- If the garment is made from mixed fabrics, set the temperature for the most delicate material.
- For silk, woollen or synthetic materials iron the reverse side of the fabric to prevent shiny patches. Avoid using the spray function to prevent stains.
- Sort your garments based on their care labels, always starting with those that have to be ironed at the lowest temperature.
- The indicator light ④ will stay lit while the iron is heating up and go out once the selected temperature has been reached. Wait a few seconds after the light goes out before you start ironing. Once the iron is ready, you can continue to iron even if the indicator light comes on again.

Cleaning and Maintenance

Limescale:

If you live in a particularly hard water area, we recommend using bottled or distilled water.

Warning: never pour vinegar or other liquid cleaners for eliminating calcium into water tank.

After ironing:

Disconnect power supply, allow iron to cool completely and empty the water tank.

Wipe the body and the soleplate with a damp cloth or a non-abrasive (liquid) cleaner. Always store the emptied iron horizontally on a stable surface.

Anti-Calc Function:

The anti-calc function is located inside the water tank to eliminate impurities from the water and to reduce the problems connected with limescale build-up.

To prolong the efficiency of this function, follow the below steps occasionally:

1. Unplug the iron and allow it to cool down.
2. With the measuring cup, fill it $\frac{3}{4}$ full with water then add 1 teaspoon of salt and fill the water tank with this solution.
3. Leave the solution in the water tank for 15 minutes shaking it occasionally then empty the water tank.
4. Repeat step 3 again.
5. Finally, fill the water tank with fresh water to rinse and then empty.

Guarantee

This product is guaranteed for twelve months from the date of original purchase. If any defect should occur due to faulty materials or workmanship, contact: goodmans@bmstores.co.uk

You will need to have your receipt of purchase to hand.

The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in the User Manual.
- The product must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.

Technical Specification

Model Number	325002
Power Supply	220-240 V, 50Hz
Maximum Power Consumption	3000W
Water Tank Capacity	380ml

Customer Support

For all product support, please email:

goodmans@bmstores.co.uk



Goodmans