 


# RETRO

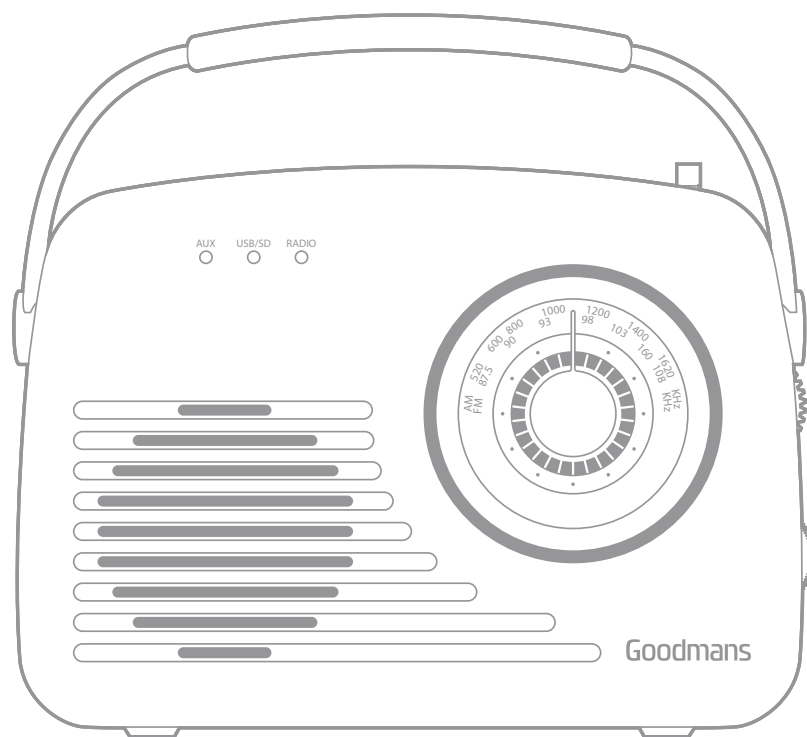

MODEL: 329176  
PORTABLE AM/FM RADIO

USER MANUAL



**Goodmans**

# 1 Welcome

---

## 2 Your Radio

- 2.1 In The Box
  - 2.2 Front View
  - 2.3 Rear View
  - 2.4 Control Panel
- 

## 3 Quick Setup

- 3.1 Power On
  - 3.1 Playing Music Via Radio
- 

## 4 Features

### **Controls**

- 4.1 Functions buttons
  - 4.2 Radio
  - 4.3 AUX-in
  - 4.4 USB/SD
  - 4.5 Standby
- 

## 5 Troubleshooting

---

## 6 Technical Specifications

---

## 7 Customer Support

# 1 Welcome

Thank you for choosing this Goodmans product. We've been making electronics for the British people for 70 years. Each of our projects has been carefully designed to be great at what it does and this one is no exception. We hope you enjoy your new AM/FM Retro Radio.

---

## 2 Your Radio

### 2.1 In The Box

Carefully remove your Radio from the box.

Inside the box you will find:

- Radio
- Mains power supply lead
- Quick Start Guide
- Guarantee Booklet

If any of these items are missing contact Customer Support at [goodmans@bmstores.co.uk](mailto:goodmans@bmstores.co.uk)



### Power

Your Radio requires a mains supply of 230V AC ~ 50 Hz. or 4 x size 'C' Batteries. Please ensure that your mains supply is compatible before use. Disconnect the Power Cord from the mains or remove the batteries when not in use.

### Position of Radio

Place on a flat, stable surface that is not subject to vibrations.

Avoid the following locations:

- Where it is exposed to direct sunlight
- Where it is close to heat radiating sources
- Where the humidity is high and ventilation is poor
- Where it is dusty

### Adjusting the Aerial

 
Fully extend the aerial to ensure good reception for the Radio. It may be necessary to alter the position of the Radio and/or the aerial to achieve the best signal.

### Using Headphones

Headphones require a 3.5mm diameter stereo plug and an impedance of 8-32 ohms. Headphones are not supplied with this Radio.


## 2.2 Front View

- A INDICATOR lights.**  
Will illuminate when selected.
- B HANDLE**  
Press to view station information.
- C TUNER display**  
Displays the selected frequency.
- D FM antenna**  
Extend for best reception.
- E TUNER**  
Rotate to select a radio station.
- F VOLUME**  
Rotate to select your desired radio volume.
- G SPEAKER**

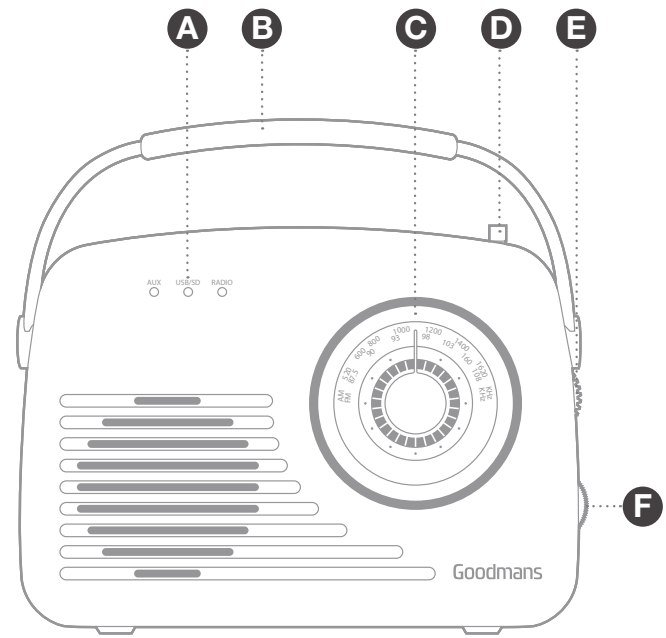


## 2.3 Rear View

 - H Battery compartment cover**
- J Battery compartment**  
Takes 4 x 'C' batteries
- K DC-In socket**  
Used to connect the Radio to the mains power supply.

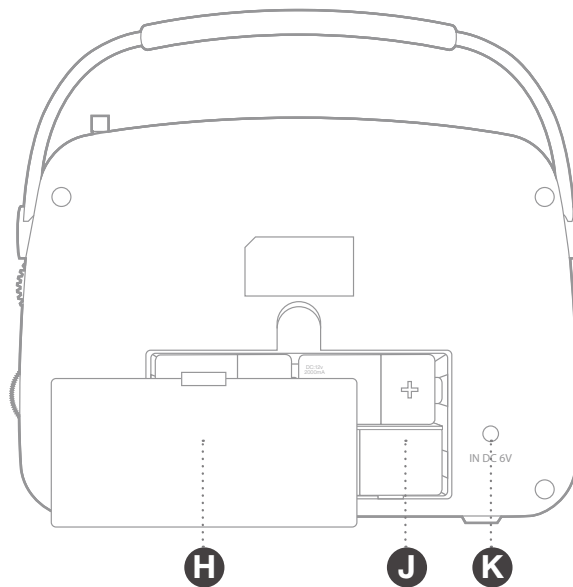

## 2.4 Control Panel

 
- L Headphone Jack**
- M Aux-In Jack**
- N SD Card Slot**
- O USB Port**
- P Prev**
- Q Next**
- R Function**
- S Stop**
- T Play/Pause**
- U Power**

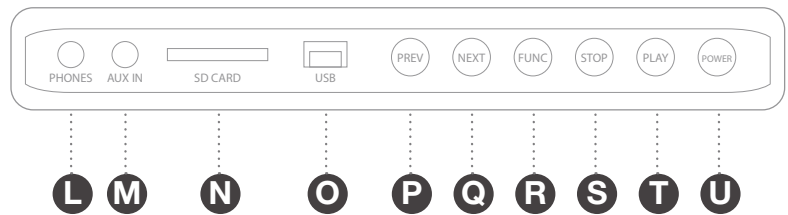

# 3 Quick Setup



## 3.1 Power On

 1. Connect the power cord into the DC-In socket.
2. Connect the Power Plug to the mains socket.
3. Or insert 4 x type 'C' batteries into the battery compartment
4. Press the power on button.

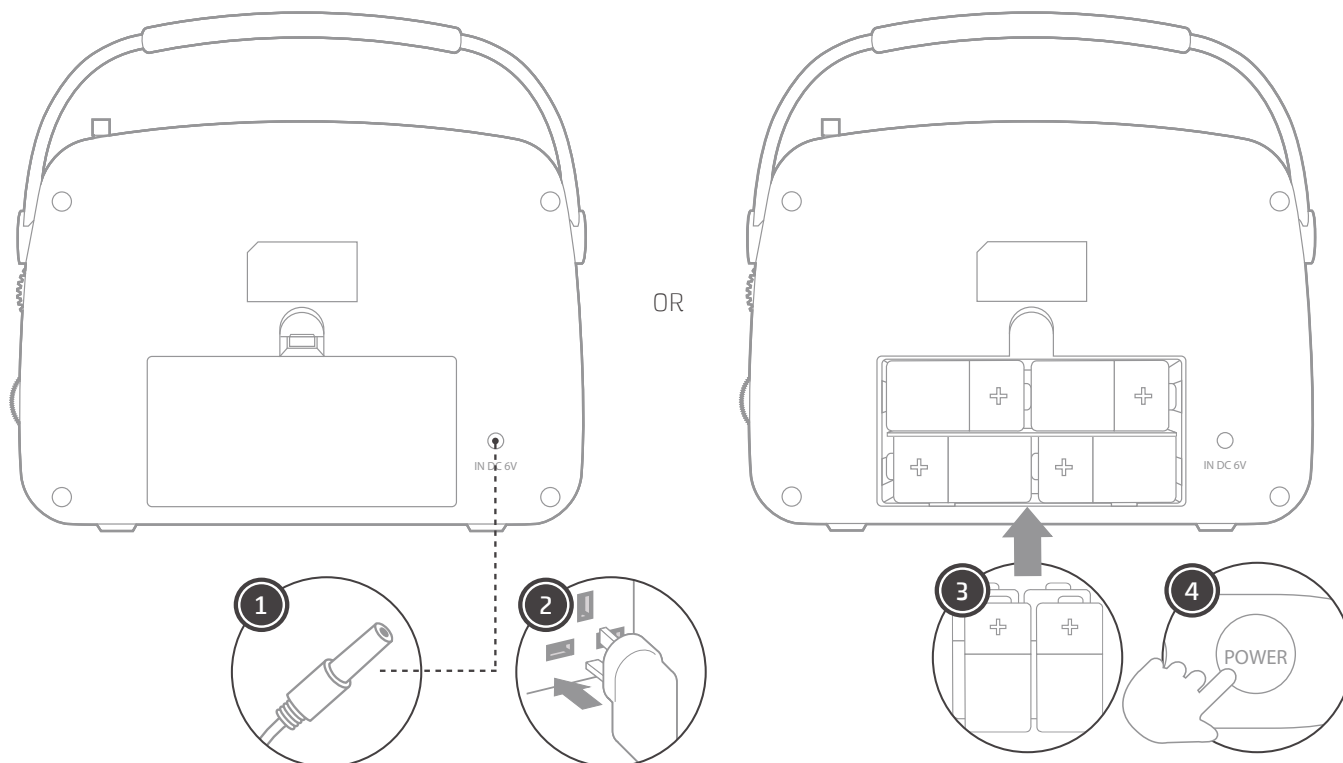

## 3.2 Playing Music Via Radio

  1. Fully extend the antenna while in FM mode.
2. Press the Power button to turn the radio on.
3. Press the Function button to select RADIO mode.
4. Press the Function button to switch to FM or AM.
5. Adjust the volume with the Volume Control.
6. Rotate the Tuning Dial to change the radio frequency.

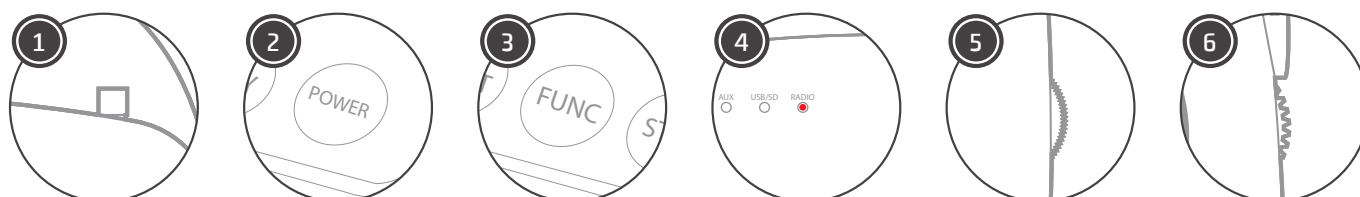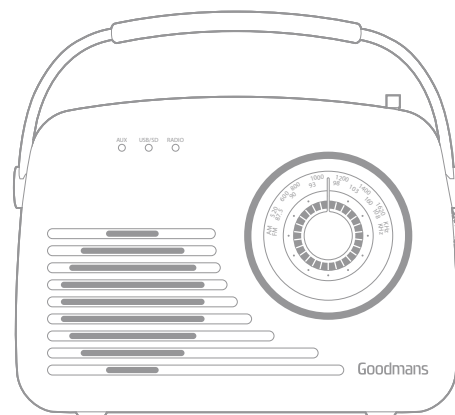

## 4 Features

### CONTROLS

#### 4.1 Function Buttons

1. Play/Pause: Press the play or pause playback.
2. Stop: Press the stop playback.
3. Prev: Press to skip to the previous song. Long press to rewind.
4. Next: Press to skip to the next song. Long press to fast forward.
5. Function: Press to change modes (USB/ SD, AUX and RADIO modes). In radio mode, press to change between FM and AM.



#### 4.2 Radio

1. Press the power button to turn the Radio on.
2. Press the function button to select RADIO mode.
3. When you have selected RADIO mode, press the function button to change between FM and AM.
4. Rotate the volume control dial to adjust the volume.
5. Rotate the tuning dial to adjust the radio frequency.
6. Extend the antenna to its full length when on FM mode.

 
#### 4.3 AUX-in

1. Connect an aux cable (not included) to the Aux-in jack of the Radio. Connect the other end to your external device.
2. Press the function button to select AUX mode.
3. Select and play songs from your external device. The sound will be played through the speakers of the radio.
4. Rotate the volume control dial to adjust the volume.



#### 4.4 USB/SD

1. Insert your USB or SD card into the corresponding port/slot on the Radio.
2. Press the function button to select USB/SD mode.
3. Use the buttons on the Radio to control playback.




#### 4.5 Standby

1. The Radio will switch to standby mode if it is left idle on the Aux or USB/SD modes for over 10 minutes.

## 5 Troubleshooting

| <b>Problem</b>                                   | <b>What to do</b>   |
|--|---|
| There is no sound from my radio                  | Check that the volume is not set to the minimum.<br>Make sure that the radio has been able to locate FM stations.   |
| Poor reception                                   | As with any radio service, there will be areas of weak signal that may cause poor reception. Follow the instructions for Manual Tuning on 4.2 and adjust the aerial while monitoring the signal strength until the optimum signal is obtained. If reception is still poor, try re-locating the radio to another part of the room. |
| Some of the buttons on the Radio are not working | This may be caused by electrostatic discharge. Turn the Radio off, disconnect the mains plug and reconnect after a few seconds.   |

## 6 Technical Specification

|                      |   |
|----------------------|---|
| Model Number         | 329176  |
| Power Supply         | 220-240V AC ~ 50 Hz<br>Adapter: DC 6V, 1000mA  |
| Speaker Output Power | 2W x 1  |
| Frequency Range      | FM: 87.5-108MHz   |

---

## 7 Customer Support

For all product support, please email:  
**[goodmans@bmstores.co.uk](mailto:goodmans@bmstores.co.uk)**