

ADDIS

Since 1780

OWNERS GUIDE

2200W STEAM IRON



Please read these instructions before use and retain for future reference.
FOR INDOOR USE ONLY. ADDIS helpline: 0800 515 300



Thank you for choosing the Steam Iron from ADDIS.

 
To get the best results from your steam iron, please read these instructions in full and keep them safe for future reference.

BEFORE OPERATING THIS APPLIANCE, PLEASE READ THESE INSTRUCTIONS CAREFULLY.

1 YEAR GUARANTEE

ADDIS Housewares Limited guarantees this product against all defects in materials or workmanship for a period of one year from the date of purchase. Valid proof of purchase is required. If you encounter a problem, please contact ADDIS directly on **0800 515 300**.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse, abuse or lack of reasonable care. NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

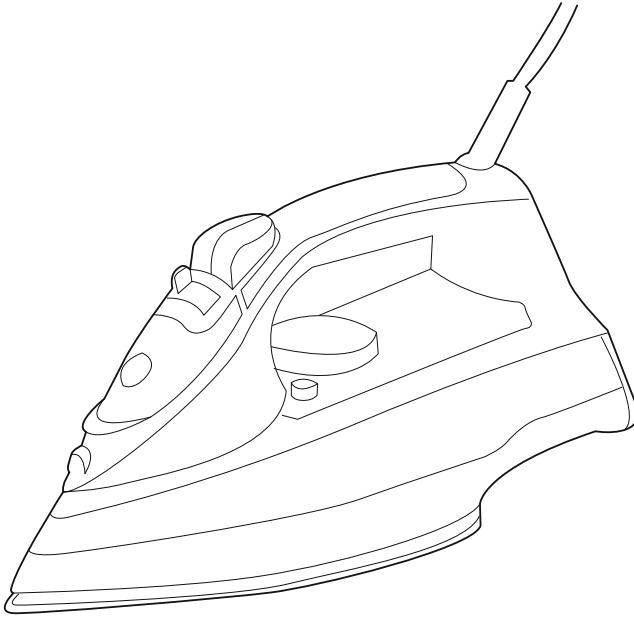

CONTENTS

SAFETY WARNINGS & ADVICE	3	CLEANING & CARE	7
YOUR STEAM IRON	4	TECHNICAL INFORMATION	8
USING THE STEAM IRON	5	Fuse & mains plug replacement	8
Functions	5	Technical specifications	8
Setting the Temperature	6	Disposal and the environment	8

 


SAFETY WARNINGS & ADVICE

Please read these instructions carefully before using the appliance.





- The iron must not be left unattended while it is connected to the supply mains.
- The iron must be used and rested on a flat, stable surface.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- Keep the iron and its cord out of reach of children less than 8 years of age when it is turned on or cooling down.
- Children must not play with the appliance.
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- When using steam ironing, you are recommended to use distilled water.
- Keep the iron upright when it is not in use.
- The plug must be removed from the socket outlet before the water tank is filled with water.
- Indoor use only.
- Do not immerse in any liquids.
- Avoid the following locations :
 - Where it is exposed to direct sunlight
 - Where it is close to heat radiating sources
 - Where the humidity is high and ventilation is poor
 - Where it is dusty
- This product has been designed and manufactured to meet European safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.
- Do read the operating instructions before you attempt to use the product.
- Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the instructions.
- Switch off and remove the mains plug or mains adapter when making or changing any connections.
- Do consult your dealer if you are ever in doubt about the installation, operation or safety of the product.
- Don't remove any fixed covers as this may expose you to dangerous voltages.
- Don't continue to operate the product if you are ever in doubt about it working normally, or if it is damaged in any way. Switch it off, withdraw the plug from the mains and consult your dealer.
- There are no user serviceable parts in the product. When servicing, refer to qualified service personnel.
- Don't leave the product switched on when it is unattended for long periods of time, unless it is specifically stated that it is designed for unattended operation or has standby mode.
- Don't obstruct the ventilation vents on the product, for example with curtains or soft furnishings, as this may cause overheating.
- Do not place the product in closed bookcases or racks without proper ventilation.
- Do not use the product in humid or damp conditions or allow it to be exposed to rain or moisture.
- Store the product in a clean, dry environment.
- The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on it.
- Position the power cable and other connected cables so that they are not likely to be walked on, pinched or where items can be placed on or against them.
- Never allow children to insert foreign objects into holes or slots on the product.
- No naked flame sources, such as lighted candles, should be placed on the product.
- Disconnect the product from the mains supply before cleaning.
- Do not use any liquids or aerosol cleaners, as this may damage the product. Use a soft, dust-free cloth.
- Contact local authorities for means of disposal.
- Make sure that other people in your household are conversant with operation of the product.

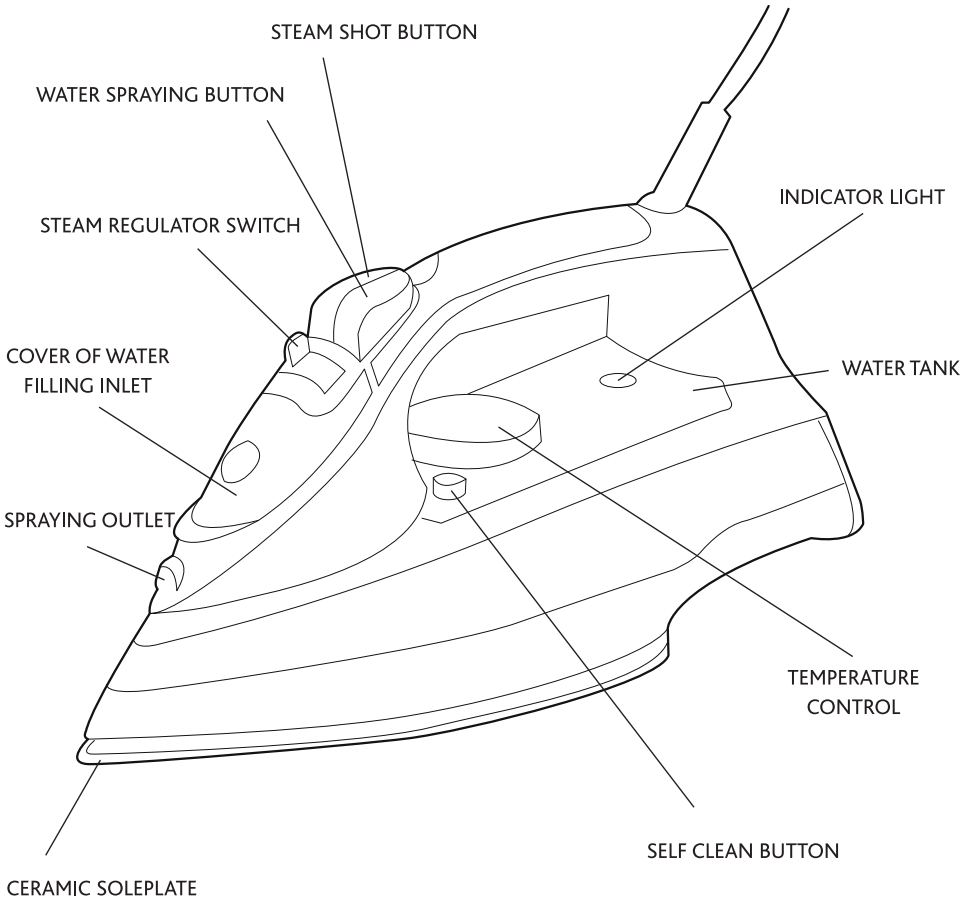YOUR STEAM IRON



  USING THE STEAM IRON

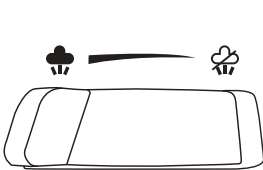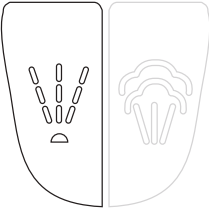






 

 
- Remove any stickers, protective foil or storage cover from the soleplate.
- Use the jug supplied to fill with water. Do not fill above the “max” mark.
- After filling the steam iron, ensure it is placed on a flat level surface that is stable.
- Plug the power cord into unobstructed wall socket and then switch on.
- Set the temperature dial on the iron to the correct temperature for the fabric that is to be ironed (as shown in the temperature guide) then switch on the steam iron.
- Ensure all switches are in the off position when you are finished the appliance.

Description of function	Image	To use
STEAM REGULATOR		Adjust the amount of steam produced when ironing. To iron without steam, set the steam regulator to the minimal position. <i>NOTE: At the lowest temperature, the soleplate is not hot enough to produce steam so the steam regulator should be set to the minimum position to avoid leaking from the soleplate.</i>
WATER SPRAY BUTTON		Can be used to remove stubborn creases. Press the spray button and water will spray out of the spray outlet onto the garment. <i>NOTE: do not use this function with silk as staining may occur.</i>
STEAM SHOT BUTTON		Can be used to remove stubborn creases or to press a sharp crease or pleats. Set the temperature control and steam regulator to the maximum position and then press the steam shot button repeatedly at intervals of 5 seconds. To remove creases from hanging clothes, curtains etc, hold the iron in an upright position approximately 15cm away from the garment. Press the steam shot button at intervals of 5 seconds. However after 4 jets of steam, wait for 10 seconds for continued steam production. WARNING: DO NOT VERTICAL STEAM WHILE ITEM IS BEING WORN.
SELF CLEAN BUTTON		When soleplate is heating up, press the self-clean button. The strong steam with some water will come out from the soleplate for self cleaning.

NOTE: Make sure there is water in the tank in order to iron with steam/spray.

IRONING TIPS - SETTING THE TEMPERATURE

The temperature control adjusts the temperature of the soleplate. Check the temperature instructions shown on the care label of the garment you are ironing and set the temperature control to the corresponding position by lining it up with the temperature control pointer on the iron:

Cloth material	Temperature setting	Marks in clothes	Preferable ironing method
Man-made cotton			Ironing the back of clothes without any water or cover a piece of cloth on the goods you want to iron
Synthetic fibre			
Silk			Dry ironing the back of the clothes
Wool			
Cotton			Normal ironing using steam and higher temperature settings
Linen			

- If you are unsure what type of material the garment is made from, start ironing on the lowest temperature setting and increase accordingly.
- If the garment is made from mixed fabrics, set the temperature for the most delicate material.
- For silk, woollen or synthetic materials iron the reverse side of the fabric to prevent shiny patches. Avoid using the spray function to prevent stains.
- Sort your garments based on their care labels, always starting with those that have to be ironed at the lowest temperature.
- The indicator light will stay lit while the iron is heating up and go out once the selected temperature has been reached. Wait a few seconds after the light goes out before you start ironing. Once the iron is ready, you can continue to iron even if the indicator light comes on again.



CLEANING & CARE

LIMESCALE

If you live in a particularly hard water area, we recommend using bottled or distilled water.

Warning: never pour vinegar or other liquid cleaners for eliminating calcium into water tank.

AFTER IRONING

Disconnect power supply, allow iron to cool completely and empty the water tank.

Wipe the body and the soleplate with a damp cloth or a non-abrasive (liquid) cleaner.

STORAGE

Always store the emptied iron horizontally on a stable surface.

 
TECHNICAL INFORMATION

FUSE & MAINS PLUG REPLACEMENT (UK & IRELAND ONLY)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only use those that are ASTA or BSI approved to BS 1362 and have a rated current of 13 amps.

TO CHANGE THE FUSE

1. Use a flat-head screwdriver to prise the cover off the fuse compartment.
2. Carefully remove the existing fuse.
3. Clip the new 13 amp fuse into place.
4. Clip the cover back firmly into place.

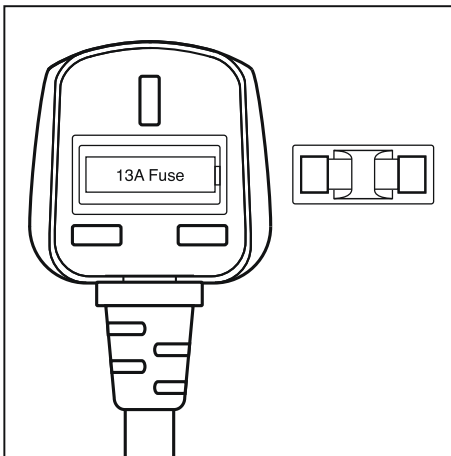

TECHNICAL SPECIFICATIONS

Description	Steam Iron
Model Number	333575
Power Supply	220-240V,
Rated Frequency	50Hz
Power	2200W
Water Tank Capacity	280ML

DISPOSAL AND THE ENVIRONMENT



This product is covered by the waste electrical and electronic equipment (WEEE) regulations. It should not be discarded with normal household waste, but taken to your local collection centre for recycling. For further information, please contact your local authority or approved disposal agency.

This product is intended for use within the UK

Declaration of Conformance

The full text of the EU declaration of conformity is available
at the following internet address:
www.bmstores.co.uk/technical-information



ADDIS Housewares Limited

Zone 3, Waterton Point, Brocastle Avenue,
Waterton Industrial Estate,
Bridgend, CF31 3US.

Helpline: 0800 515 300

www.addis.co.uk