 


BLUETOOTH TURNTABLE

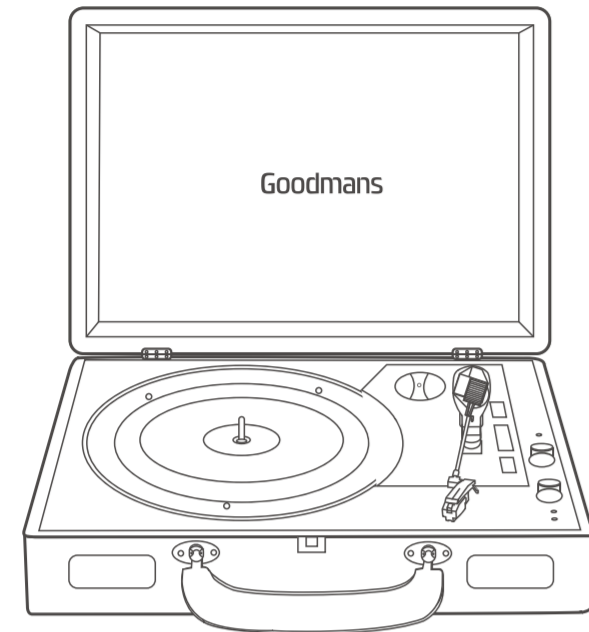

MODEL: 335232

USER MANUAL



Goodmans

1 Welcome

2 Your Bluetooth Turntable

- 2.1 In The Box
- 2.2 Front View
- 2.3 Back View

3 Quick Setup

- 3.1 AC Power Operation
- 3.2 Bluetooth Operation
- 3.3 Line in Operation
- 3.4 Line Out
- 3.5 Headphone Out
- 3.6 Playing a Record

4 Troubleshooting

5 Technical Specifications

6 Customer Support

1 Welcome

Thank you for choosing this Goodmans product. We've been making electrical products for the British people for over 90 years. Each of our projects have been carefully designed to be great at what they do and this one is no exception. We hope you enjoy your new Bluetooth turntable.

2 Your Bluetooth Turntable

2.1 In The Box

Carefully remove your Bluetooth turntable from the box.

 
Inside the box you will find:

- 1 x Main unit
- 1 x AC adaptor
- 1 x Instruction Manual
- 1 x Line in cable
- 1 x QSG Manual
- 1 x Guarantee & Safety Manual

If any of these items are missing, please email: Goodmans@bmstores.co.uk


2.2 Front View

- A Turntable lid**
- B Lock catch**
- C Tone arm lift**
- D Speed selection**
3 speed choices: 33 , 45 , 78 rpm.
- E Line in port**
Used to connect the turntable to devices without bluetooth.
- F Function control**
Turn the control to select BT / Line In / Phono.
- G Power switch / Volume control**
Turn the control anti-clockwise to decrease the volume and power off. Turn the control clockwise to increase the volume.
- H Headphone output**
Insert a 3.5mm headphone jack to listen to music via your headphones.
- I Auto stop ON / OFF**
- J Speaker**
- K Cartridge**
- L Turntable platter**
- M Carrying handle**
- N 45 RPM adaptor**

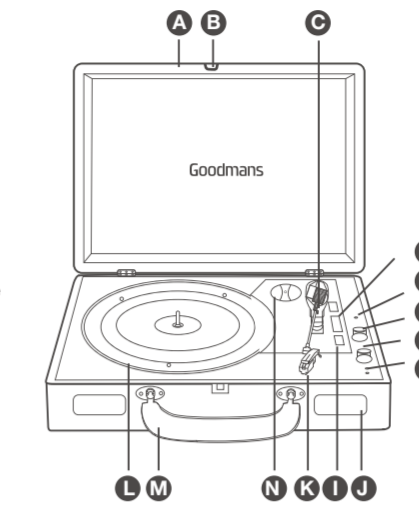

2.2 Back View

 
- O Line out**
Use to connect the turntable audio output to active external speakers.
- P DC-in socket**
Used to connect the turntable speaker to the mains power supply.

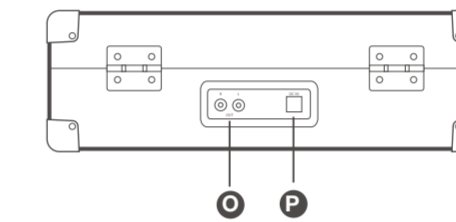

3 Quick Set Up


3.1 AC Power Operation :

 1. Insert the DC plug of the adaptor into the DC Jack on the back of the unit.
2. Plug the AC Adaptor plug into the mains outlet. Connecting this system to any other power source may cause damage to the system.

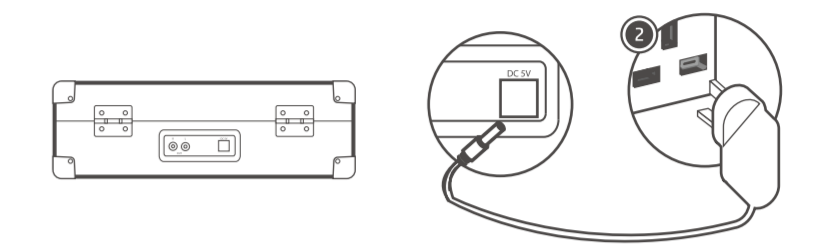

3.2 Bluetooth Operation :

 1. Turn the function control to the BT position, The blue indicator light will begin to flash.
2. Turn your devices Bluetooth setting on ,and search devices.
3. Select the Bluetooth pairing name "GOODMANS TURNTABLE "to connect to the record player
4. Once you are connected the blue indicator light will stop flashing ,you can now play music from your device through your record player ,use the volume control dial to adjust the volume

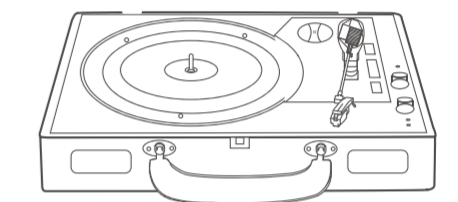


Note: After initial pairing the record player will stay paired to your device unless it is unpaired manually or the device is reset .

3.3 Line in Operation :

1. Use an audio cable with one 3.5mm stereo plug on each end of the cable .
2. Plug one end into the line-in jack on the main unit and plug the other end of the cable into the line-out of your external audio device.
3. Turn on the unit and your external audio device.
4. To select auxiliary audio input turn the function control to the line-in position.
5. The volume level can now be controlled through the main unit. Operate all other functions on the auxiliary device as normal.

3.4 Line Out

 
1. You can listen to your new turntable using the built in speakers but you may wish to connect it to your existing Hi Fi system. Connect the audio plugs to the line input on your mixer or amplifier using an RCA cable

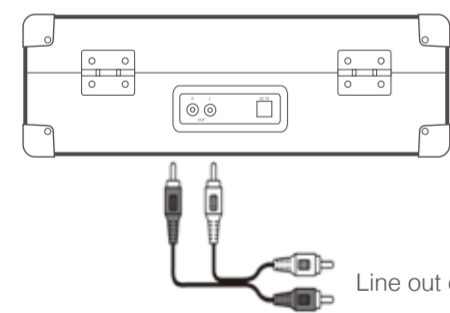

Line out cable not included


3.5 Headphone Out

 1. Use a wired earphone or headphone (not included) and insert the 3.5mm stereo plug in phone jack on the turntable.

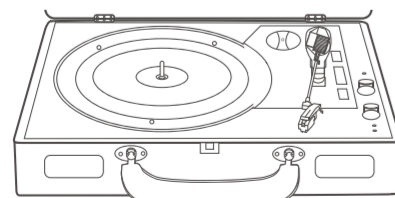

3.6 Playing a Record

 1. Carefully holding the vinyl record by the edges, place the record on the turntable platter.
2. Turn on the power and select Phono mode.
3. Select the correct speed for the record that you want to play.
4. Release the tone arm lock.
5. Carefully raise the tone arm. The turntable will start to rotate.
6. Place the stylus over the first track of the record.
7. Put down the stylus slowly on to the record to play.
8. When a record reaches the end, the turntable will stop automatically if the auto-stop switch is in the ON position.
9. Lift up to the tone arm and put it on the rest when finished. and replace the tone arm lock.

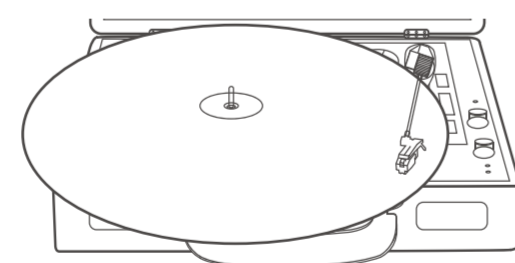

4 Troubleshooting

Problem	What to do
Power does not come on when the unit is switched on.	Plug the AC adaptor into a wall outlet.
No sound comes out of the speakers.	Adjust the volume. Re-select the desired input source using the mode button
The unit does not respond.	Remove the power cord and all other power supplies from the device, and then plug in the unit again after one minute.
The sound is distorted when playing the record.	Place the stylus in the centre.
Unit gets warm after extended play at high volume.	Turn the unit off a period of time or lower volume.

5 Technical Specifications

Model number	335232
Power supply	5V 1000mA
Bluetooth version	BK 4.1
Input	AC 100-240V ~50/60HZ
Speaker driver	40x70mm 4OHM 3W x2
Output power	2 x 1.0 W RMS
Dimensions	H130 x W350 x D280 mm
Weight	2800g

6 Customer Support

For all product support, please email: Goodmans@bmstores.co.uk

This Product is intended for use within the UK

Declaration of Conformance
The full test of the EU declaration of Conformity is available at the following Internet address:
<http://www.bmstores.co.uk/technical-information>

is a trademark on a registered trademark of Bluetooth SIG Inc.

Goodmans