

PROLEX

2 SLICE TOASTER

340724



Please read these instructions thoroughly before use and retain for future reference.

Instructions for Use

Please read all instructions carefully & retain for future references, if you pass this toaster to another person ensure that you also pass the instructions.

Getting Started

Remove the toaster from the box

Remove any packaging from the product

Place the packaging inside the box and store for safekeeping

In The Box

2 slice toaster

Instruction manual

Safety Instructions

- This product has been designed and manufactured to meet European safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.
- Do read the operating instructions before you attempt to use this product.
- Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the instructions.
- Switch off and remove the mains plug or mains adaptor when making or changing any connections.
- Do consult your dealer if you are ever in doubt about the installation, operation or safety of your product.
- Don't remove any fixed covers as this may expose you to dangerous voltages.
- Don't continue to operate the product if you are ever in doubt about it working normally, or if it is damaged in any way. Switch it off, withdraw the plug from the mains and consult your dealer.
- There are no user serviceable parts in the product. When servicing, refer to qualified service personnel.
- Don't leave the product switched on when it is left unattended for long periods of time, unless it is specifically stated that it is designed for unattended operation or has standby mode.
- Don't obstruct the ventilation vents on the product, for example with curtains or soft furnishings, as this may cause overheating.
- Don't place the product in closed bookcases or racks without proper ventilation.
- Don't use the product in humid or damp conditions or allow it to be exposed to rain or moisture.
- Store the product in a clean, dry environment.
- The product should not be exposed to dripping or splashing and no objects filled with liquids such as vases shall be placed on it.
- Position the power cable and other connected cables so that they are not likely to be walked on, pinched or where items can be placed on or against them.
- Never allow children to insert foreign objects into holes or slots on the product.
- No naked flame sources, such as lighted candles, should be placed on the product.
- Disconnect the product from the mains supply before cleaning.
- Don't use any liquids or aerosol cleaners, as this may damage the product. Use a soft, dust free cloth.
- Contact local authorities for means of disposal.
- Make sure that other people in your household are conversant with operation of the product.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities of lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understands the hazards involved.
- Children should not play with the appliance. Cleaning and user maintenance should not be carried out by children unless they are older than 8 and supervised.
- Keep the appliance cord out of reach of children.
- Do not immerse the appliance or cord in water.
- Always use the appliance in an upright position on a dry, level surface.
- Do not use this appliance outdoors.
- Always unplug from the socket when not in use and before cleaning.
- Do not operate the appliance if it is damaged or malfunctions.
- Route the cable so it doesn't overhang and can't be tripped over or caught.
- Don't let the cord touch hot surfaces.
- Do not place this appliance on or near a hot gas or electric burner, in or where it could touch a heated oven, or a microwave oven.
- Bread may burn. Do not use the appliance near or below combustible materials.
- This appliance is intended to be used in households and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - Farm houses.
 - By clients in hotels, motels and other residential type environments.
 - Bed and breakfast type environments.
- Do not use this appliance with any food stuff product containing sugar content or with products containing jam or preserves.
- When toasting a single slice, the bread may be –placed in any toasting slot.
- Do not change the variable browning control during the toasting. First press the cancel button then turn the variable browning control to adjust the level.
- Do not insert fork or other utensils into the appliance in order to remove bread as this may damage the appliance and there is a high risk of electric shock.
- Should toast remain blocked in the appliance, remove plug from the power outlet, wait for it to cool down then turn the appliance over and shake it gently.
- Never use the appliance unsupervised. Switch off the appliance whenever you are not using it, even if this is only for a moment.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Ensure that the voltage of the socket that you plug into corresponds with the voltage displayed on the rating plate of the appliance.
- Do not cover the appliance or put anything on top of the toasting slot.
- Do not use harsh abrasives, caustic cleaners or oven cleaners when using this appliance.
- Clean the crumb tray regularly as crumbs can smoke or burn.
- Do not store the appliance until it has fully cooled down.



CAUTION HOT SURFACE! DO NOT TOUCH HOT SURFACES WHEN USING THIS APPLIANCE.

Description of Parts



1. Operating Lever
2. Variable browning control
3. Removable crumb tray (under the base)
4. Cancel button

Instructions for Use

- Plug the toaster into a suitable outlet.
- Turn the variable browning control to the required setting: 1 being the lightest to 7 being the darkest setting.
- Place bread into toasting slots.
- Press the operating lever down fully until it locks in place. The red cancel indicator will illuminate to show that toasting has begun.
- When the bread reaches the selected browning level, it will pop up automatically.
- To stop toasting at any time, press the cancel button.
- Carefully remove toast out of the toasting slot(s).
- Unplug from the power outlet when not in use.

Cleaning and Maintenance

Before cleaning switch off the toaster, unplug from power outlet and allow it to cool completely.

- Clean the exterior surface of the toaster with a soft damp cloth, do not use steel wool pads or harsh/abrasive cleaners.
- Slide the crumb tray out as the bottom of the toaster. Dispose the crumbs and wash the tray in hot, soapy water. Always dry thoroughly before placing it back into the toaster.

Technical Data

Model number	340724
Power supply	220-240V 50-60HZ
Power	700W

This appliance complies with the below listed EU Directives

2014/30/ EU Electromagnetic Compatibility Directive
2014/35/ EU Low Voltage Directive
2011/65/ EU Restriction of Hazardous Substances
1935/2004/EC Materials & Articles in Contact with Food
(LFGB sections 30&31)

The complete declaration of conformity is available upon request for relevant enquiries

UK Plug Wiring Instruction

The wires in the mains lead are coloured in accordance with the following code:


BROWN	:	LIVE (L)
BLUE	:	NEUTRAL (N)
GREEN/YELLOW	:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, as follows:

- The BLUE wire is the NEUTRAL and must be connected to the terminal which is marked with the letter N or coloured BLACK.
- The BROWN wire is the LIVE and must be connected to the terminal that is marked with the letter L or coloured RED.
- The wire which is coloured GREEN/YELLOW must be connected to the terminal which is marked E or the earth symbol \perp or coloured GREEN or GREEN/YELLOW.
- Always ensure that the cord grip is positioned and securely fastened.
-

WARNING: THIS APPLIANCE MUST BE EARTHED.

If a 13A (BS1363) fused plug is used it must be fitted with a BS1362 13A fuse. If in doubt consult a qualified electrician.

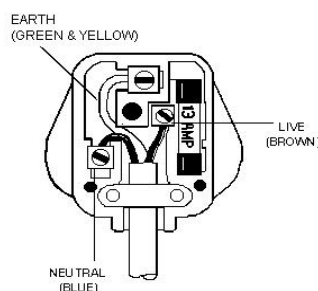

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).

Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.



B&M L24 8RJ

B&M Retail Limited, Dakota Drive L24 8RJ, UK
Centz Stores 7 Limited,
5 Old Dublin Rd, Dublin A94 K1H5, Ireland



Guarantee

This product is guaranteed for twelve months from the date of original purchase.

If any defect should occur due to faulty materials or workmanship, the unit will either be replaced or refunded at our discretion.

You will need to have your receipt or proof of purchase.

The following conditions apply:

- The product must be returned to the retailer with original proof of purchase.
- It is only valid in the UK.
- It does not cover wear and tear, damage, misuse or consumable parts.
- The product must be correctly installed and operated in accordance with the instructions contained in the instruction manual.
- The product must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.