 


单页尺寸: 100*140mm
颜色: 4c4948 (85%黑)

GETTING STARTED:

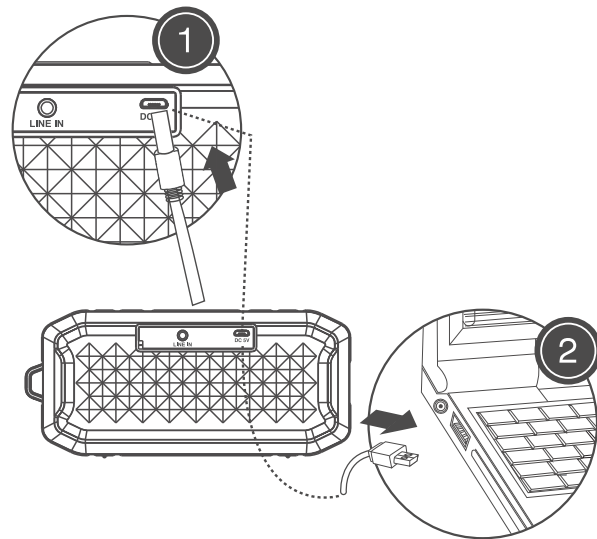

Connect the micro USB charging cable provided to the USB port on your Bluetooth waterproof speaker. Connect the other end of the USB charging cable to a USB port on your computer, or a 5V 1A USB wall charger. A wall charger is not provided with this product.

Waterproof Speaker
MODEL: 359732

Goodmans Waterproof Speaker



THANK YOU

Thank you for choosing a Goodmans product. We've been making electrical products for the British people for over 90 years. Each of our products has been carefully designed to be great at what it does and this one is no exception. We hope you enjoy your waterproof speaker.

Please read the Guarantee & Safety booklet before starting.


IN THE BOX




Waterproof Speaker



Charge & Line in Cable

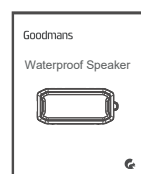


Quick Start Guide

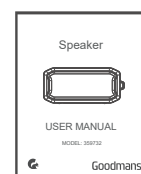

Manual



Safety booklet

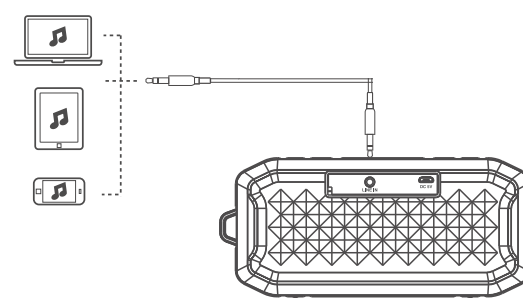


CONNECT WATERPROOF SPEAKER LINE IN CABLE

- Connect one end of the 3.5mm line in cable to the side of the waterproof speaker and the other end to your device.
- Adjust volume to the desired level!

DID YOU KNOW?

You can play music from a Bluetooth enabled device

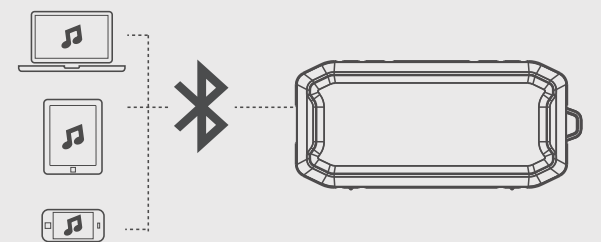

- Press and hold the ON/OFF button for 3 seconds until blue LED flashes and hear "bluetooth mode, pairing" prompt tone.
- Connect to the waterproof speaker by switching on Bluetooth on your device and select < GOODMANS WATERPROOF SPKR > from the list, you will hear "connected" when the devices are paired.
- Use the music app on your smartphone or bluetooth device to playback the music and control the volume.