


TRUE WIRELESS EARPHONES

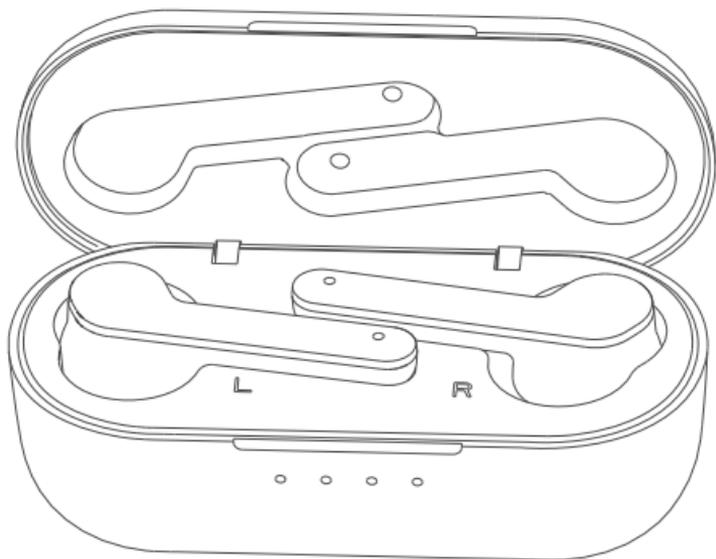

MODEL: 364431

USER MANUAL



Goodmans



1 Welcome

2 Your True Wireless Earphones

2.1 In the Box

2.2 Front View

2.3 Back View

3 Quick Setup

3.1 Charging Your True Wireless Earphones

3.2 Pairing With a Bluetooth device

3.3 Playing Your Music

4 Troubleshooting

5 Technical Specifications

6 EC Declaration



1 Welcome

Thank you for choosing this Goodmans product. We've been making electrical products for the British people for over 90 years. Each of our products have been carefully designed to be great at what they do and this one is no exception. We hope you enjoy your new True Wireless Earphones.

2 Your True Wireless Earphones



2.1 In the Box

Carefully remove your True Wireless Earphones from the box. Inside the box you will find:


- 1 x True Wireless Earphones
- 1 x Micro USB cable
- S/M/L Silica Gel
- Quick Start Guide
- Instruction Manual
- Safety & Guarantee Leaflet



2.2 Front view

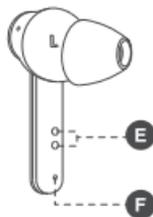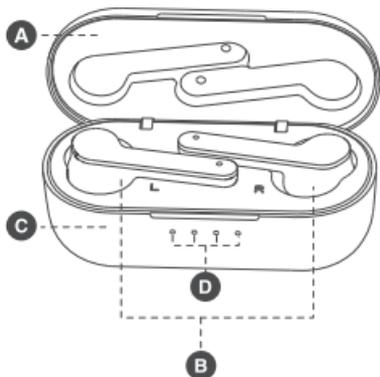

- A** Charging Case Cover
- B** True Wireless Earphones
- C** Charging Case
- D** Charging Indicator LED Light
- E** Charging Touch Spot
- F** Mic
- G** Touch Button

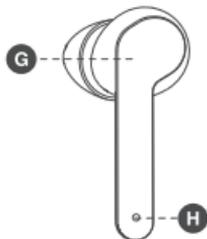


Touch for 2 seconds to turn the earphones on.
Touch once to play/pause/answer/end a phone call.
Touch once again to refuse call or to skip to the next track.
When the earphones are on, touch for 2 seconds to activate voice assistant.
Touch for 5 seconds to turn the earphones off.

- H** Earphones Charging Indicator Light



2.3 Back View

- I** Micro USB Charging Port
- J** Micro USB Connector
- K** USB Cable
- L** USB Connector

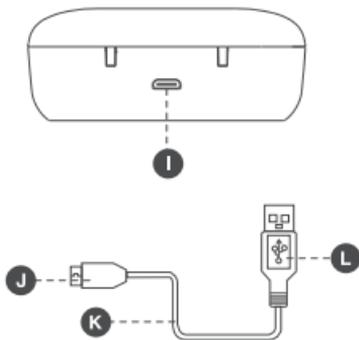




3 Quick Setup

3.1 Charging Your True Wireless Earphones

1. Your True Wireless Earphones have a built in rechargeable battery so they can be used anywhere. Before using them for the first time, please fully charge your earphones and case.
2. Keep the True Wireless Earphones in the charging case.
3. Connect the Micro USB cable to the Micro USB charging port on the back of charging case.
4. Connect the other end of the USB cable to a USB port on your computer, or a 5V 1A USB wall charger (not included). When your True Wireless Earphones and charging case is charging the LED indicator light will flash.

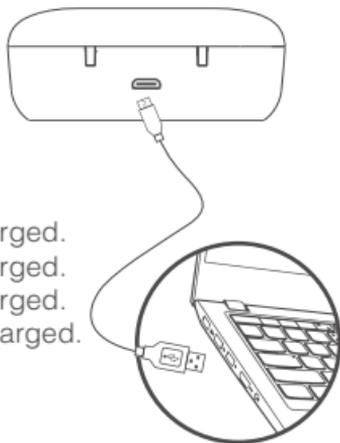


- 1 LED light flashing: 10% - 25% charged.
- 2 LED light flashing: 25% - 50% charged.
- 3 LED light flashing: 50% - 75% charged.
- 4 LED light flashing: 75% - 100% charged.

Note: When the battery is getting low, the low battery warning alert will sound, when you hear this, please recharge the battery.



3.2 Pairing With a Bluetooth Device

1. Take both earphones out of the charging case. The indicator lights on both earphones will flash red and white. When the earphones have both connected successfully, the indicator light will continue to flash red and white on one earphone and the other will flash white. You will also hear a voice prompt "connected".
2. Enable Bluetooth on your smartphone and search for Bluetooth connection. Select "GOODMANS WIRELESS" from the list of devices. If you are asked for a pass code enter "0000".
3. When successfully paired, you will hear voice prompt.
4. Once you have paired the True Wireless Earphones with a smartphone, the True Wireless Earphones will remember this device and will pair automatically when the device's Bluetooth is activated and in range, you do not need to re-pair any previously connected devices.
5. The True Wireless Earphone will attempt to automatically connect to the last device it was paired with if Bluetooth mode is turned on, if you want to pair it with a new device, please turn off your last Bluetooth device and then use your new device to search and select the pairing name.

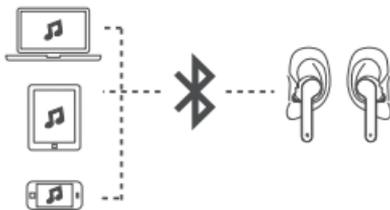

3.3 Playing Your Music

When your smartphone or device is paired to the True Wireless Earphones, use your music App to playback your music and control the volume.



4 Troubleshooting

Problem	What to do
Can't find the earphones on the Bluetooth connections list on your smartphone or device.	Delete all Bluetooth pairing names stored on your device, and search again.
The left and right earphones will not connect.	Take both earphones out of the charging case and turn on at the same time. Ensure the L&R earphones is within the connection range (10M). Check the earphones are not connected to another Bluetooth device.
The sound is distorted or the Bluetooth keeps disconnecting.	Please make sure there is nothing blocking the Bluetooth connection such as walls. This will affect the connection between your device and the earphones. Please make sure the distance between your Bluetooth device and the earphone is less than 10 metres. The left and right earphones are not connected. Please turn off both earphones and turn back on at the same time until you hear the "connected" prompt.



5 Technical Specifications

Model Number	364431
Bluetooth Specification	V5.0
Operating Distance	10 metres(max)
Frequency Response	20Hz - 20KHz
Input	DC 5.0V / 1.0A
Output	DC 5.0V / 0.1A
Built-in Battery	3.7V / 300mAh (Charging case) 3.7V / 50mAh (Single earphone)
Dimensions	75mm(L) x 38mm(W) x 34mm(H)
Weight	50 g



6 EC Declaration

This product is intended for use within the UK.

This appliance complies with the below listed EU directives.

2014/53/EU Radio Equipment Directive

2011/65/EU Restriction of Hazardous Substances Directive

2013/56/EU Battery & Accumulators

The complete declaration of conformity is available upon request for relevant Enquiries.

 **Bluetooth**® is a trademark on a registered trademark of Bluetooth SIG Inc.

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment



This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).

 Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment of any hazardous materials that the waste may contain.



Made in China

Imported by B&M Retail Ltd, Dakota Drive, Liverpool, L24 8RJ, UK

Goodmans