

145mm

145mm 20/10/7

210mm



Model Number 370510

Owner's Manual



Enjoy it.

Portable Fridge



IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed including the following:

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Cleaning and user maintenance should not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way.
- Never immerse the appliance in water or any other liquid.
- Remove the plug from the socket by gripping the plug. Do not pull the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
- The use of accessory attachments is not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of the table or counter. Ensure that the cord is not in a position where it can be pulled.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of extension cord with this appliance is not recommended.
- Do not use the appliance for anything other than its intended use.
- Always unplug the appliance when not in use or before cleaning.
- Always operate the appliance on an even, stable surface.
- Do not obstruct the fan grill at the rear of the appliance – ensure adequate ventilation on all sides.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- Your appliance must not be switched on through an external timer or any kind of separate remote control system.
- Do not position the appliance in direct sunlight or any sources of heat, do not operate for extended periods in confined, poorly ventilated areas.
- Car use: When using in a car the appliance should be kept upright at all times. Also ensure that it is placed in a safe area in the vehicle i.e. not placed on a seat during a journey as this may cause a hazard during sudden breaking etc.
- Be aware that if this unit is kept operating on a vehicle battery when the engine is not running for more than a few hours, you may have difficulty starting your engine.
- You should not operate this appliance in an enclosed boot space as there may be a build-up of heat. Also ensure that any vents are not obstructed if the appliance is packed amongst items of luggage.



Information on Waste Disposal for Consumers of Electrical & Electronic Equipment

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. For proper treatment, recovery and recycling, please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge. If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.



Imported by
B&M Retail Ltd,
L24 8RJ

Your statutory rights are not affected.
Made in China.
All brand names are registered trademarks of their respective owners.

Enjoy it.



TECHNICAL SPECIFICATION

Model Number 370510

Power Supply
MAX Input Power: AC 35-42W/DC 32-35W
Voltage: AC 220-240V / DC 12V
Temperature range:

	Ambient 10°C	Ambient 25°C	Ambient 32°C
Cooling (°C)	-3 °C ± 3 °C	5 °C ± 3 °C	15 °C ± 3 °C
Heating (°C)	50 °C ± 3 °C	55 °C ± 3 °C	55 °C ± 3 °C

This appliance complies with the below listed EU Directives

2014/30/ EU Electromagnetic Compatibility Directive
2014/35/ EU Low Voltage Directive
2011/65/ EU Restriction of Hazardous Substances
1935/2004/EC Materials & Articles in Contact with Food (LFGB sections 30&31)
The complete declaration of conformity is available upon request for relevant enquiries


GUARANTEE

This product is guaranteed for twelve months from the date of original purchase. If any defect should occur due to faulty materials or workmanship, please return it to the store it was purchased from. You will need to have your receipt of purchase to hand. The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in the User Manual.
- The product must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.



YOUR PORTABLE FRIDGE

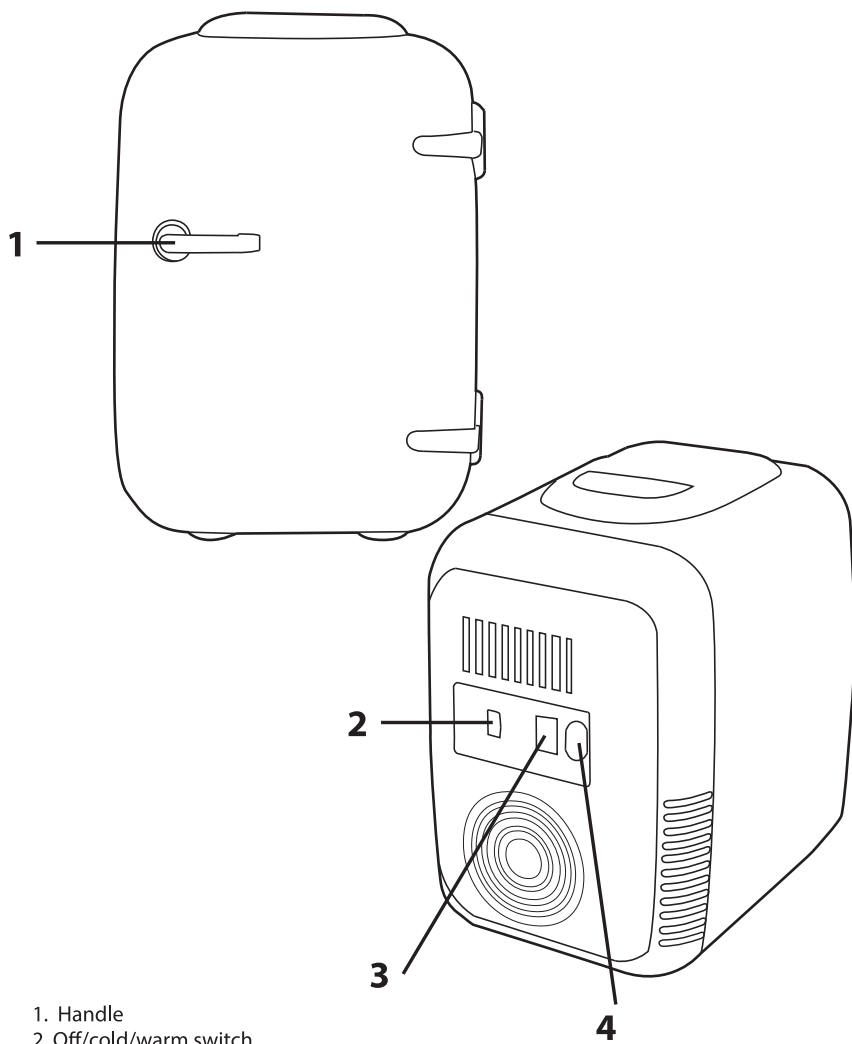

1. Handle
2. Off/cold/warm switch
3. DC car port
4. AC mains port



USING YOUR PORTABLE FRIDGE

Remove all packaging materials including those that may be inside the fridge.

Before plugging in the fridge, make sure the switch on the back is set to the OFF position.

There are two power inlet connections; one for the DC car adaptor and one for the AC mains lead.

NOTE: When using in the car, turn the car on before plugging in the fridge to avoid a power surge that could result in overheating.

Insert the 12V car adaptor or mains lead into the fridge.

The switch has three functions:

- Up for COLD. The light will illuminate green.
- Middle to turn OFF
- Down for WARM. The light will illuminate red.

Ensure that the switch is in the correct position.

For the most efficient operation, items placed in the fridge should be pre-chilled and the door should not be opened for longer than necessary.

When using as a food warmer, set the operating mode to Warm. This fridge is not designed to heat food from cold, only keep food warm which is already hot. Do not use this fridge to heat up food, it will take too long and may cause the possibility of food poisoning. Food should also not be kept warm in this unit for more than 2 hours.

CLEANING & MAINTENANCE

Before cleaning, switch off the fridge, unplug from the power outlet and allow it to cool completely if it has been set to WARM function.

- Clean the fridge with a damp cloth with a mild detergent and then polish with a soft dry cloth.
- Do not use steel wool pads or harsh/abrasive cleaners.



ELECTRICAL INFORMATION

(Power adapters only)

Never open the power adapter, you risk getting an electric shock. Only use the power adapter that is supplied with your product. You must always connect the power adapter to the product before connecting to the mains power supply. The power adapter must be used indoors only, and must not be subjected to damp conditions. The power adapter does not have any user serviceable parts.

2-CORE PLUG

WARNING: Do not connect either wire to the earth terminal. This symbol indicates that this 2-core appliance is Class II and does not require an earth connection. The wire coloured blue must be connected to the terminal marked with the letter N or coloured black. The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

Live (Brown)
Neutral (Blue)

3-CORE PLUG

WARNING: This appliance must be earthed. The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol, or coloured green or green and yellow. The wire coloured blue must be connected to the terminal marked with the letter N or coloured black. The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

Earth (Green & Yellow)
Neutral (Blue)
Live (Brown)