




EVEREADY®

PORTABLE AIR PUMP
ITEM CODE: 385395
Assembly Instructions

Read the following instruction and warnings before use!

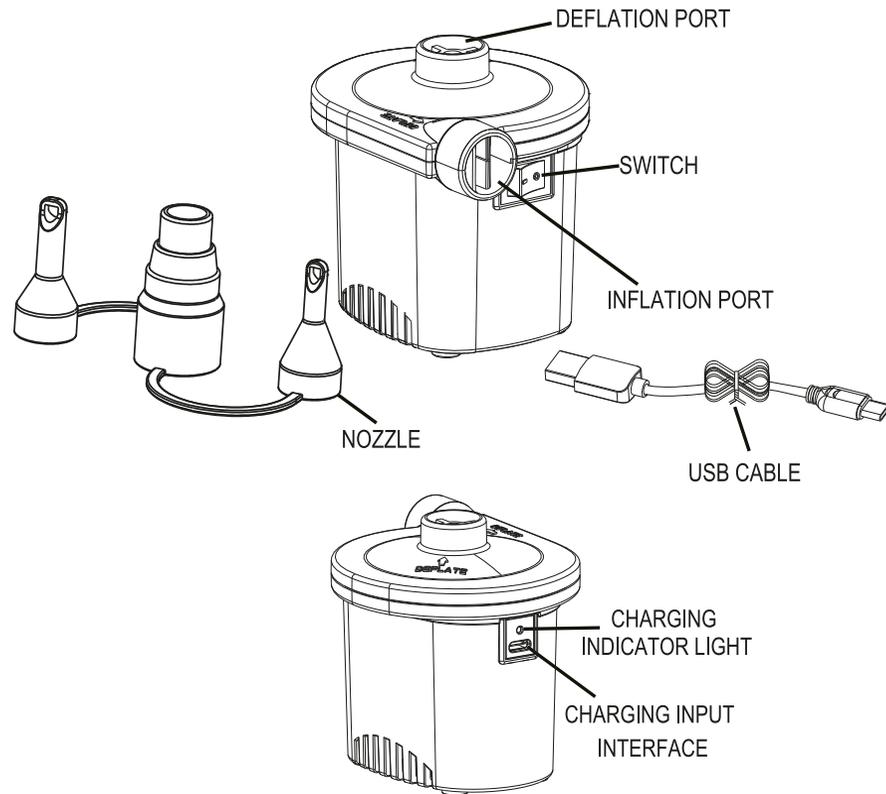

1. IMPORTANT

- This pump is suitable for the inflatable items such as inflatable beds, inflatable cushions and swimming rings.
- Keep the pump out of reach of children.
- Do not block the inflation and deflation ports.
- This product should not be used during charging. Please make sure the switch is at "o" position when charging.
- Do not operate the air pump continuously for more than 10 minutes. The motor may overheat and cause damage. After the pump has been working continuously for 10 minutes, allow the pump to cool down for 30 minutes.
- Do not dispose of air pump and its batteries in fire. Check your local regulations for proper disposal instructions.

2. WARNING


- Regularly examine the pump and USB cable for damage. If any damage is found, do not use until the damage has been repaired by a qualified person.
- **WARNING:** This is not a toy. Keep out of reach of children. The pump should only be operated and charged by an adult.
- This device is not intended for persons who have physical, sensory or mental disabilities, or who lack experience and knowledge, unless they are monitored during the operation of this device to ensure their safety.
- Never leave the pump unattended when in use.
- Do not operate this pump in wet, hot, damp or excessively humid condition. Do not expose to direct heat, flames or submerge in water. For indoor use only.
- Keep sand, small stones and other foreign objects away from the inflation port or deflation port when in use.
- Never look into the inflation port/deflation port or face it when using it.
- Do not attempt to put your hand or fingers into the inflation port and the deflation port.

When using this cable basic safety precautions should be followed, including the following:

- This cable contains no user serviceable parts. If the cable and any associated devices are malfunctioning or it has been dropped or damaged, only a qualified person should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the cable away from heat sources, direct sunlight, humidity, water and any other liquid.
- Keep the cable, its connections and any ports intended to connect free from dust, lint etc.
- Never force a connection into a port, check for obstructions in the cable and port.
- Do not operate the cable in water or any other liquid.
- Do not operate the cable with wet hands.
- Do not operate the cable if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the cable.
- Do not use the cable for anything other than its intended use.
- Do not store the cable in direct sunlight or in high humidity conditions.
- Do not expose to extreme temperatures of hot or cold. For example, do not leave in a parked car where it could get very cold in winter or very hot in summer.
- Do not put objects into any of the openings.
- Do not short-circuit.
- Do not stack up with other electrical or electronic cables to avoid overheating.
- Do not overload or overcharge the cable.
- This cable is intended for domestic use only. It should not be used for commercial purposes.
- This cable is not suitable for charging high drain devices such as laptops or tablets.
- Use only with the product this cable was supplied with.
- Do not leave unattended whilst connected to a device.
- The cable should only be used on a flat, stable, heat resistant surface.
- Do not store the charging cable in a kinked or twisted manner. Regularly check its condition for damage before use.
- Do not pull, twist or strain the cable.
- The cable should be unobstructed when in use. Do not place items on the cable.
- When connecting and disconnecting from devices, remove gently using the solid plastic head at either end of the cable. Do not pull on the cable or flex as this can cause damage.
- Do not use the cable if it or any connected devices are damaged. Discontinue use immediately.
- This is not a toy. Keep away from babies and children.


3. CHARGING INSTRUCTIONS

- Only charge with the USB cable supplied with this product. Failure to do so may result in damage to product /property. Please make sure to use a 5V USB interface for charging.
- When charging the battery, indicator light shows red colour. The indicator light changes to green after charging is completed.
- Charging time is about 3 hours. Never leave the product on charge for more than 3 hours.
- Never charge the product near to combustible materials or in damp conditions.
- Do not charge the battery directly after use. Allow the battery to cool down before charging. Never charge the product near to other heat sources or in direct sun light to avoid overheating of the battery.
- The pump should be fully charged at least once every six months.
- This pump contains batteries that are non-replaceable. The battery must be removed from the appliance before it is scrapped. The pump must be disconnected from the supply charger when removing the battery. The battery should be disposed safely.

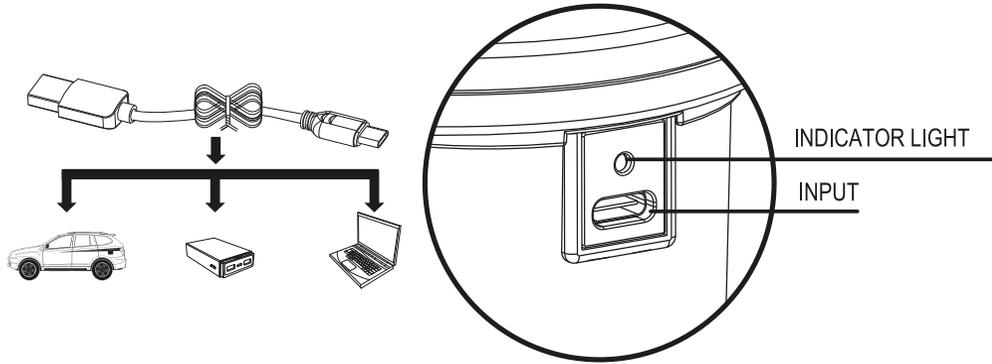


4. TO INFLATE ITEMS

- Apply nozzle to the inflation port of the pump. The appropriate air nozzle should be selected according to the size of the valve on the inflatable item.
- Connect the pump to the valve of the inflatable item. Turn the switch to "-" to start inflating. Turn the switch to "o" to turn off the pump when finished.
- The valve of the inflatable item should not be obstructed, otherwise, the motor could overheat and damage the pump.

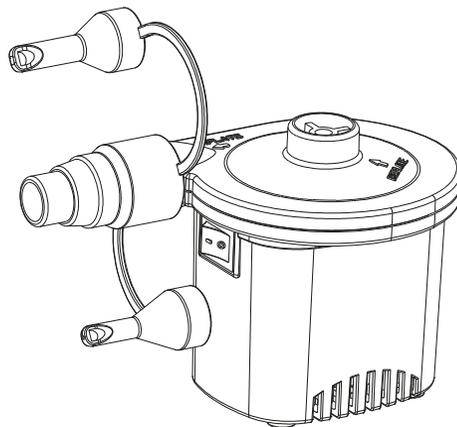

5. TO DEFLATE ITEMS

- Open the valve of the inflatable item.
- Apply nozzle to deflation port of the pump. The appropriate air nozzle should be selected according to the size of the valve on the inflatable item.
- Connect the pump to the valve of the inflatable item. Turn the switch to "-" to start deflating. Turn the switch to "o" to turn off the pump when finished.
- The valve of the inflatable item should not be obstructed, otherwise, the motor could overheat and damage the pump.

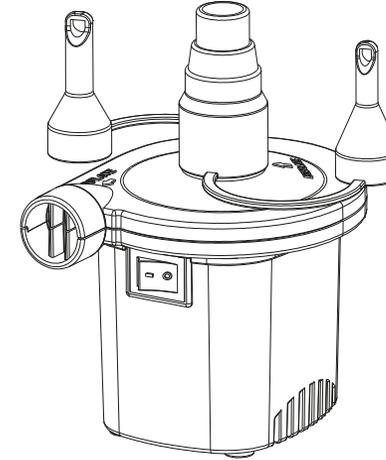

6. MAINTENANCE AND STORAGE

- Unplug the USB cable before cleaning. Surface wipe only. Never submerge the pump in water or other cleaning solution.
- Always make sure the pump is completely cool before storing it in the box.
- Store it in a dry, well ventilated place. Do not store under direct sunlight.
- Retain this instruction manual for future reference.

CUSTOMER SUPPORT

Our customer service team is available for technical or guarantee support, please email them with any queries at eveready@bmstores.co.uk

©2024 Energizer. Eveready and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries and are used under license by B&M Retail Ltd, Dakota Drive, L24 8RJ, UK. All other brand names are trademarks of their respective owners. Neither B&M Retail Ltd, Dakota Drive, L24 8RJ, UK nor Energizer Brands, LLC is affiliated with the respective owners of their trademarks.

Spec: DC 5V, 1A
Item No.: 385395



Waste electrical products should not be disposed of with household waste. Please recycle at your local recycling facility. Check with your local authority for recycling advice.

B&M Retail Ltd, Dakota Drive, Speke, Liverpool, L24 8RJ, UK
www.bmstores.co.uk
Centz Stores 7 Ltd, 5 Old Dublin Road, Dublin, A94 K1H5, Ireland
MADE IN CHINA