



SIDEBOARD

ITEM CODE: 388963
Assembly Instructions

1.0hr

APPROXIMATE ASSEMBLY TIME | 2 PEOPLE ASSEMBLY

 


FLOOR AREA 1Mx1M



REQUIRED ASSEMBLY SPACE

REQUIRED ASSEMBLY TOOLS






SOFT RUBBER HAMMER(Not Provided)


POZI SCREWDRIVER(Not Provided)

ASSEMBLED DIMENSIONS

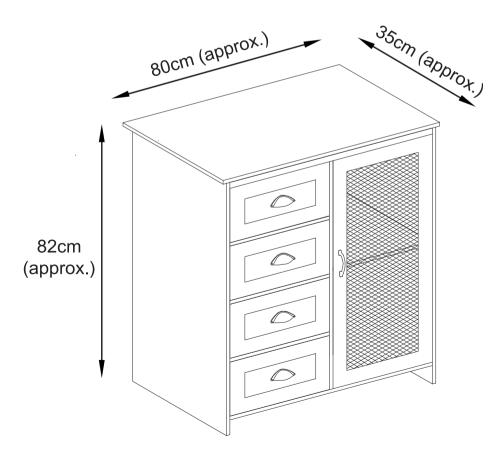

Max. Loading: 35kg (Top panel: 5kg, Drawer: 5kg per each, Shelf: 5kg per each)

NO.	PART LIST	QTY	NO.	PART LIST	QTY
1	TOP PANEL	1	10	DRAWER LEFT SIDE PANEL	4
2	LEFT SIDE PANEL	1	11	DRAWER BACK PANEL	4
3	RIGHT SIDE PANEL	1	12	DRAWER RIGHT SIDE PANEL	4
4	VERTICAL SPLIT PANEL	1	13	DRAWER BOTTOM PANEL	4
5	SUPPORT PANEL (FRONT)	3	14)	DRAWER FRONT PANEL	4
6	BOTTOM PANEL	1	15	METAL DOOR	1
7	SHELF PANEL	2	16	BOTTOM BAR	1
8	SUPPORT BAR (BACK)	1	17)	BACK PANEL	2
9	SUPPORT BAR (TOP)	1			

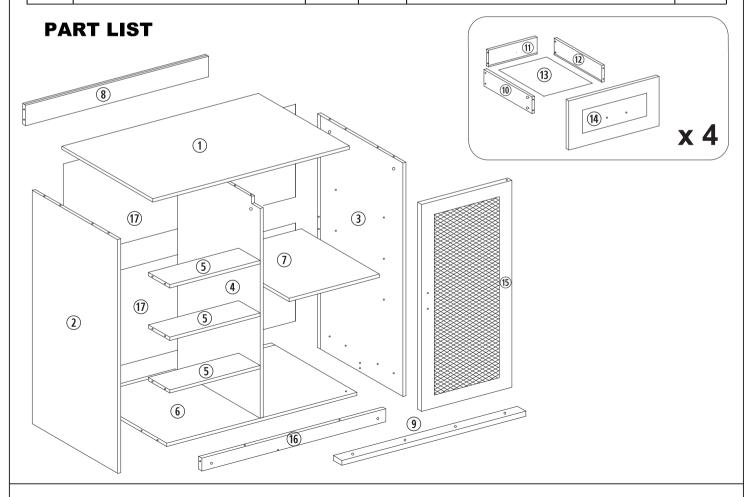

ITEM CODE: 388963
Assembly Instructions

HARDWARE LIST

P1	x3	8 P2	Х	x38	P3		х3	P4	x18	P5	x50
8					€)mmn>		*) ***********************************		*) 111111		
					Dia.5x20mm			Dia.4x35mm		Dia.3.5x12mm	
Quick Fit		С	Cam-lock		Screw			Screw		Screw	
P6	P6 x4		Х	x8	P8		x1	P9	x4	P10	x2
CL DL DR CR			O ************************************	m					①11111111 Dia.5x40mm		
Drawer Runner		r	Screw		Handle		 Handle		Screw		
P11 x2		P12			P13 x4		P14 x6		P15 x1		
Dia.4x20mm											
Screw		Н	Hinge Pin		Shelf Support		Floor Protector		Allen Wrench		
P16	x2	P17	x4 P1	18	X	2 P1 9)	x1	P20	(22 P2	21 x2
)		\(\rightarrow\)			ì	Dia.8x30mr		() Dia.3.5x14mm
Wa	all Strap	Support	Plate	Wall	Plug	Ма	Magnetic (Catch Wood Dowe		Screw

ITEM CODE: 388963 Assembly Instructions



Safety Advice and Care Advice

KEEP ALL THE SAFETY ADVICE AND INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE!

⚠ WARNING! RISK OF LOSS OF LIFE OR ACCIDENT

TO INFANTS AND CHILDREN! Never leave children unsupervised with the packaging materials. Danger of suffocation.

⚠ CAUTION! RISK OF INJURY! Make sure that all parts are undamaged and assembled correctly. Improper assembly carries a risk of injury. Damaged parts may affect the safety and function of the product.

- Adult assembly required.
- Power tools are not recommended for the assembly of this product.
- Make sure that this product is stable & used only on a solid & flat surface.
- Do not use this product unless all screws and fixings are firmly secured.
- Do not leave children unsupervised! The product is not a climbing frame or a toy!
- · Do not stand, sit or lean on this product
- Do not use this product as a step ladder or as a chopping surface.
- · Do not lift or move the product when it is loaded.
- Do not load more than a total of 35kg (Top panel: 5kg, Drawer: 5kg per each, Shelf: 5kg per each) onto the unit, otherwise there is a risk of injury and/or damage to the product
- Distribute weight evenly across the product so that it cannot overturn.
- Do not place hot items such as coffee cups directly on the surface(s) unless adequately thick table mats are used.
- Please periodically check all fittings and re-tighten as necessary.
- For Indoor & Domestic use only.

Care instructions:

- · Wipe clean with a dry cloth.
- Do not use scourers, abrasive or chemical solvents.
- · Keep away from moisture and direct sunlight.
- · Keep away from fire and inflammable objects.
- Store in a dry place.

ITEM CODE: 388963
Assembly Instructions

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



 
Tips & Tricks

Make sure that the hardware used is suitable for supporting your unit. Please consult a qualified tradesperson if unsure.

- oxdot If you are unsure, please select a larger screw and wall plug.
- ☑ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☐ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types Of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.




1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.




2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.




3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.




4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.



5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.



6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.

ITEM CODE: 388963
Assembly Instructions


SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT









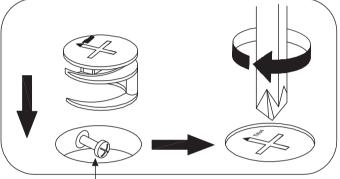

Quickfit head needs to be in centre

