


6 Basket Storage

Item Code: 404398
Assembly Instructions

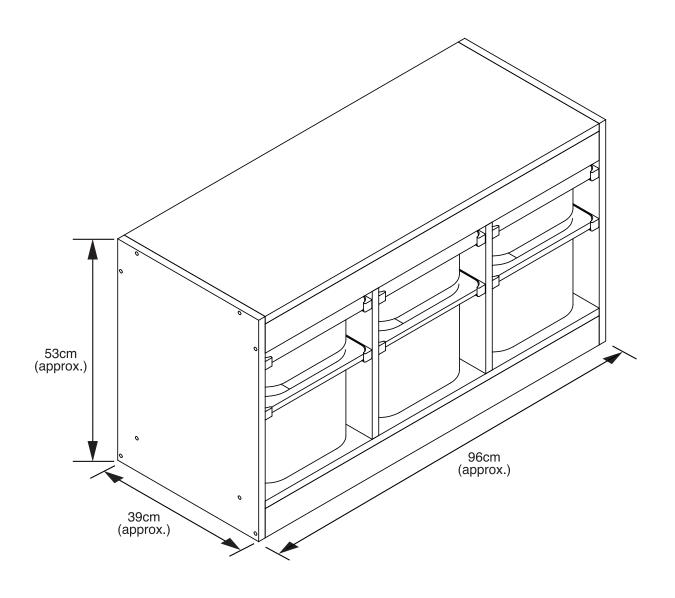

MAX. LOADING: 34KG (TOP: 10KG, SMALL BASKETS: 3KG EACH, LARGE BASKETS: 5KG EACH)

IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

SAFETY INFORMATION Top Tips Before You Start

- Please check that all parts are present before you start the assembly of your furniture.
- Assess the suitability of the wall or ceiling to ensure that the fastening devices will withstand the forces generated.
- For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
- Please ensure that you have sufficient space and people to assemble your product safely.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.

Warnings:

- Adult assembly is required. The assembly should be checked by an adult before each use.
- Unassembled product contains small parts which may present a choking hazard.
- Children should be kept away from the product during assembly to avoid any possible risk of injury.
- Do not use power tools in the assembly of this product as there is a risk of over tightening and consequently splitting of the wood.
- This product is not suitable for children under age 3 & recommended for children in the age 3 to 6.
- Do not load more than 34kg (Top: 10kg, Small Baskets: 3kg each, Large Baskets: 5kg each) onto product. Otherwise there is a risk of injury and/or damage to the product.
- Adult supervision is required at all times whilst children play with this product.
- Do not use this item if any components are missing or damaged.
- Please remove all packaging and packing tags/wires before presenting to a child.
- Small parts. Choking hazard. Packaging is not a toy.
- The parent should regularly check all fittings and re-tighten as necessary before giving the product to children.
- Always place the product on flat, steady and stable surface to prevent tipped over.
- Do not stand or sit on the product. Do not use the product as a stepladder.
- This product is intended for indoor, household use only as it is non industrial product.

Care and Maintenance of Your Furniture:

- Surface wipe only.
- To clean your item, please use a damp cloth and wipe clean. Dry naturally.
- Do not place hot items (e.g. hot drink) directly on the surface.
- Do not use cleaning products which contain ammonia, solvents or abrasive material.
- Do not drag and pull your furniture.
- Do not expose the item to extremes of heat and humidity.
- Examine the product regularly for wear before giving to a child.
- Do not let children play with broken furniture to avoid accidental swallowing suffocation.
- Please retain this information for future reference.

Part List 1 1 (NOT PROVIDED) D x 24 A x 8 B x 8 C x 32 E x 12 F x 20 G x 20 **(5**) **(5**) ② x4 ③ x1 ⑤ x2 ① x2 4 x2 6 x3 ⑦ x3

SPECIAL TIPS FOR FITTING CAM-LOCKS

AND QUICKFIT

CAM-LOCK

 


WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE






CORRECT





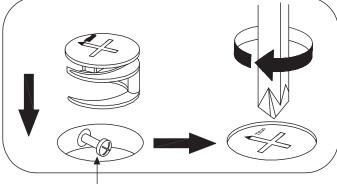


Quickfit head needs to be in centre

QUICKFIT

Tighten until shoulder is flush with panel. Do not overtighten or leave too loose. (see example





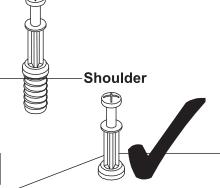

Panel

