

TROMSØ

FLOOR SHELVING WITH LAMP

ITEM CODE: 408841 Assembly Instructions

45 mins


APPROXIMATE ASSEMBLY TIME

1 PERSON ASSEMBLY

FLOOR AREA 2M x 2M





REQUIRED ASSEMBLY SPACE

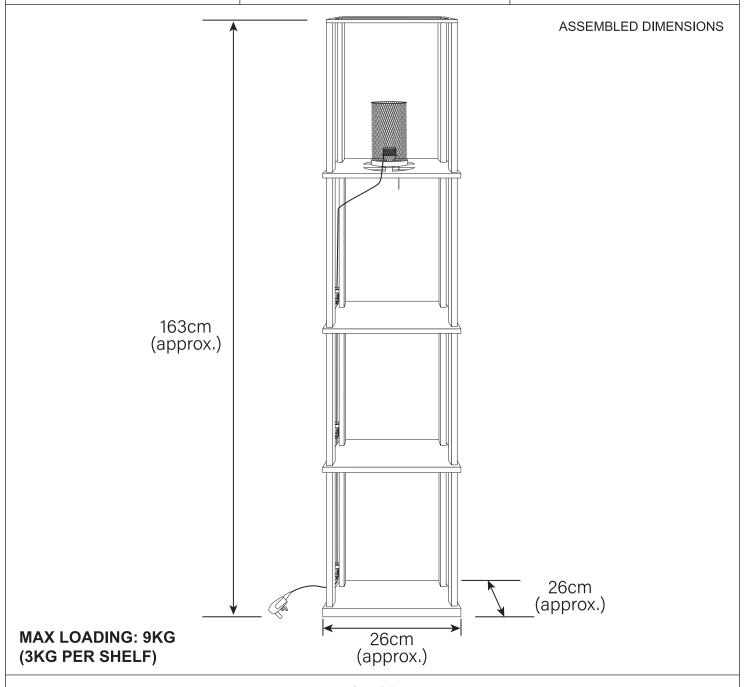


ITEM CODE: 408841
Assembly Instructions

PARTS LIST

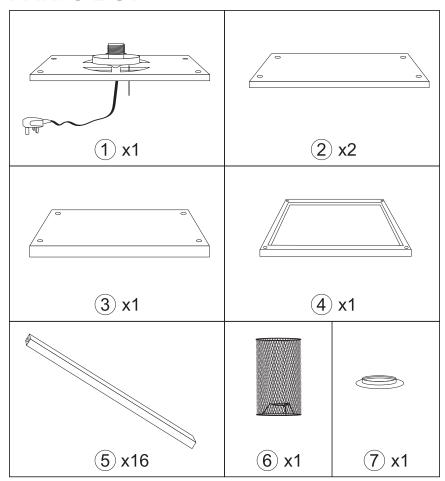

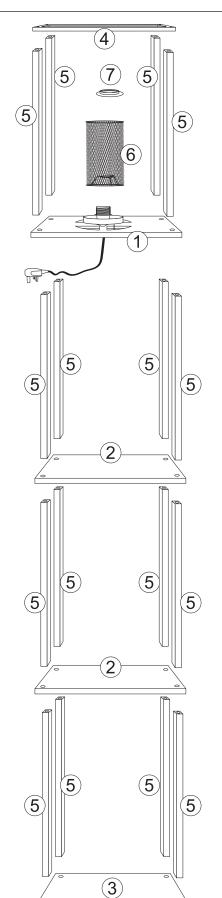

HARDWARE LIST

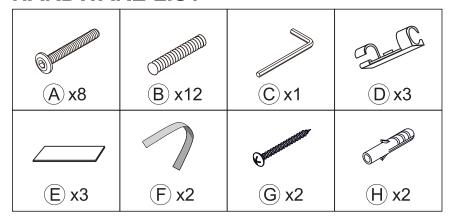

ITEM CODE: 408841 Assembly Instructions

Getting Started

- Remove all parts from the box.
- Retain instructions for future reference.
- Place the packaging inside the box to either store or dispose of safely.
- Input Rating: 220-240V~50Hz 18W (3W x 6)
- Bulb type: E27 Max. 60W (Not included light bulb)

In the Box

- Tromso Floor shelving with lamp
- Fixings
- Assembly Instruction+Operating Instructions

Important Safety Instructions

WARNING! Shut off electric power before servicing, installing or replacing a bulb.

- For indoor use only.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- The lamp can be used on stable surface.
- Do not use this light set if the insulation cable is damaged. If the cable is damaged the light set must be discarded.
- Choose a suitable location for the product and ensure that the socket that you use is close enough and that the cable will reach the socket without becoming an obstacle / trip hazard
- Always switch off and unplug when not in use
- Always switch off and unplug before carrying out maintenance and / or cleaning.
- Domestic use only.
- Do not dispose of this product in fire.
- Install the unit away from heat sources, direct sunlight, humidity and water.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent electric shock, explosion and/or injury to yourself and damage to the unit. Wiring by registered electrical technician only.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place
 the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the cable out of reach of children.
- Do not use abrasive cleaning solvents to clean.
- Do not connect the chain to supply while it is in the packing or on a reel.
- Do not connect this chain electrically to another chain.
- Do not insert bulb whilst the light set is plugged in.

SET UP:

- Install the product for Indoor use only. Ensure all parts are fixed securely before use.
- Lift all the spare parts out of box.
- Review the Assembly Instruction to familiarize yourself with the desk's components, accessories, and set-up.
- Please complete steps 1 -10 to assemble the product.
- Plug into your chosen socket and switch on. To switch the light set on use the switch located on side of unit.

ITEM CODE: 408841 Assembly Instructions



Safety Advice and Care Advice

KEEP ALL THE SAFETY ADVICE AND INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE!

MARNING! RISK OF LOSS OF LIFE OR ACCIDENT

TO INFANTS AND CHILDREN! Never leave children unsupervised with the packaging materials. Danger of suffocation.

⚠ CAUTION! RISK OF INJURY! Make sure that all parts are undamaged and assembled correctly. Improper assembly carries a risk of injury. Damaged parts may affect the safety and function of the product.

- Adult assembly required.
- · Power tools are not recommended for this product.
- Make sure that this product is stable & used only on a solid & flat surface.
- · Do not use this product unless all screws and fixings are firmly secured.
- Do not leave children unsupervised! The product is not a climbing frame or a toy!
- · Do not stand, sit or lean on this product.
- Do not use this product as a step ladder or as a chopping surface.
- Do not lift or move the product when it is loaded.
- Do not load more than a total of 9kg (3kg per shelf) onto the unit, otherwise there is a risk of injury and/or damage to the product.
- Distribute weight evenly across the product so that it cannot overturn.
- Do not place hot items such as coffee cups directly on the surface(s) unless adequately thick table mats are used.
- · Please periodically check all fittings and re-tighten as necessary.
- For Indoor & Domestic use only.

Care instructions:

- Wipe clean with a dry cloth.
- · Do not use scourers, abrasive or chemical solvents.
- Keep away from moisture and direct sunlight.
- Keep away from fire and inflammable objects.
- Store in a dry place.

ITEM CODE: 408841
Assembly Instructions

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



 
Tips & Tricks

Make sure that the hardware used is suitable for supporting your unit. Please consult a qualified tradesperson if unsure.

- \square If you are unsure, please select a larger screw and wall plug.
- ☑ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☐ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types Of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

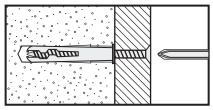


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

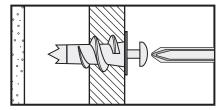


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

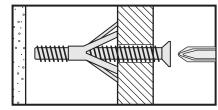


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

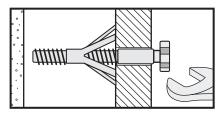


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

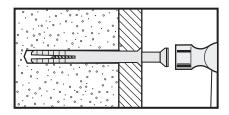

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

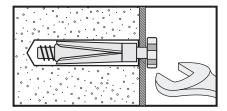

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.



