



1 DOOR 2 DRAWERS SIDEBOARD

AXEL

Item Code: 415910
Assembly Instructions

 
1.0hr

APPROXIMATE ASSEMBLY TIME

2 PEOPLE ASSEMBLY




FLOOR AREA
2Mx2M

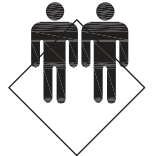


REQUIRED ASSEMBLY SPACE

 
REQUIRED ASSEMBLY TOOLS

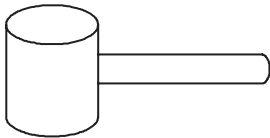

SOFT RUBBER HAMMER(Not Provided)

 


POZI SCREWDRIVER (Not Provided)

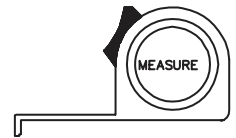 

MEASURING TAPE (Not Provided)

 ASSEMBLED DIMENSIONS

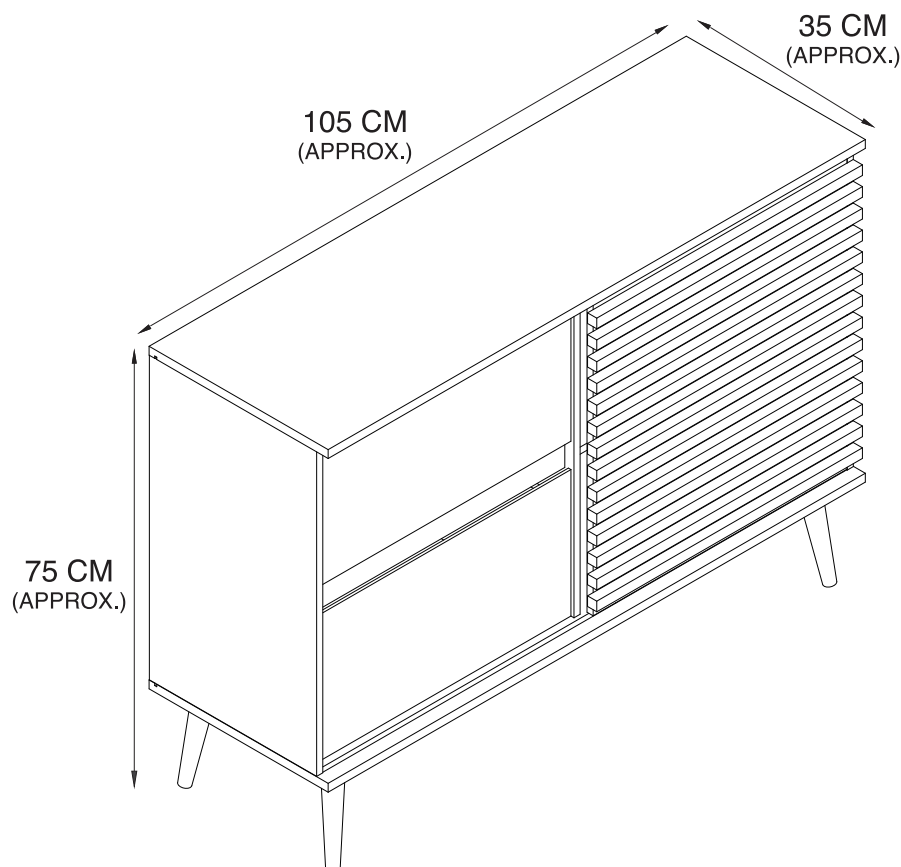


Max. Loading: 25kg (Top: 5kg, Drawer / Shelf: 5kg each)

AXEL 1 DOOR 2 DRAWERS SIDEBORD

Item Code: 415910 Assembly Instructions

 PART LIST

 


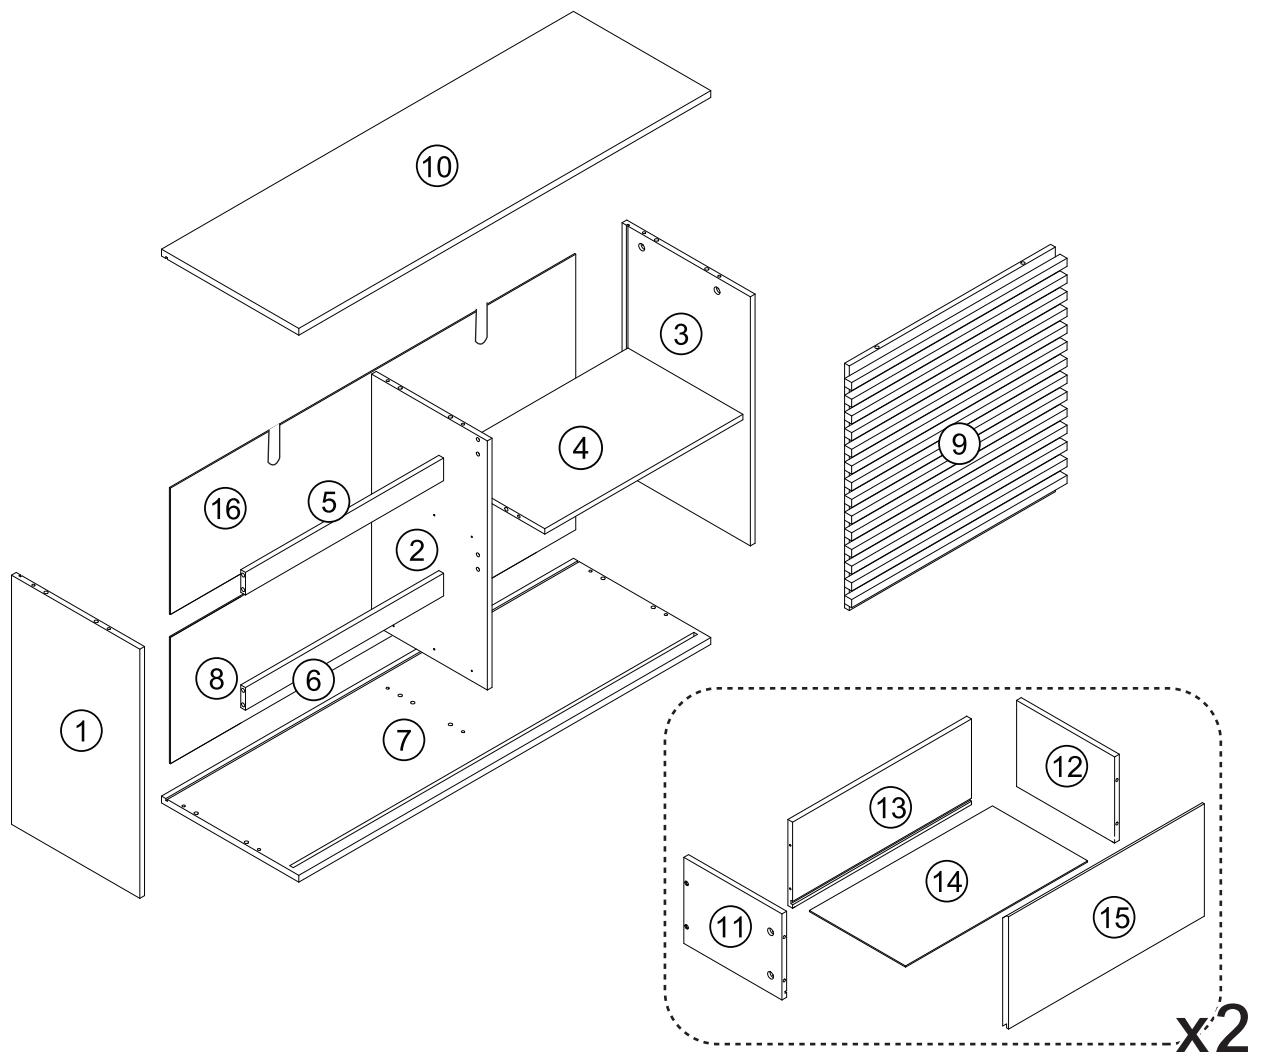

 

 
 
 


 
 

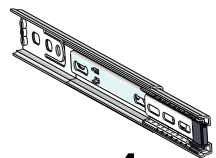 
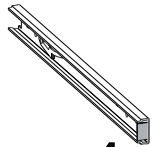 




NO.	PART LIST	QTY	NO.	PART LIST	QTY
①	LEFT SIDE PANEL	1	⑨	DOOR	1
②	MIDDLE PANEL	1	⑩	TOP PANEL	1
③	RIGHT SIDE PANEL	1	⑪	DRAWER LEFT SIDE PANEL	2
④	SHELF	1	⑫	DRAWER RIGHT SIDE PANEL	2
⑤	UPPER CROSS BAR	1	⑬	DRAWER BACK PANEL	2
⑥	LOWER CROSS BAR	1	⑭	DRAWER BOTTOM PANEL	2
⑦	BOTTOM PANEL	1	⑮	DRAWER FRONT PANEL	2
⑧	LOWER BACK PANEL	1	⑯	UPPER BACK PANEL	1

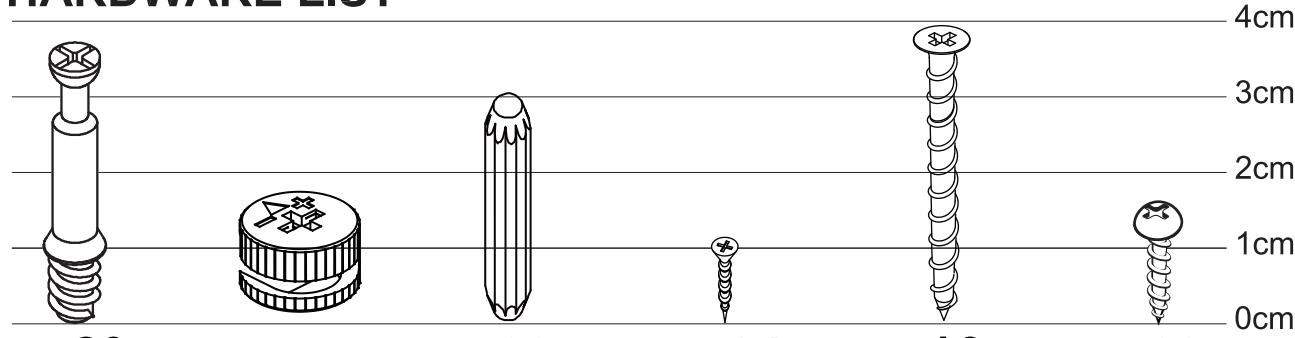

AXEL 1 DOOR 2 DRAWERS SIDEBOARD

Item Code: 415910
Assembly Instructions

  HARDWARE LIST

					
					
x20	X20	X22	X24	x16	X20
M7 x 37mm	M15 x 10mm	M6 x 30mm	M3.5 x 12mm	M4 x 35mm	M4 x 12mm
A	B	C	D	E	F
QUICK FIT	CAM LOCK	WOOD DOWEL	SCREW	SCREW	SCREW
					
x4	x4	x1	x1	x4	
G	H	I	J	K	
METAL PLATE	LEG	MIDDLE LEG	ADJUSTABLE FEET	METAL DOWEL	
					
x10	x2	x4	x4	x4	
L	M	N	Oa	Ob	
BACK PANEL SUPPORT	L SHAPE BRACKET	ANTI-COLLISION PAD	RUNNER	RUNNER	
					
x2	x1	x2	x4		
P	Q	R	S		
WALL PLUG	BACK PANEL JOINT STRIP	SCREW	FLOOR PROTECTOR		

AXEL 1 DOOR 2 DRAWERS SIDEBORD

Item Code: 415910 Assembly Instructions



Safety Advice and Care Advice

KEEP ALL THE SAFETY ADVICE AND INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE!



WARNING! RISK OF LOSS OF LIFE OR ACCIDENT

TO INFANTS AND CHILDREN! Never leave children unsupervised with the packaging materials. Danger of suffocation.

CAUTION! RISK OF INJURY! Make sure that all parts are undamaged and assembled correctly. Improper assembly carries a risk of injury. Damaged parts may affect the safety and function of the product.

- Adult assembly required.
- Power tools are not recommended for this product.
- Make sure that this product is stable & used only on a solid & flat surface.
- Do not use this product unless all screws and fixings are secure firmly secured.
- Do not leave children unsupervised! The product is not a climbing frame or a toy!
- Do not stand, sit or lean on this product
- Do not use this product as a step ladder or as a chopping surface.
- Do not lift or move the product when it is loaded.
- Do not load more than a total of 25kg (Top: 5kg, Drawer / Shelf: 5kg each) onto the unit, otherwise there is a risk of injury and/or damage to the product
- Distribute weight evenly across the product so that it cannot overturn.
- Do not place hot items such as coffee cups directly on the surface(s) unless adequately thick table mats are used.
- Please periodically check all fittings and re-tighten as necessary.
- For Indoor & Domestic use only.

Care instructions:

- Wipe clean with a dry cloth.
- Do not use scourers, abrasive or chemical solvents.
- Keep away from moisture and direct sunlight.
- Keep away from fire and inflammable objects.
- Store in a dry place.

AXEL 1 DOOR 2 DRAWERS SIDEBORD

Item Code: 415910 Assembly Instructions

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



 
Tips & Tricks

**Make sure that the hardware used is suitable for supporting your unit.
Please consult a qualified tradesperson if unsure.**

- ✓ If you are unsure, please select a larger screw and wall plug.
- ✓ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ✓ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ✓ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types Of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

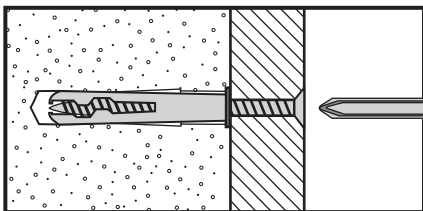


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

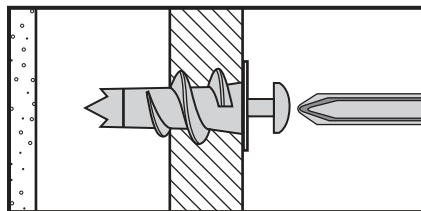


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

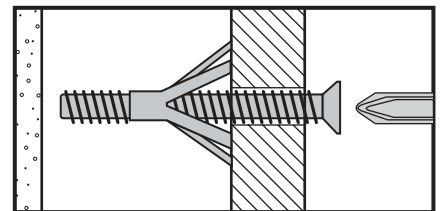


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

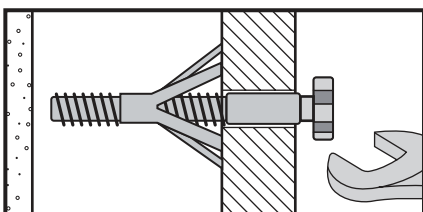


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

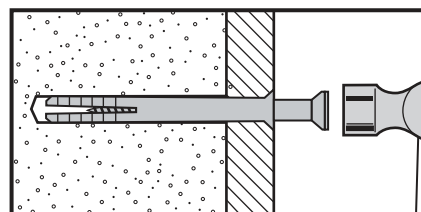

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

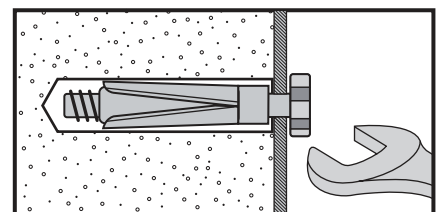


6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.



AXEL 1 DOOR 2 DRAWERS SIDEBOARD

Item Code: 415910
Assembly Instructions

 SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

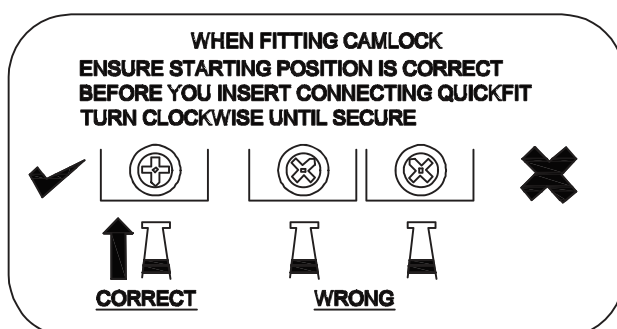


CAM-LOCK

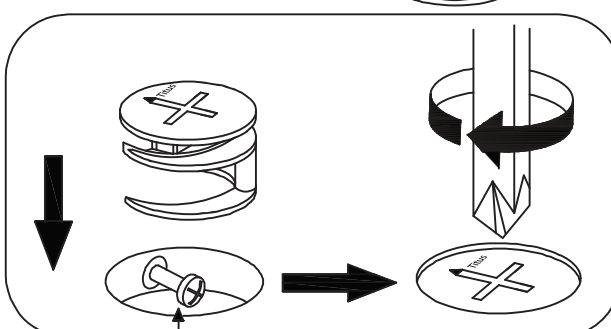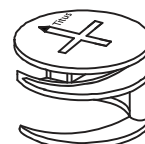  

Quickfit head needs to be in centre

QUICKFIT

 
Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

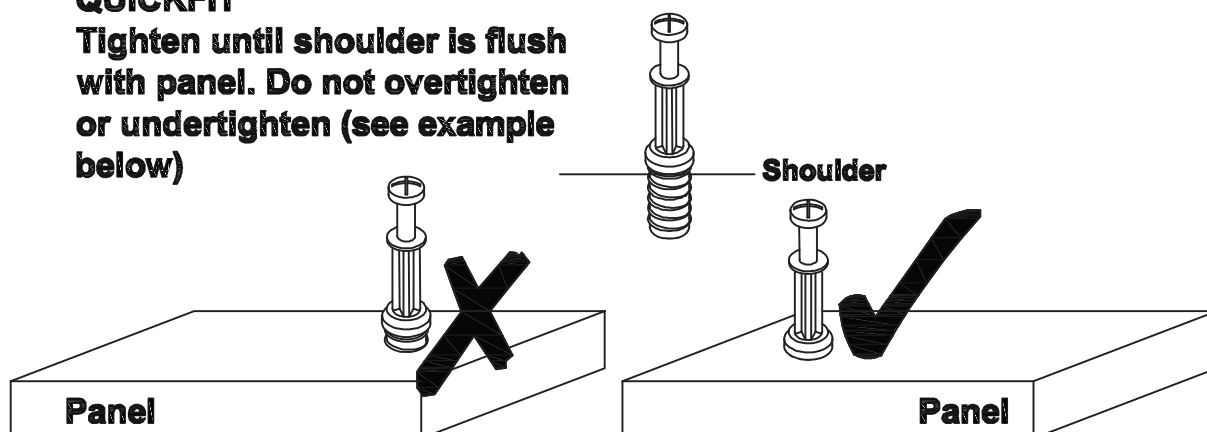

AXEL 1 DOOR 2 DRAWERS SIDEBOARD

Item Code: 415910 Assembly Instructions

 
To remove the drawer runner from the cabinet slider, extend the slider components. Once the smaller inner drawer runner can not move out further, squeeze the plastic locking lever to disengage the drawer runner from the cabinet slider. Continue squeezing whilst pulling out the inner drawer runner.

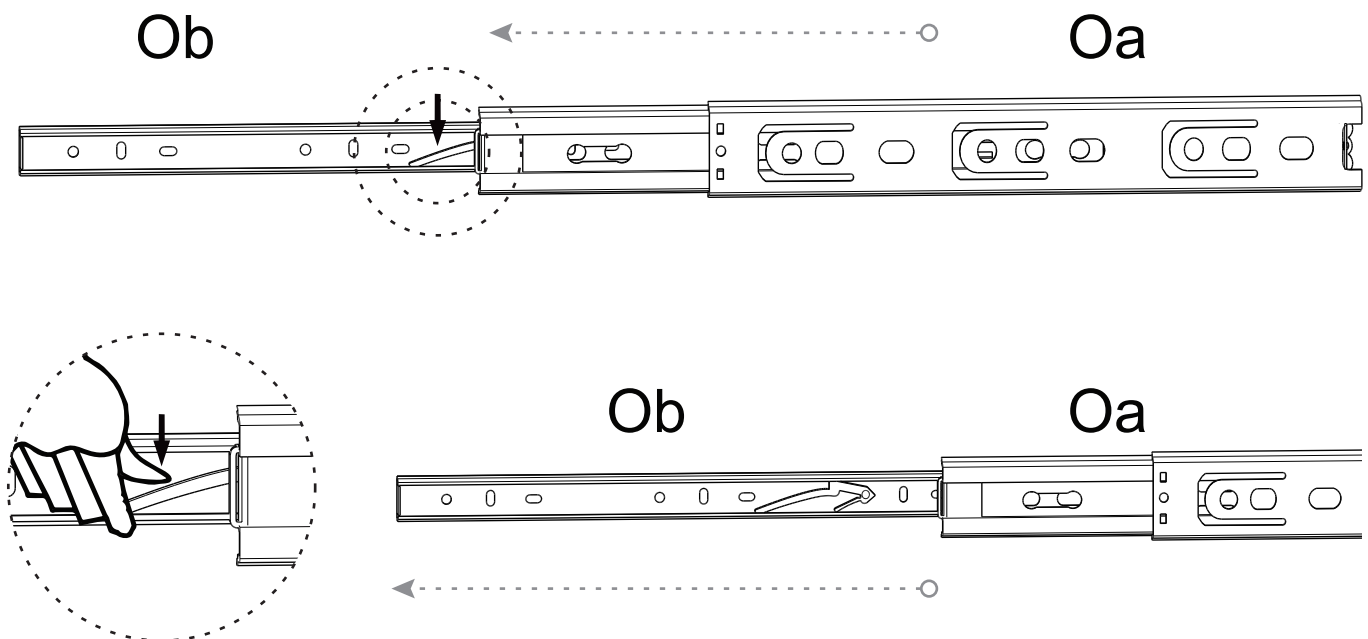


AXEL 1 DOOR 2 DRAWERS SIDEBOARD

Item Code: 415910 Assembly Instructions

 STEP 1

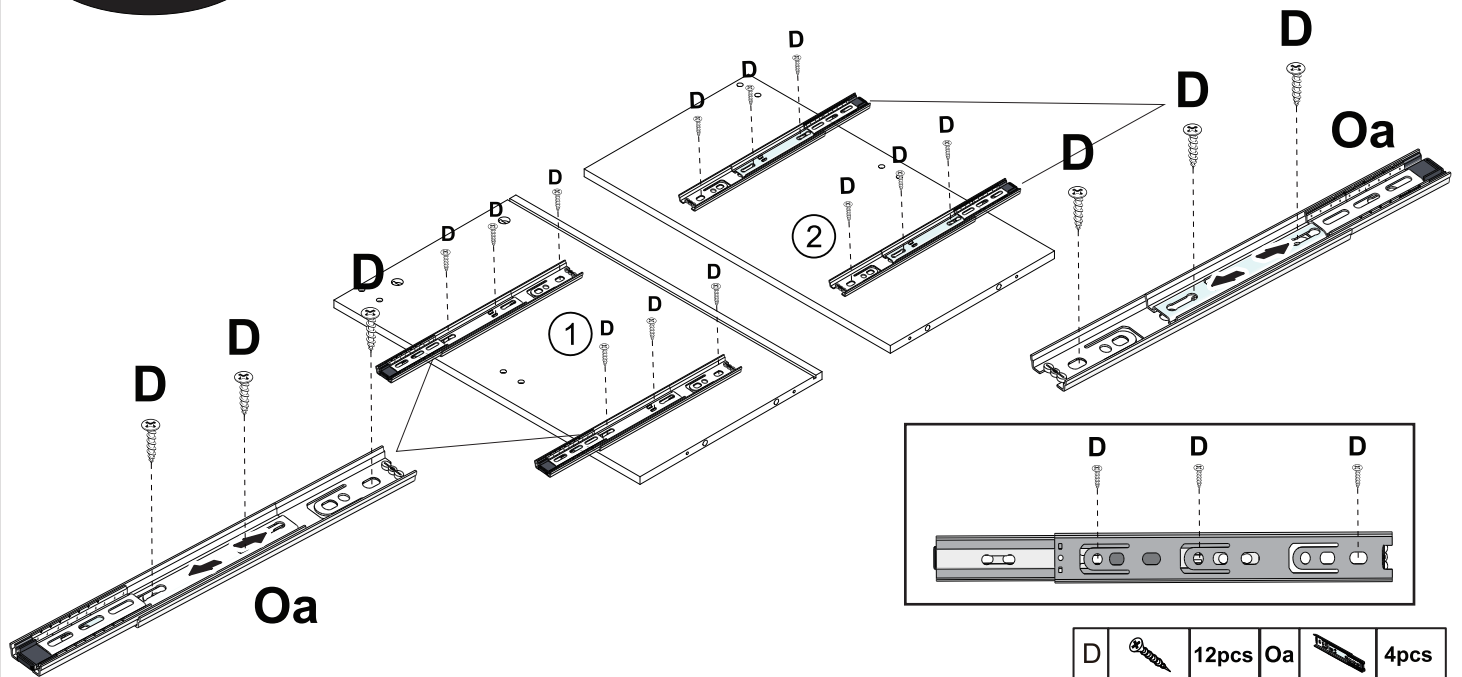

 
STEP 2

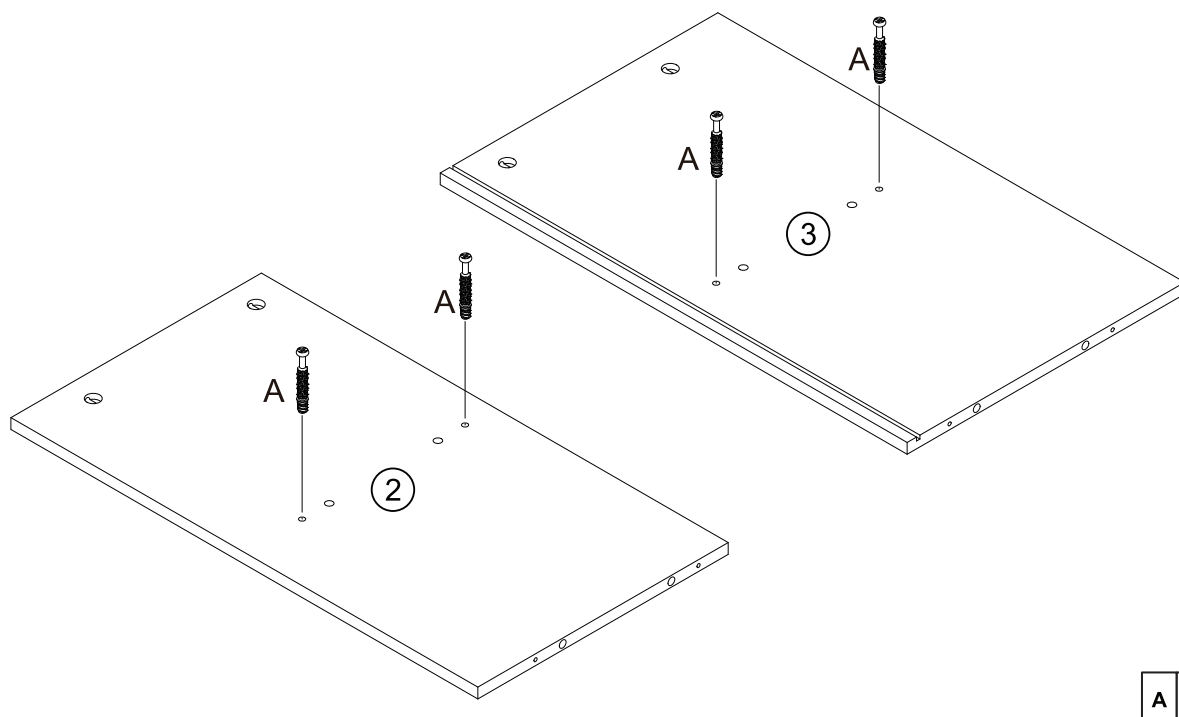



AXEL 1 DOOR 2 DRAWERS SIDEBORD

 
Item Code: 415910 Assembly Instructions

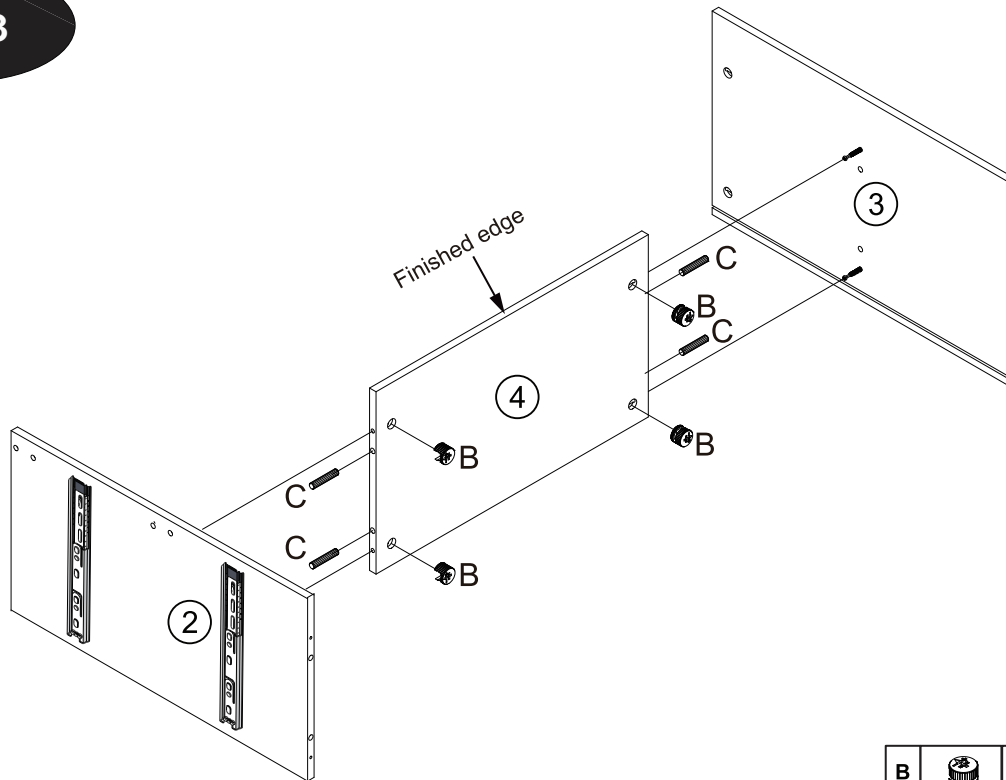
STEP 3



B		4pcs	C		4pcs
---	---	------	---	---	------

 STEP 4

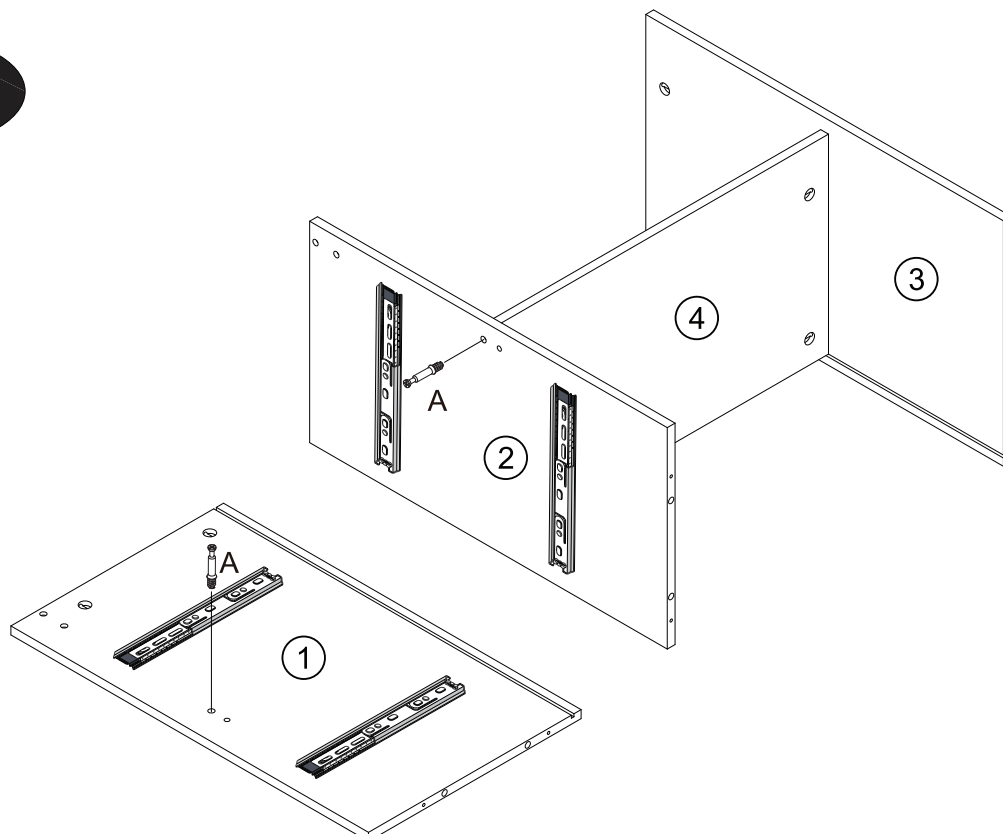


A		2pcs
---	---	------


AXEL 1 DOOR 2 DRAWERS SIDEBORD

Item Code: 415910 Assembly Instructions

 STEP 5

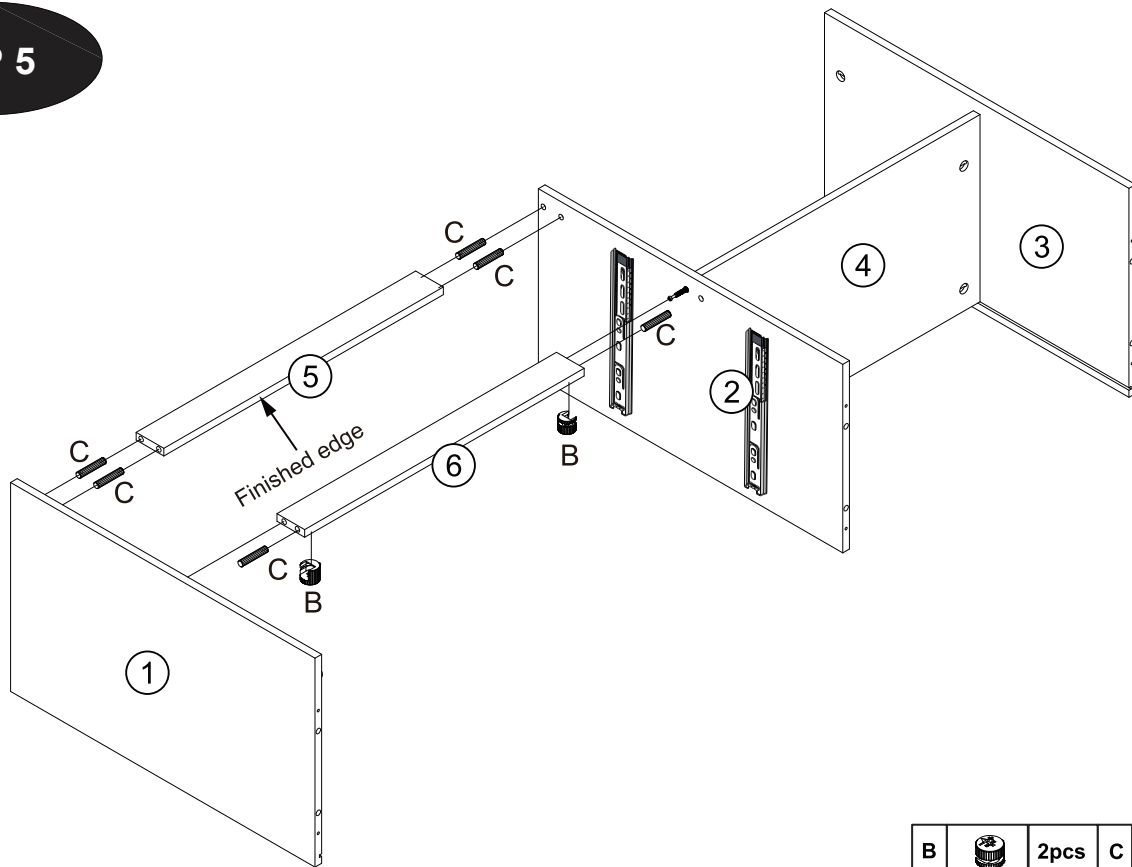

 
STEP 6

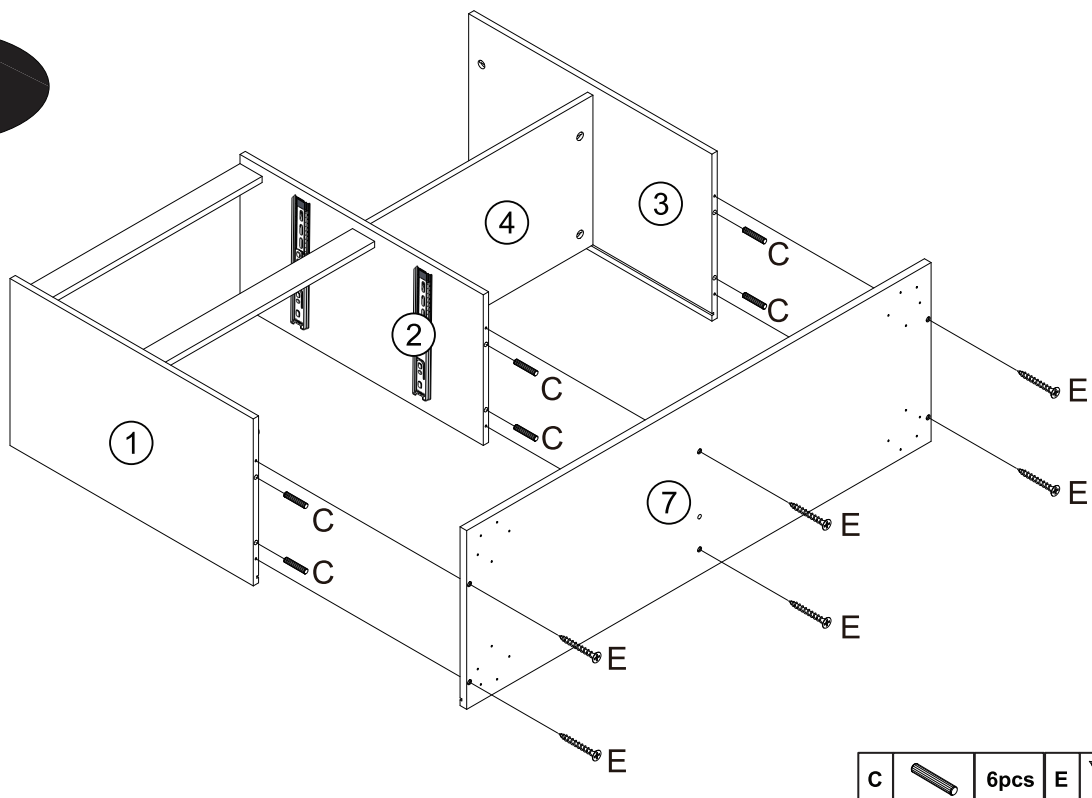

AXEL 1 DOOR 2 DRAWERS SIDEBORD


Item Code: 415910
Assembly Instructions

 STEP 7

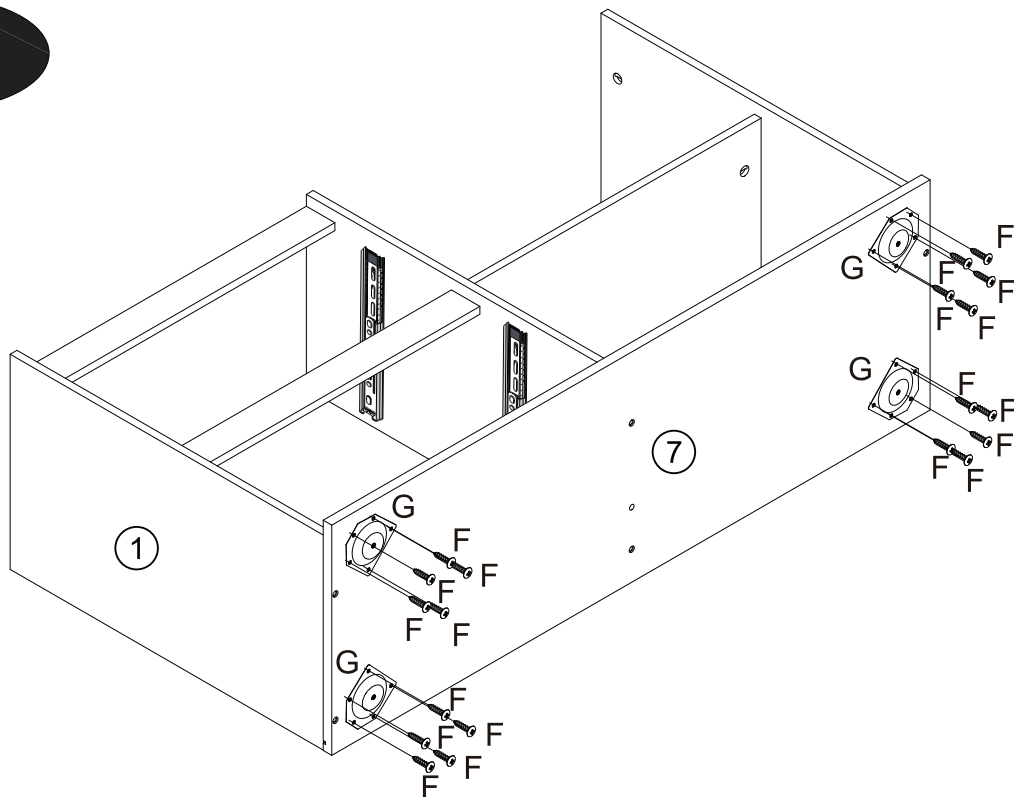

F		20pcs	G		4pcs
---	--	-------	---	--	------

 STEP 8


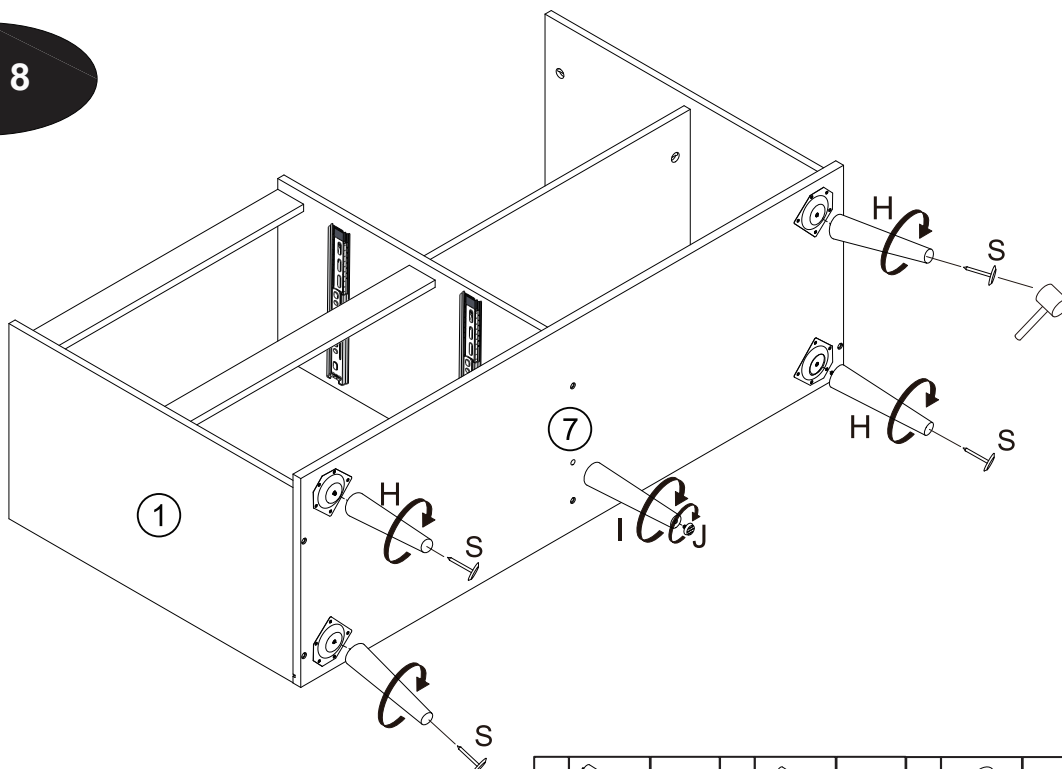


H		4pcs	I		1pc	J		1pc	S		4pcs
---	--	------	---	--	-----	---	--	-----	---	--	------

AXEL 1 DOOR 2 DRAWERS SIDEBORD


Item Code: 415910 Assembly Instructions

  STEP 9

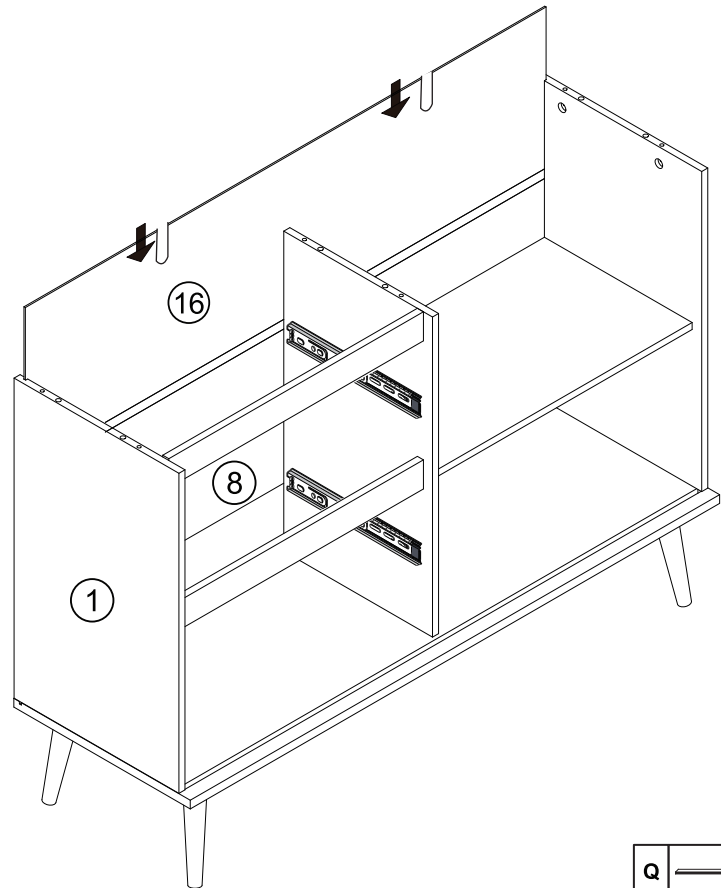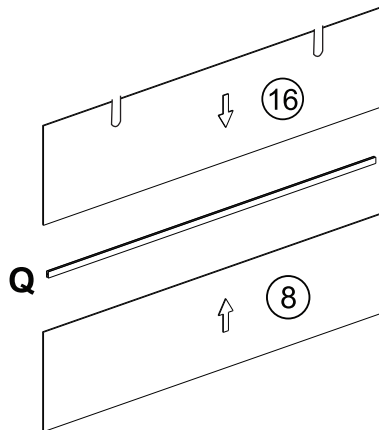

Q		1pc
---	--	-----

 STEP 10

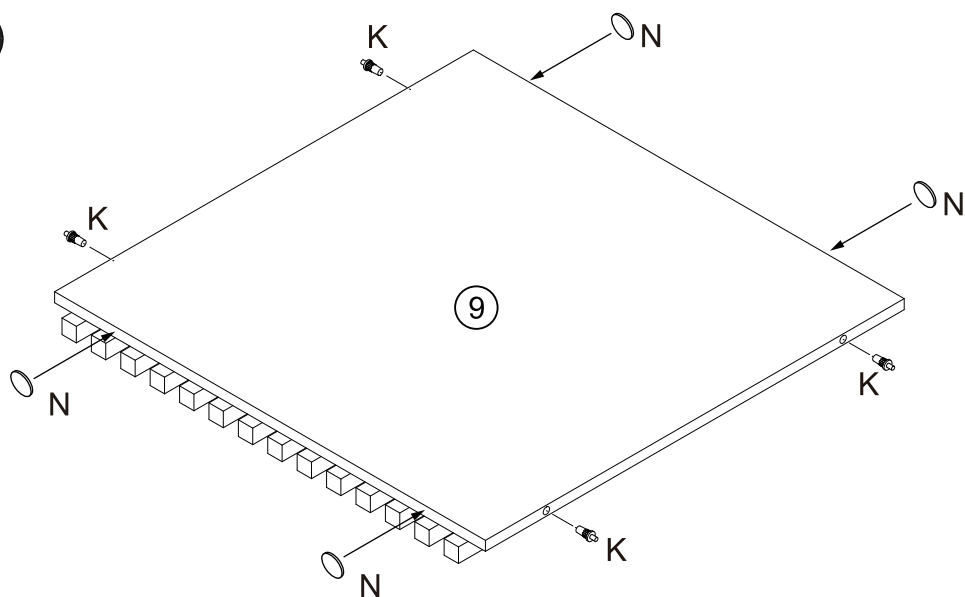


K		4pcs	N		4pcs
---	--	------	---	--	------


AXEL 1 DOOR 2 DRAWERS SIDEBORD



 
Item Code: 415910
Assembly Instructions

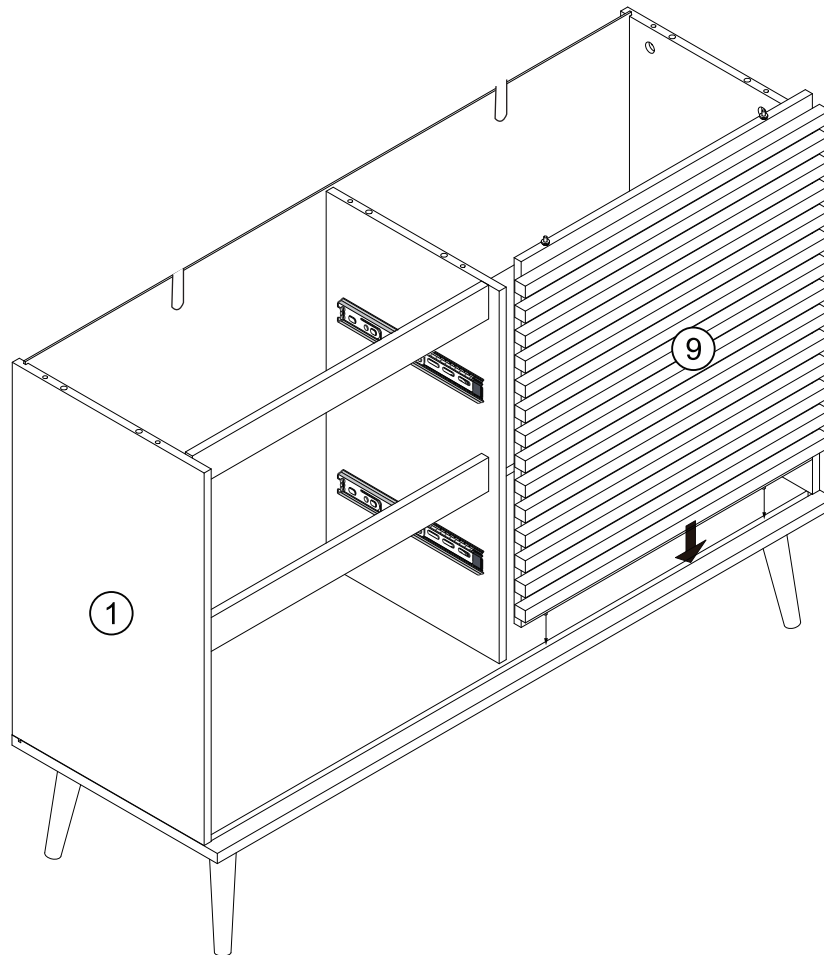 STEP 11

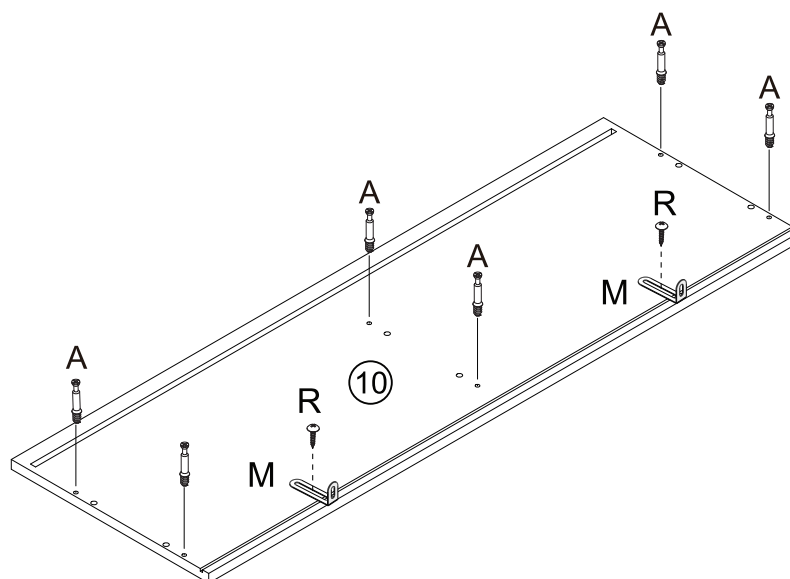

STEP 12






A		6pcs	M		2pcs	R		2pcs
---	--	------	---	---	------	---	---	------

AXEL 1 DOOR 2 DRAWERS SIDEBORD

 
Item Code: 415910 Assembly Instructions

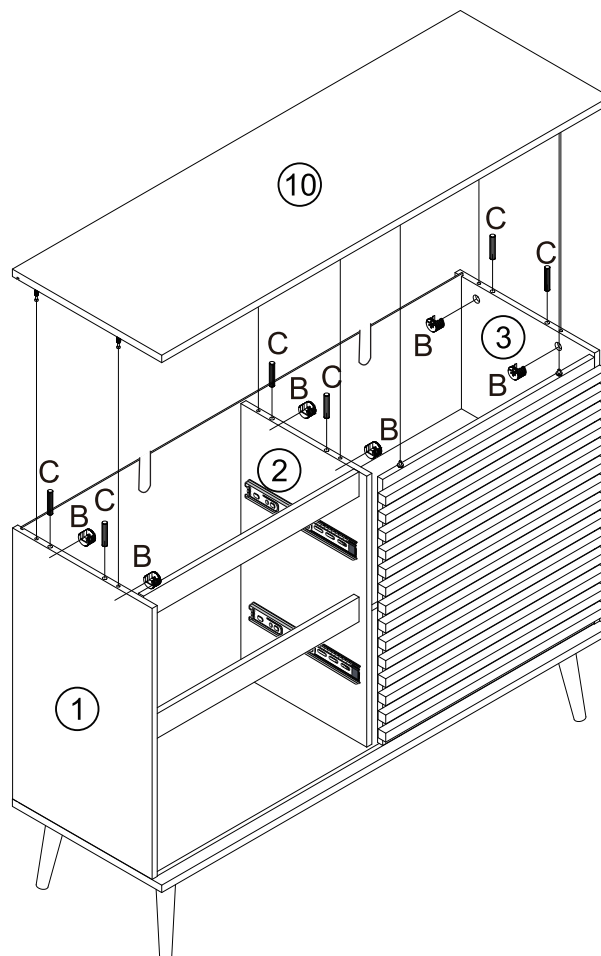
STEP 13



B		6pcs	C		6pcs
---	---	------	---	---	------

 STEP 14

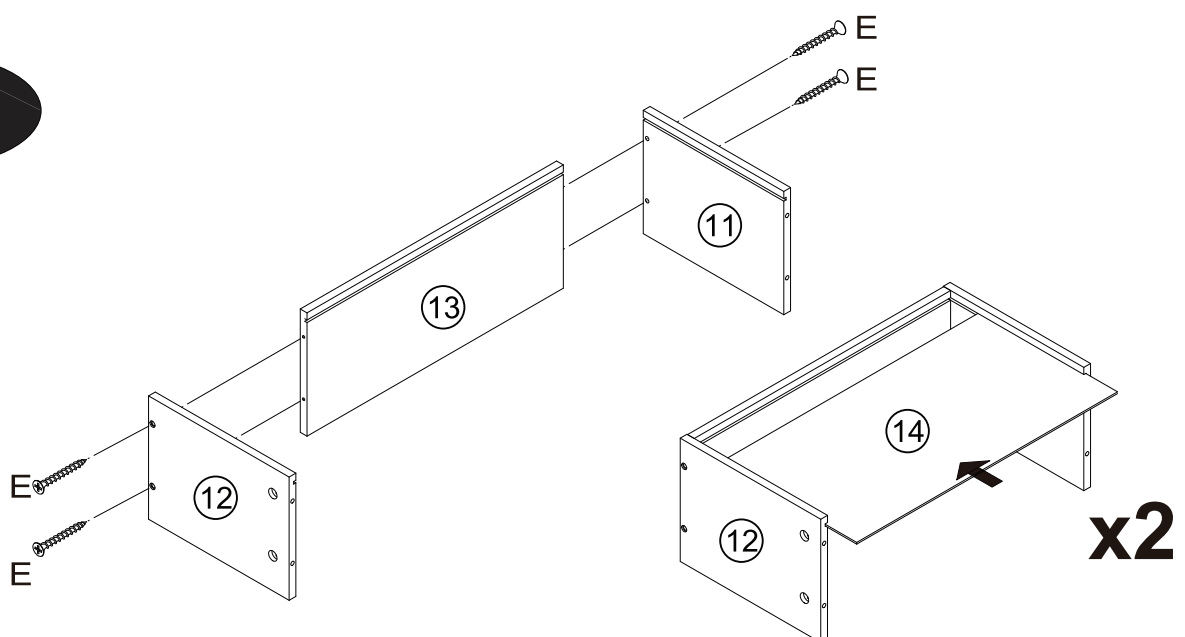


E		8pcs
---	---	------


AXEL 1 DOOR 2 DRAWERS SIDEBORD

Item Code: 415910 Assembly Instructions

 STEP 15

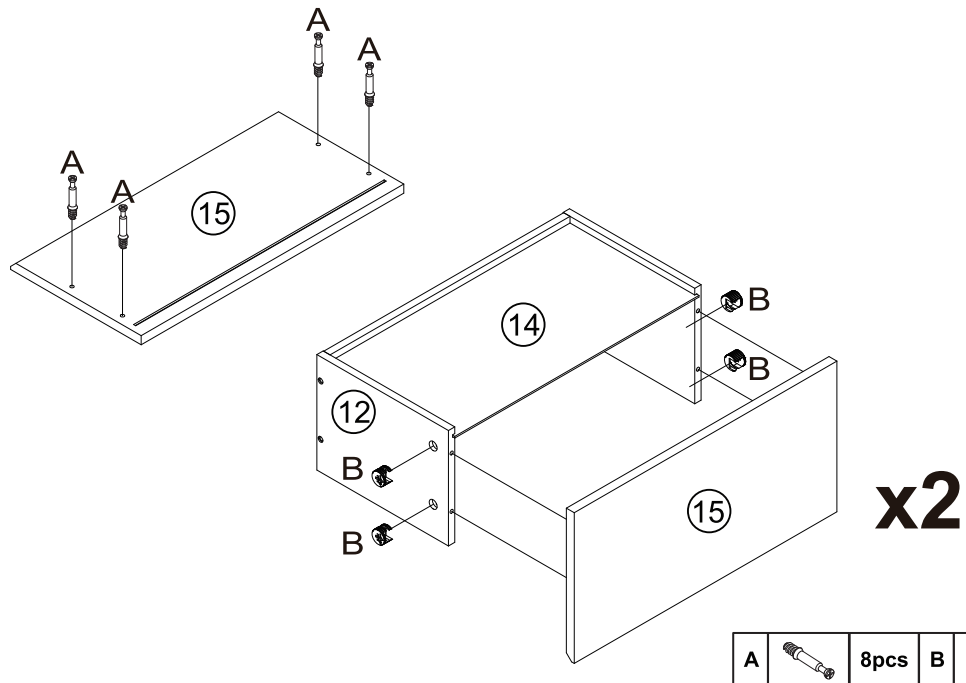

 STEP 16

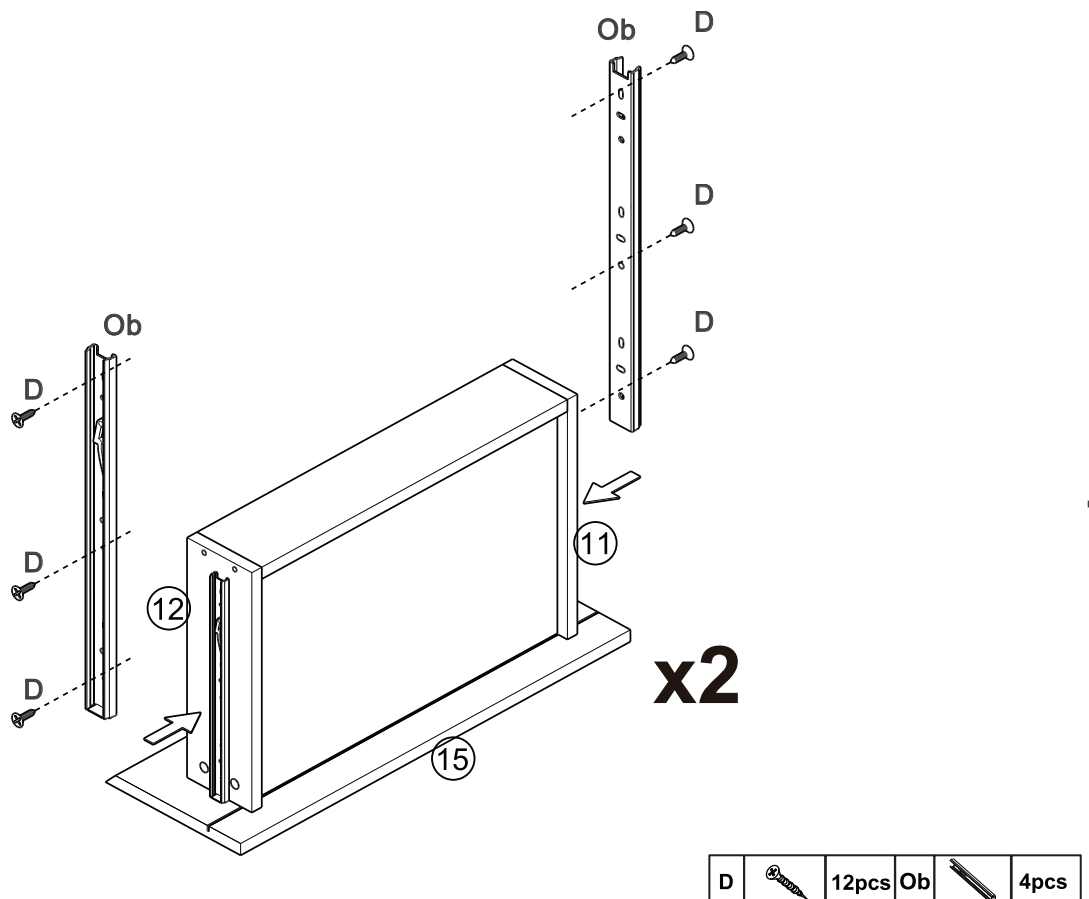


AXEL 1 DOOR 2 DRAWERS SIDEBORD


Item Code: 415910

Assembly Instructions

 STEP 17

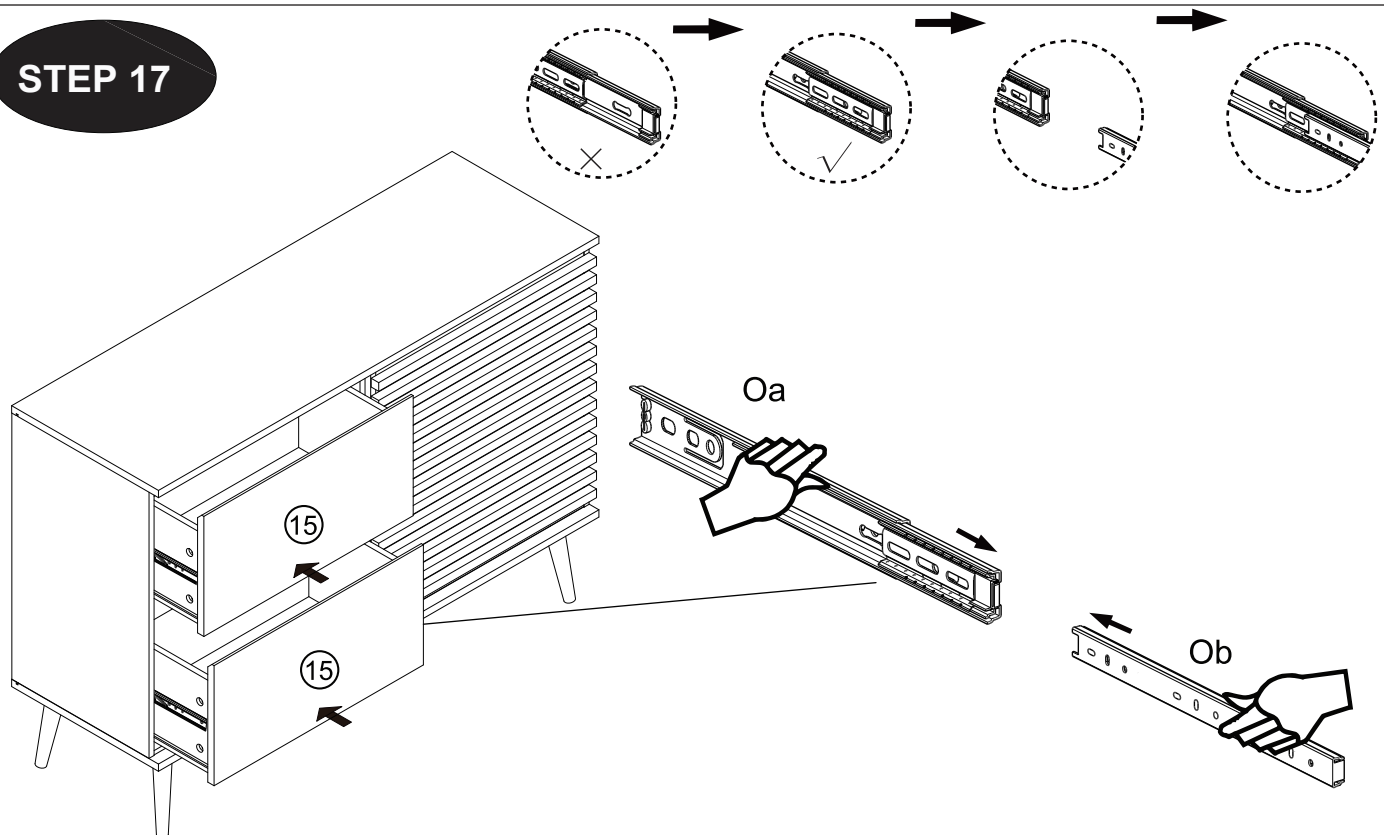

 STEP 18

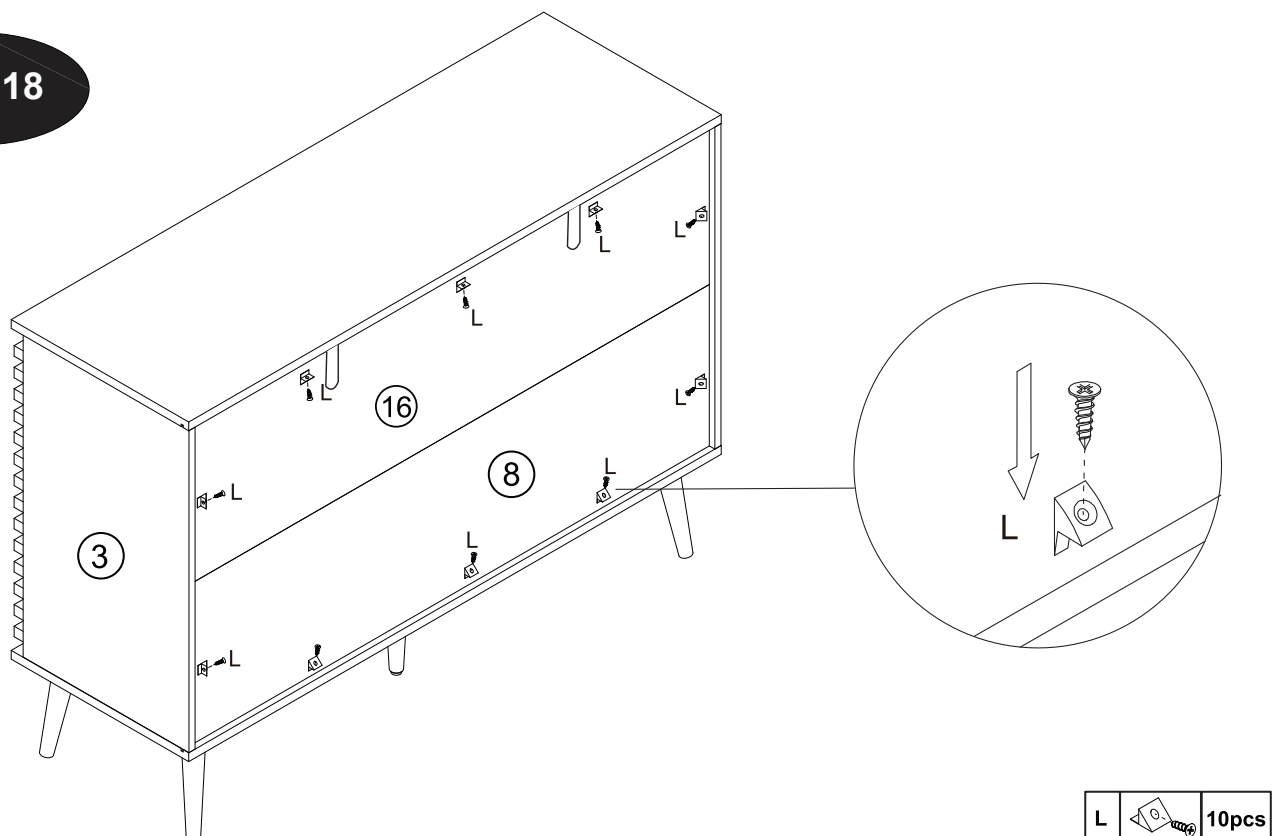


AXEL 1 DOOR 2 DRAWERS SIDEBORD

Item Code: 415910

Assembly Instructions

STEP 19


 
To remove the drawer runner from the cabinet slider, extend the slider components. Once the smaller inner drawer runner can not move out further, squeeze the plastic locking lever to disengage the drawer runner from the cabinet slider. Continue squeezing whilst pulling out the inner drawer runner.

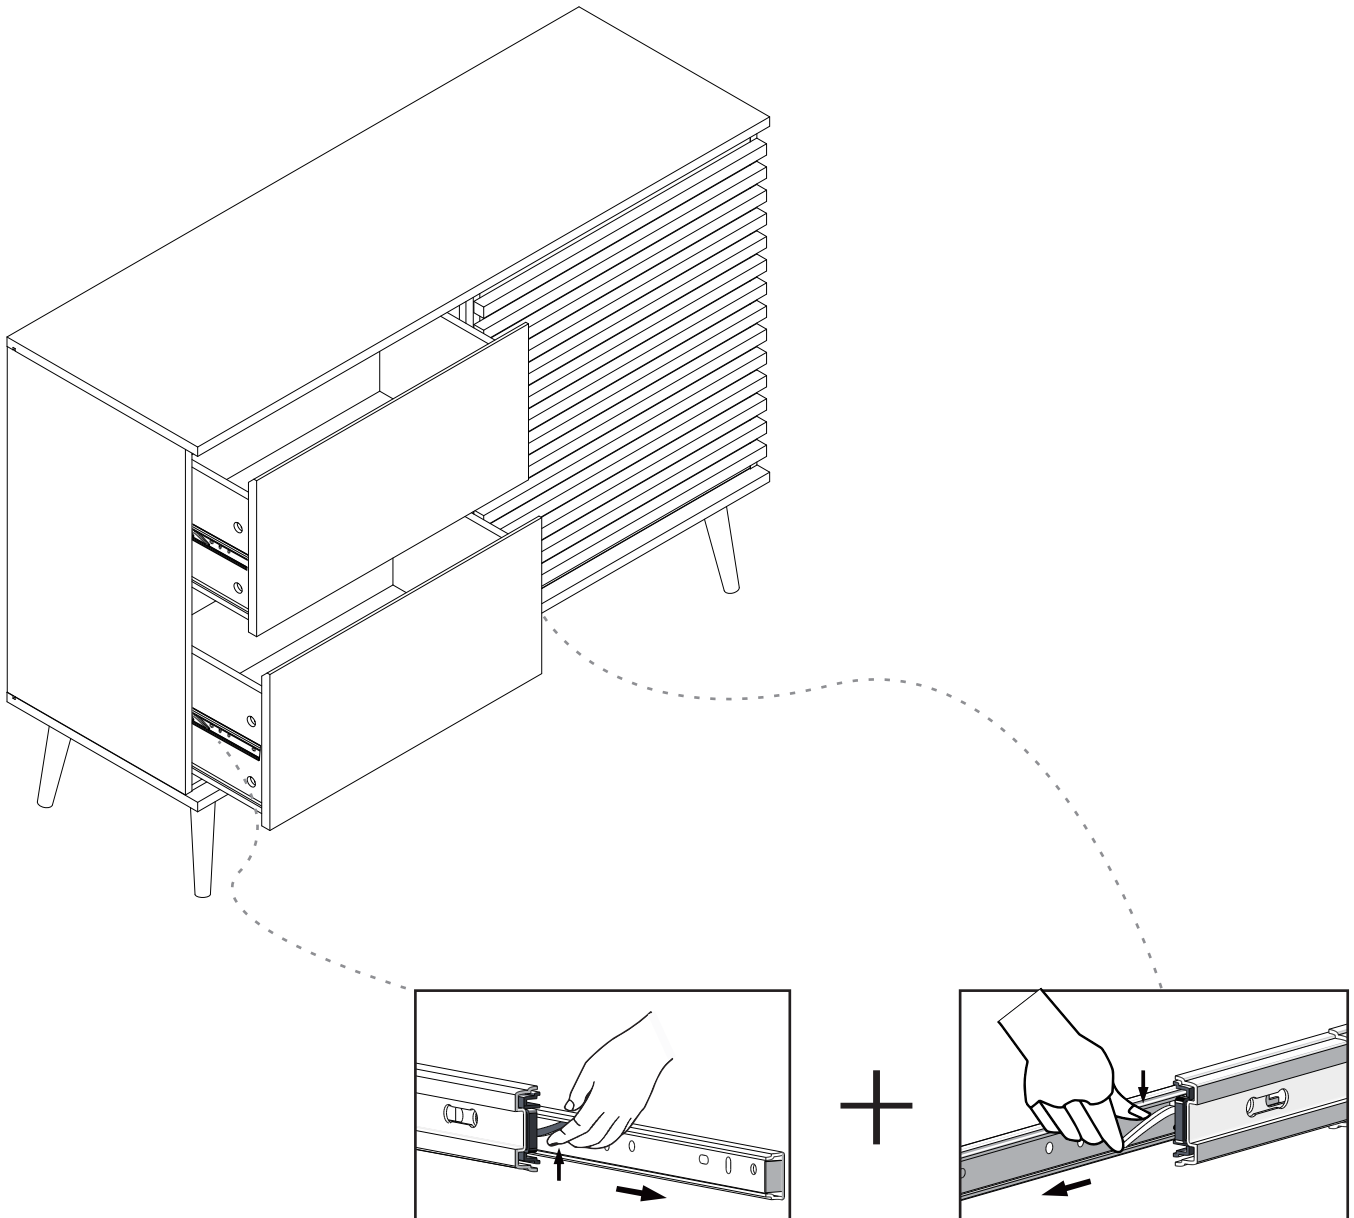

AXEL 1 DOOR 2 DRAWERS SIDEBORD

Item Code: 415910 Assembly Instructions

  STEP 20

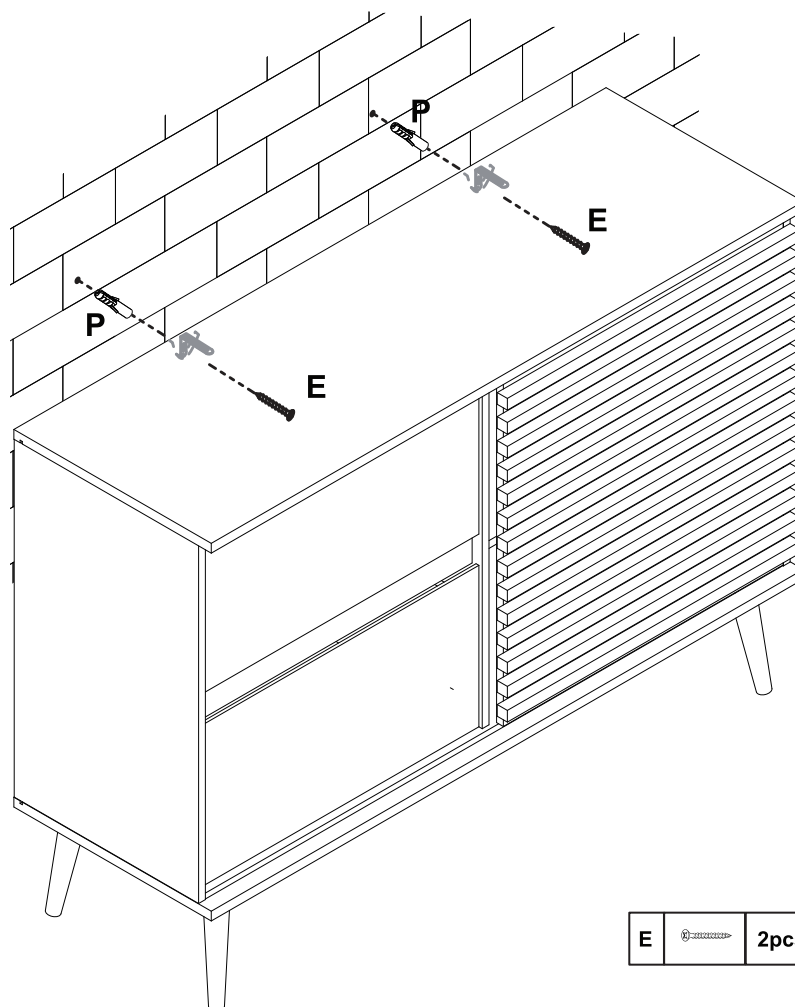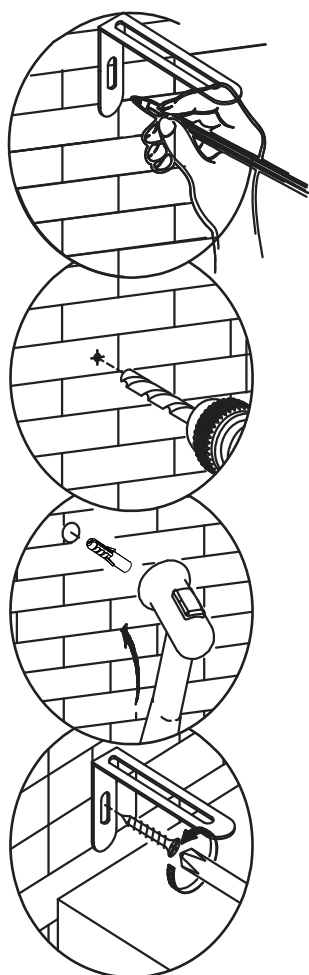

E		2pcs	P		2pcs
---	--	------	---	--	------

 
WARNING: Anti-tipping hardware is only a deterrent. It is not a substitute for proper adult supervision.

Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended.

This hardware, when properly installed, could provide protection against the unexpected tipping of furniture due to improper use.

Please ensure the anti-tipping hardware provided is suitable for your wall or else, it might damage your wall during installation.

Domestic use only

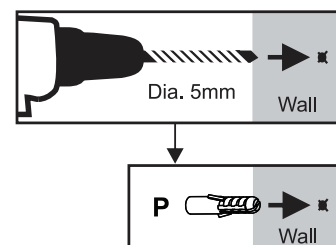

B&M Retail, L24 8RJ, UK
www.bmstores.co.uk
B&M France SAS, 8 Rue du Bois Joli, 63800, France
Made In China

