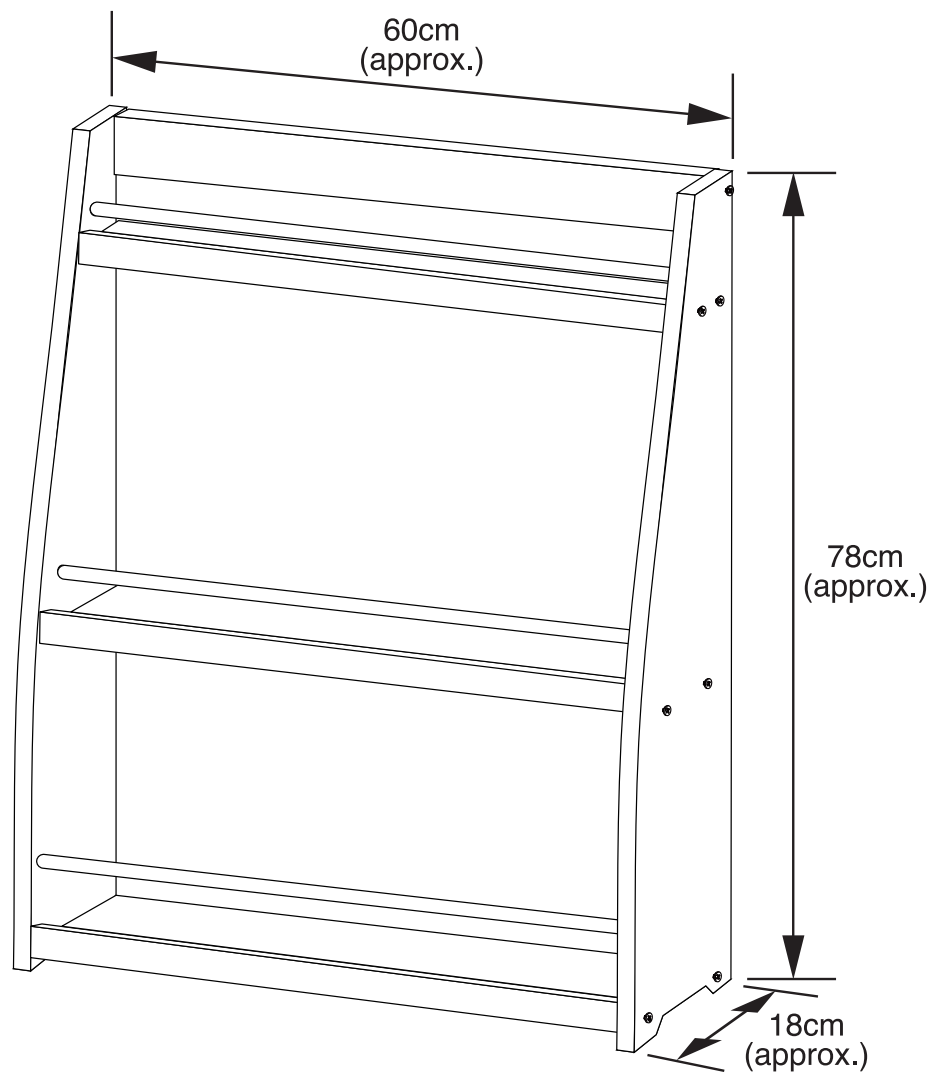


KIDS HOME

collection

3 tier shelf

Item Code 417069 Assembly Instructions



MAX. LOADING: 6KG (2KG PER SHELF)

SAFETY INFORMATION

Top Tips Before You Start

- Please check that all parts are present before you start the assembly of your furniture.
- For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
- Please ensure that you have sufficient space and people to assemble your product safely.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.

 
 
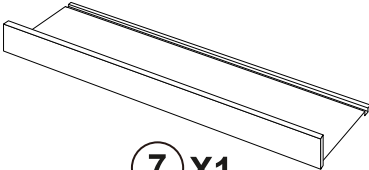
 
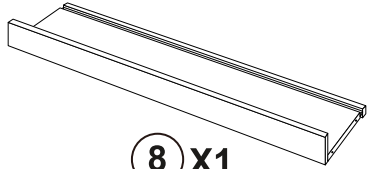
 
 
Warnings:

- Adult assembly is required. The assembly should be checked by an adult before each use.
- Unassembled product contains small parts which may present a choking hazard.
- Children should be kept away from the product during assembly to avoid any possible risk of injury.
- Do not use power tools in the assembly of this product as there is a risk of over - tightening and consequently splitting of the wood.
- This product is not suitable for children under age 3 & recommended for children in the age 3 to 6.
- Do not load more than 6kg (2kg per shelf) onto product. Otherwise there is a risk of injury and/or damage to the product.
- Adult supervision is required at all times whilst children play with this product.
- Do not use this item if any components are missing or damaged.
- Please remove all packaging and packing tags/wires before presenting to a child.
- Small parts. Choking hazard. Packaging is not a toy.
- The parent should regularly check all fittings and re-tighten as necessary before giving the product to children.
- Always place the product on flat, steady and stable surface to prevent tipped over.
- Do not stand or sit on the product.
- This product is intended for indoor, household use only as it is non industrial product.


Care and Maintenance of Your Furniture:

- Surface wipe only.
- To clean your item, please use a damp cloth and wipe clean. Dry naturally.
- Do not use cleaning products which contain ammonia, solvents or abrasive material.
- Do not drag and pull your furniture.
- Do not expose the item to extremes of heat and humidity.
- Examine the product regularly for wear before giving to a child.
- Do not let children play with broken furniture to avoid accidental swallowing suffocation.
- Please retain this information for future reference.


Part List

 ① X1	 ② X1	 ③ X1	 ⑦ X1
		 ④ X2	 ⑧ X1
		 ⑤ X3	 ⑨ X1
		 ⑥ X1	 AX14

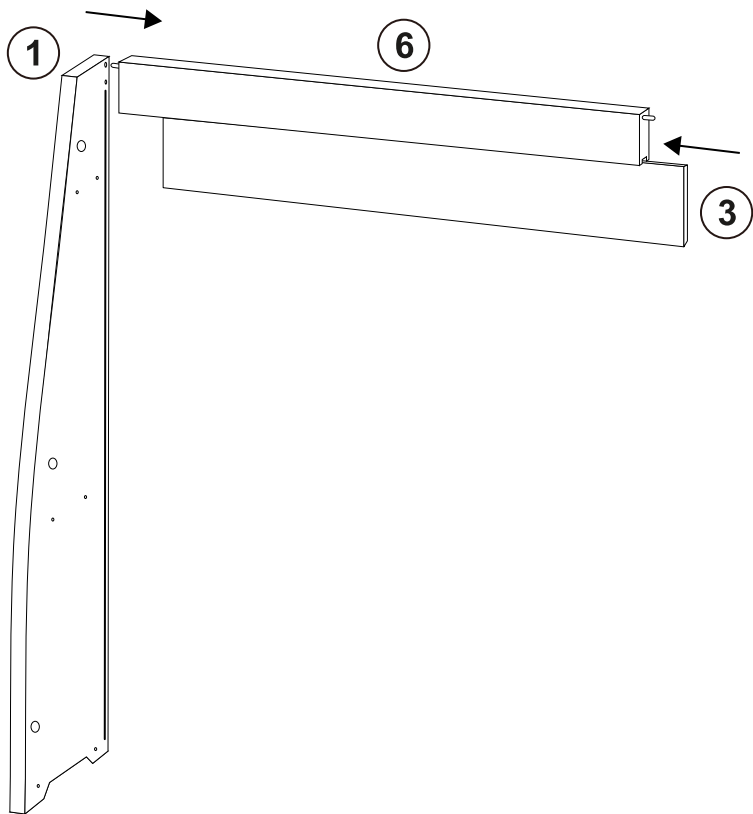1




2

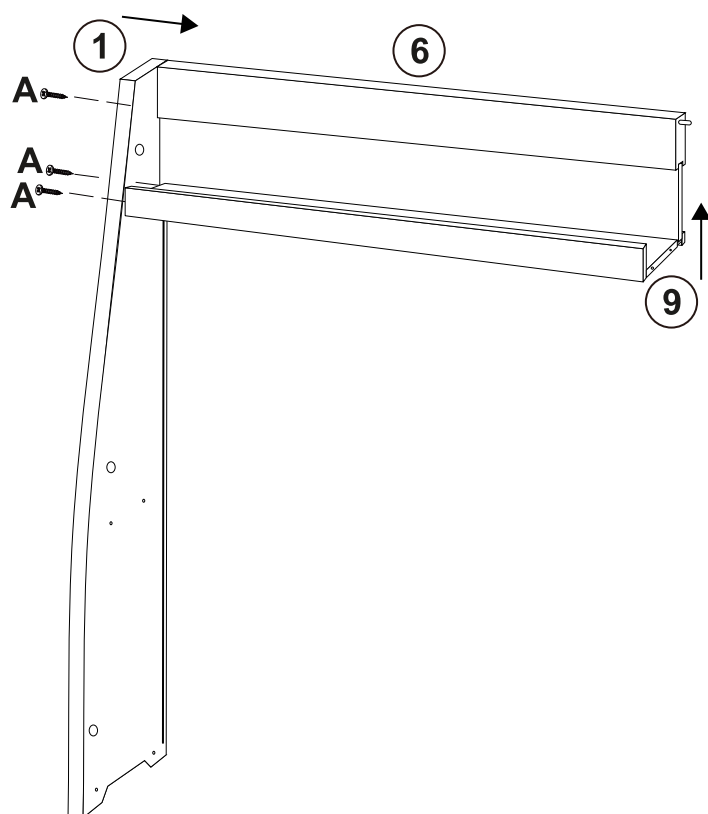

AX3

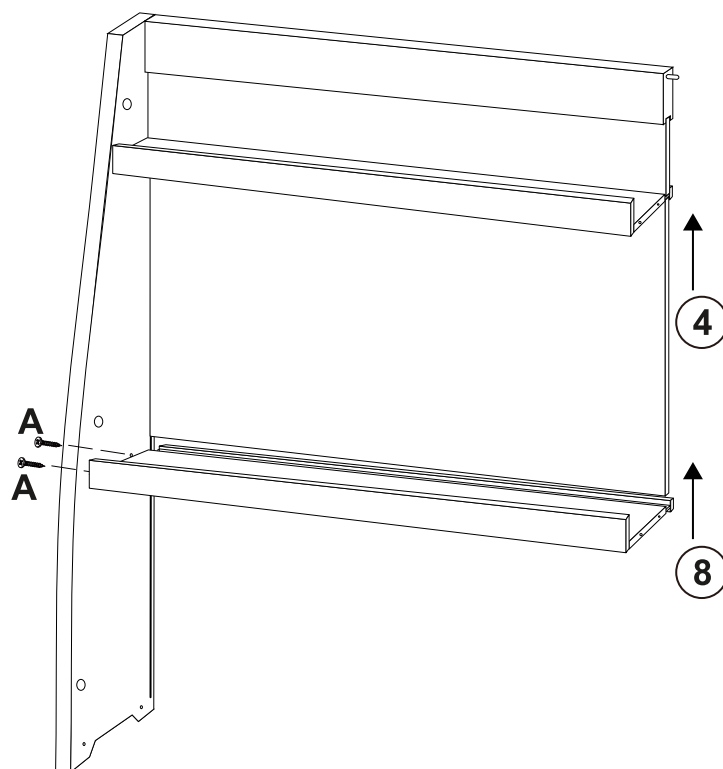3




AX2


4



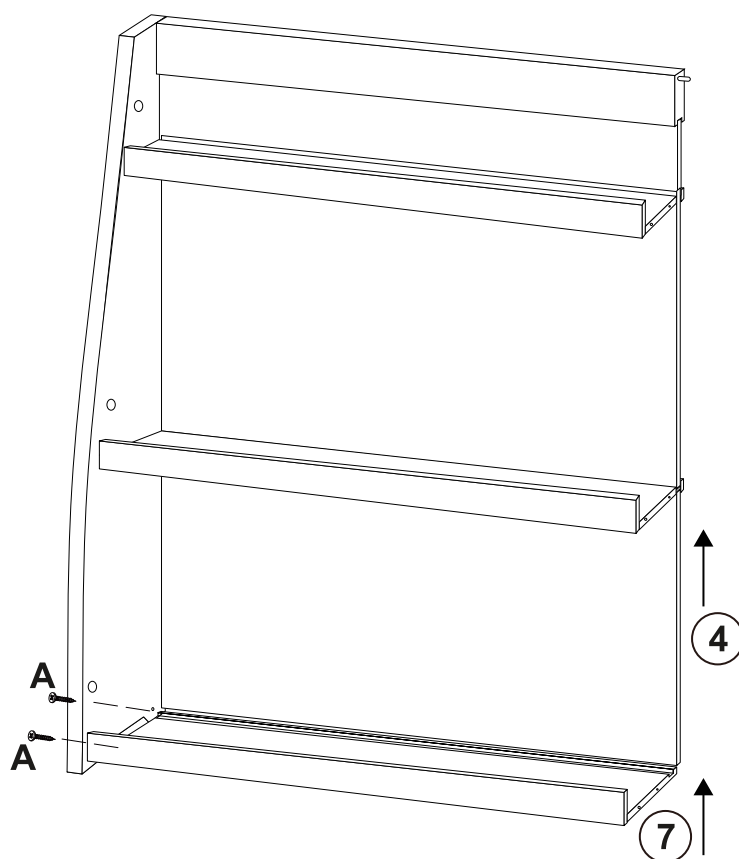AX2



5

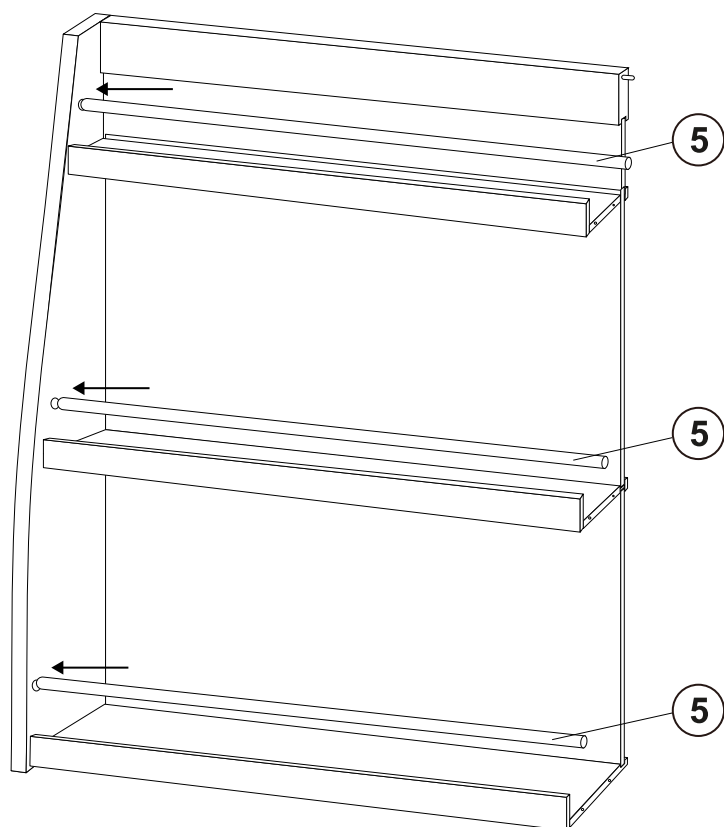



AX7

