



TV UNIT / LOW SIDEBOARD

 
ITEM CODE: 418406

Assembly Instructions


1hr

APPROXIMATE ASSEMBLY TIME

2 PEOPLE ASSEMBLY

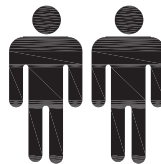


FLOOR AREA
2M x 2M

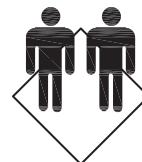 


REQUIRED ASSEMBLY SPACE

 REQUIRED ASSEMBLY TOOLS




POZI SCREWDRIVER (NOT PROVIDED)

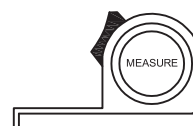 

MEASURING TAGE (NOT PROVIDED)

 ASSEMBLED DIMENSIONS

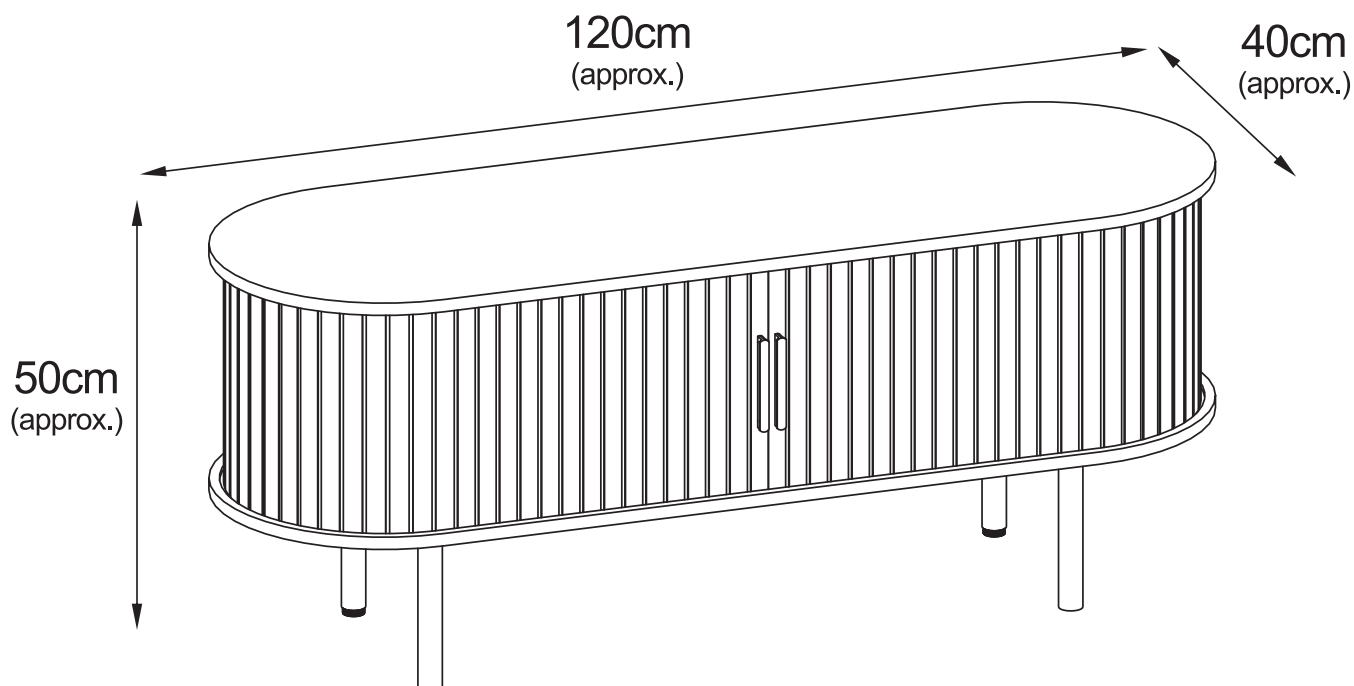

Max. Loading: 40kg (Top: 20kg, Shelf: 5kg each)


KRISTEN TV UNIT / LOW SIDEBOARD

Item Code: 418406

Assembly Instructions

PART LIST










NO	PART LIST	QTY	NO	PART LIST	QTY
①	TOP PANEL	1	⑦	BACK PANEL	2
②	BOTTOM PANEL	1	⑧	BACK SLAT	1
③	LEFT SIDE PANEL	1	⑨	FRONT SUPPORT LEG	2
④	RIGHT SIDE PANEL	1	⑩	BACK SUPPORT LEG	2
⑤	MIDDLE PANEL	1	⑪	LEFT DOOR	1
⑥	SHELF	2	⑫	RIGHT DOOR	1

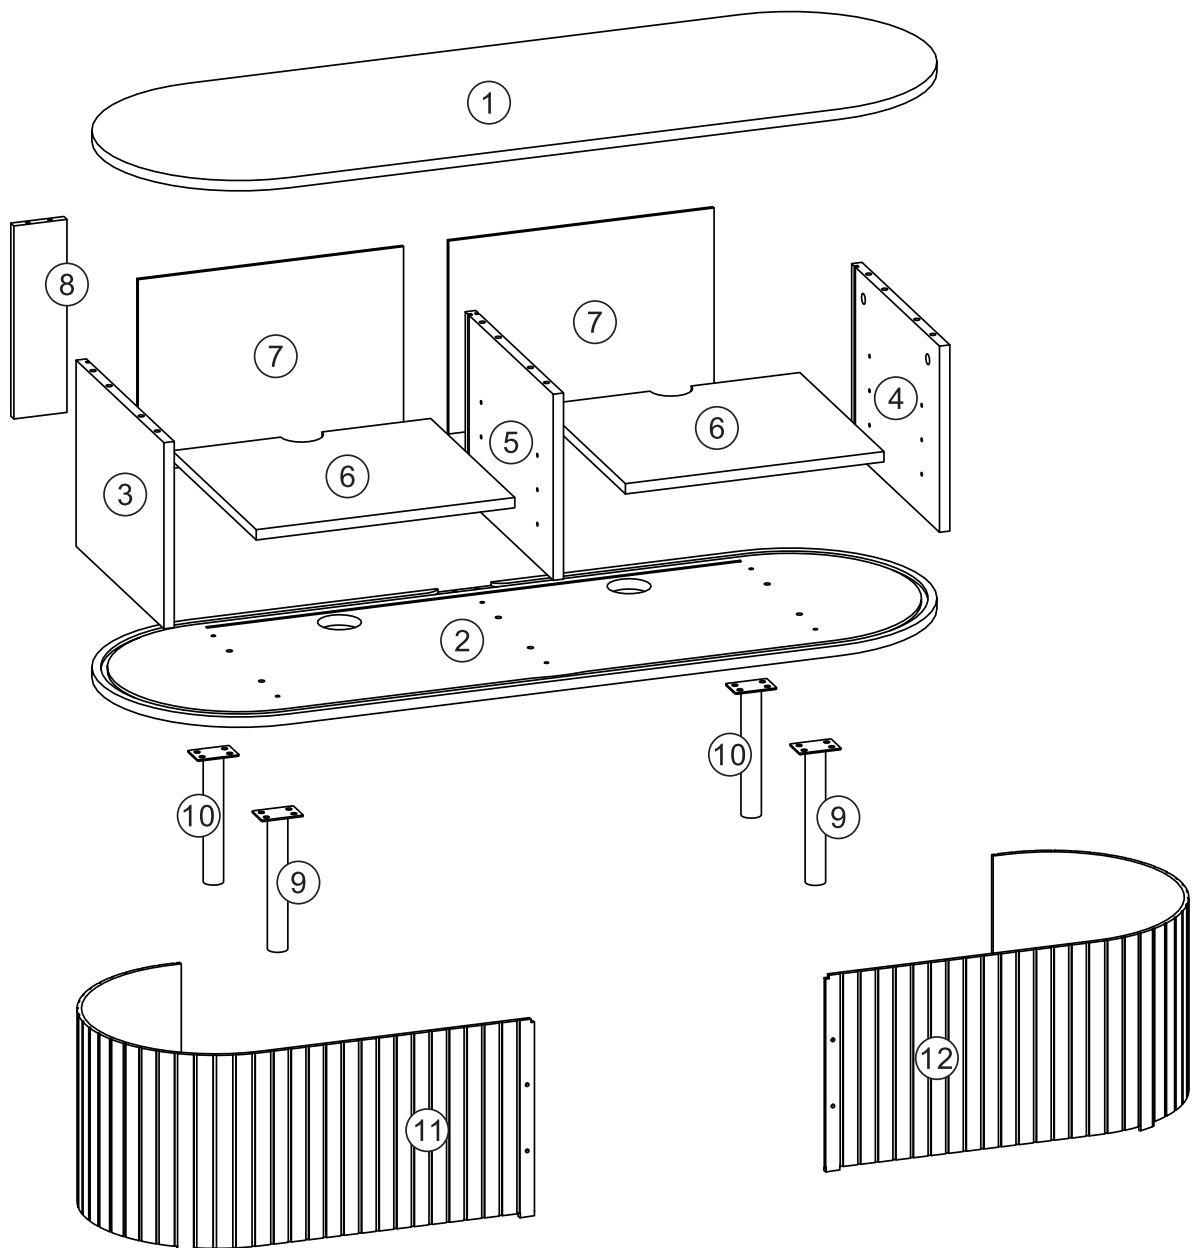 

KRISTEN TV UNIT / LOW SIDEBOARD

Item Code: 418406

         Assembly Instructions

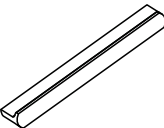A	x6	B	x6	C	x12	D	x2	E	x6
									
Ø6x45mm		Ø15x12mm		Ø8x30mm		Ø6x30mm		Ø5x45mm	
QUICK FIT		CAM LOCK		DOWEL		DOWEL		SCREW	
F	x16	G	x4	H	x8	J	x2	K	x2
									
M6x12mm		Ø4x10mm		Ø3.5x18mm		Ø3.5x35mm		113x16x10mm	
SCREW		SCREW		SCREW		SCREW		HANDLE	
L	x8	M	x1	N	x8	P	x2	Q	x1
									
15x13x10mm		4mm		Ø5x16mm		Ø25x10mm			
BACK PANEL BUCKLE		ALLEN KEY		SHELF HOLDER		ADJUSTABLE FEET			

KRISTEN TV UNIT / LOW SIDEBOARD

Item Code: 418406

Assembly Instructions



Safety Advice and Care Advice

KEEP ALL THE SAFETY ADVICE AND INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE!



WARNING! RISK OF LOSS OF LIFE OR ACCIDENT

TO INFANTS AND CHILDREN! Never leave children unsupervised with the packaging materials. Danger of suffocation.



CAUTION! RISK OF INJURY! Make sure that all parts are undamaged and assembled correctly. Improper assembly carries a risk of injury. Damaged parts may affect the safety and function of the product.

- Adult assembly required.
- Power tools are not recommended for the assembly of this product.
- Make sure that this product is stable & used only on a solid & flat surface.
- Do not use this product unless all screws and fixings are firmly secured.
- Do not leave children unsupervised! The product is not a climbing frame or a toy!
- Do not stand, sit or lean on this product
- Do not use this product as a step ladder or as a chopping surface.
- Do not lift or move the product when it is loaded.
- Do not load more than a total of 40kg (top: 20kg, shelf: 5kg each) onto the unit, otherwise there is a risk of injury and/or damage to the product
- Distribute weight evenly across the product so that it cannot overturn.
- Do not place hot items such as coffee cups directly on the surface(s) unless adequately thick table mats are used.
- Please periodically check all fittings and re-tighten as necessary.
- For Indoor & Domestic use only.

Care instructions:

- Wipe clean with a dry cloth.
- Do not use scourers, abrasive or chemical solvents.
- Keep away from moisture and direct sunlight.
- Keep away from fire and inflammable objects.

 
KRISTEN TV UNIT / LOW SIDEBOARD

Item Code: 418406



Assembly Instructions

SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

CAM-LOCK

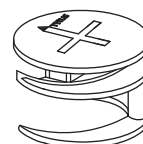

  
WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE

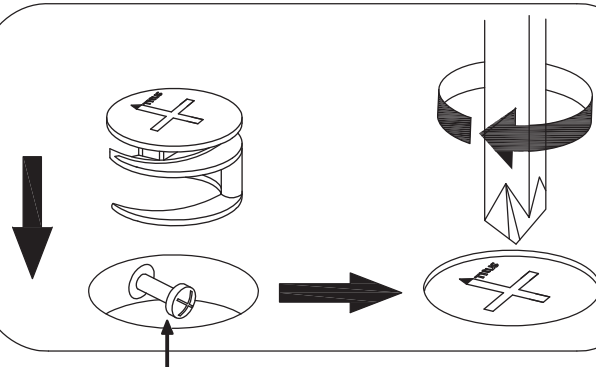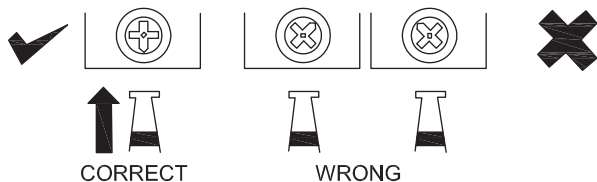

Quickfit head needs to be in centre

QUICKFIT

 Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

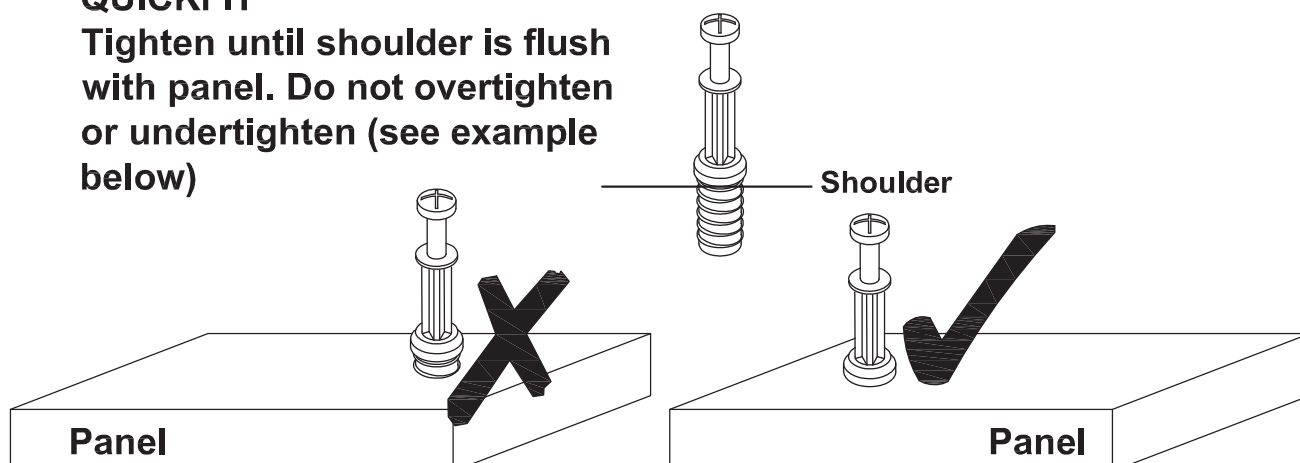


KRISTEN TV UNIT / LOW SIDEBORD

Item Code: 418406

Assembly Instructions


STEP 1

 
Ø8x30mm
C x 12

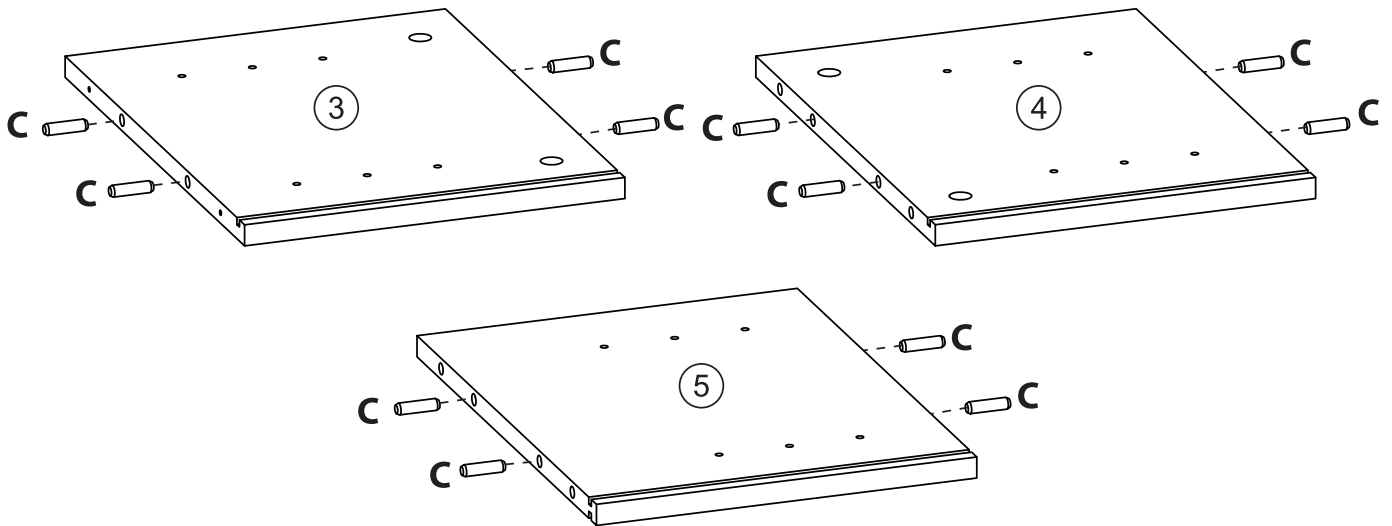

STEP 2

 
Ø6x45mm
A x 6

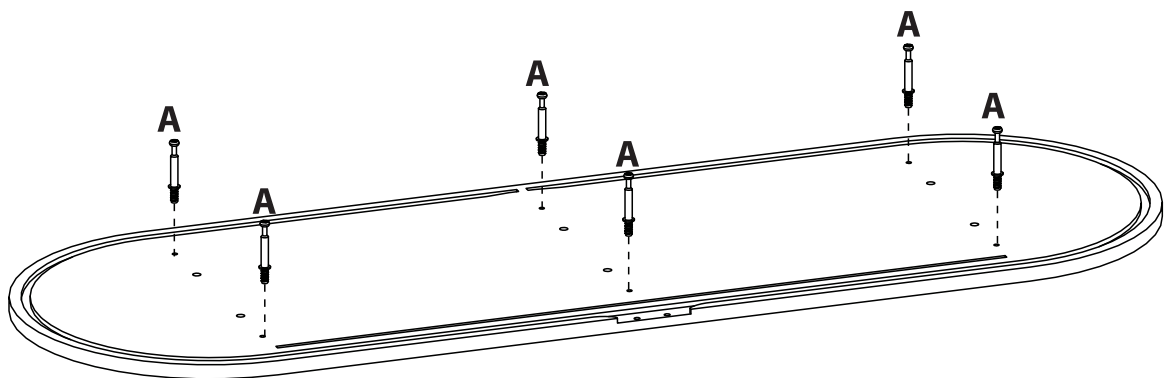

KRISTEN TV UNIT / LOW SIDEBOARD

 
Item Code: 418406

Assembly Instructions


STEP 3



Ø15x12mm
B x 6

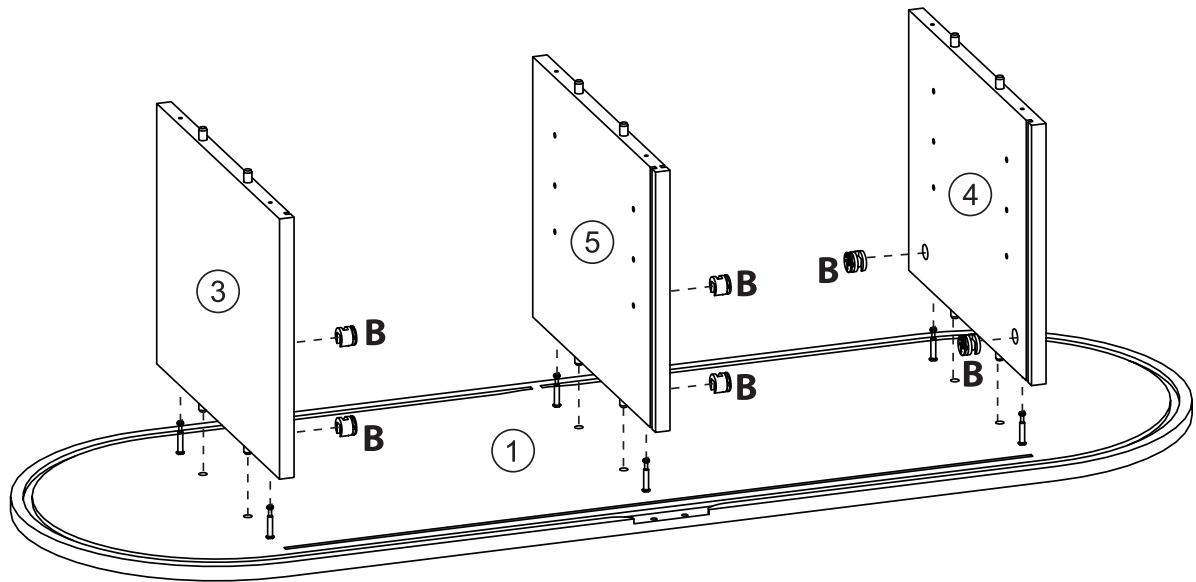

 STEP 4


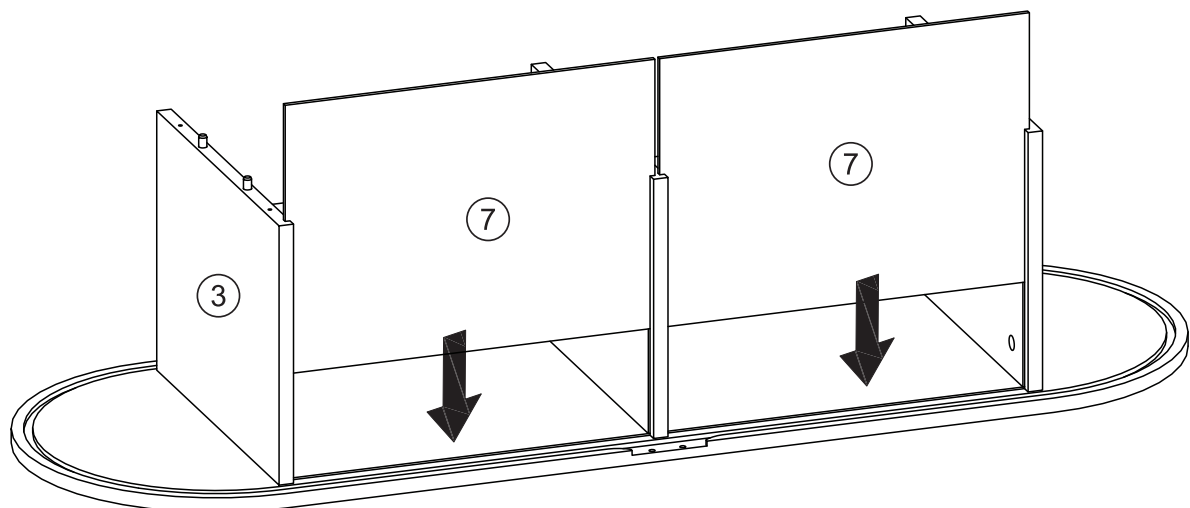


KRISTEN TV UNIT / LOW SIDEBORD



Item Code: 418406

Assembly Instructions

  STEP 5

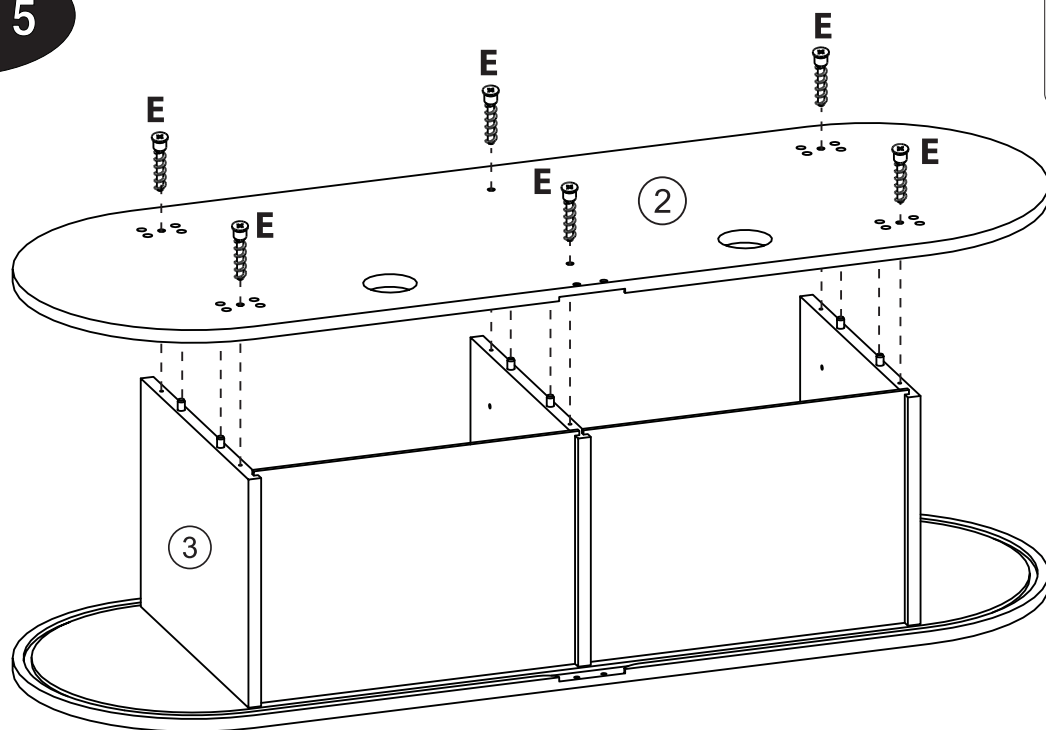

  STEP 6

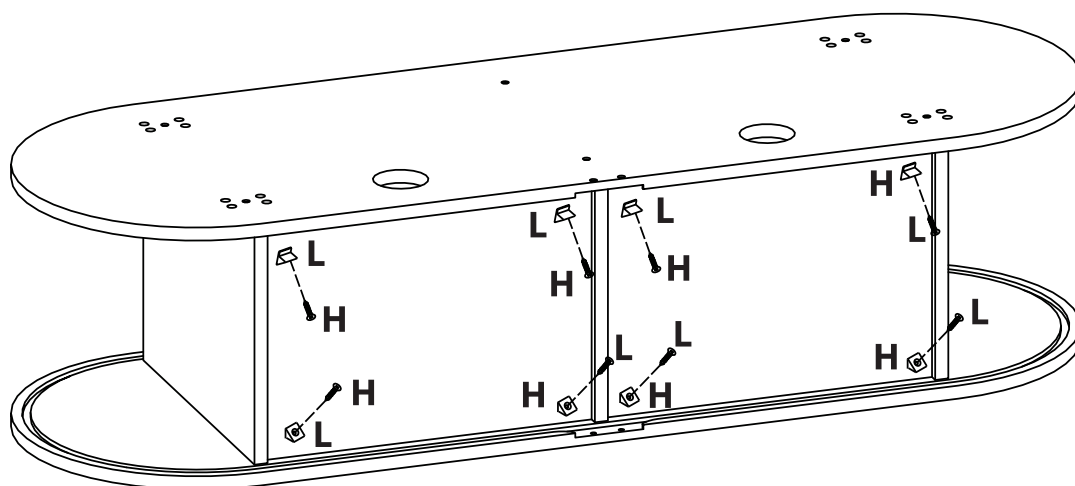


KRISTEN TV UNIT / LOW SIDEBORD


Item Code: 418406

Assembly Instructions

 STEP 7

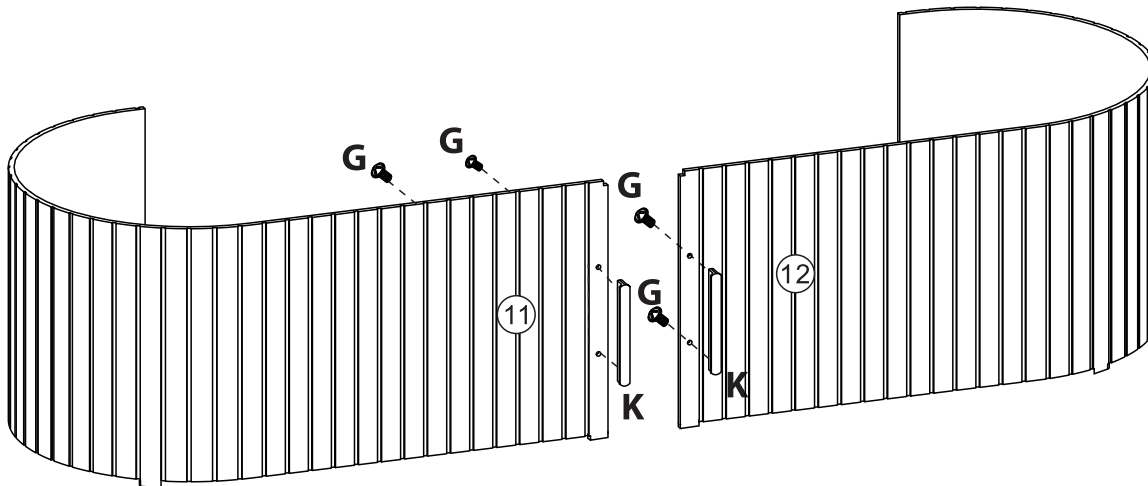

 STEP 8

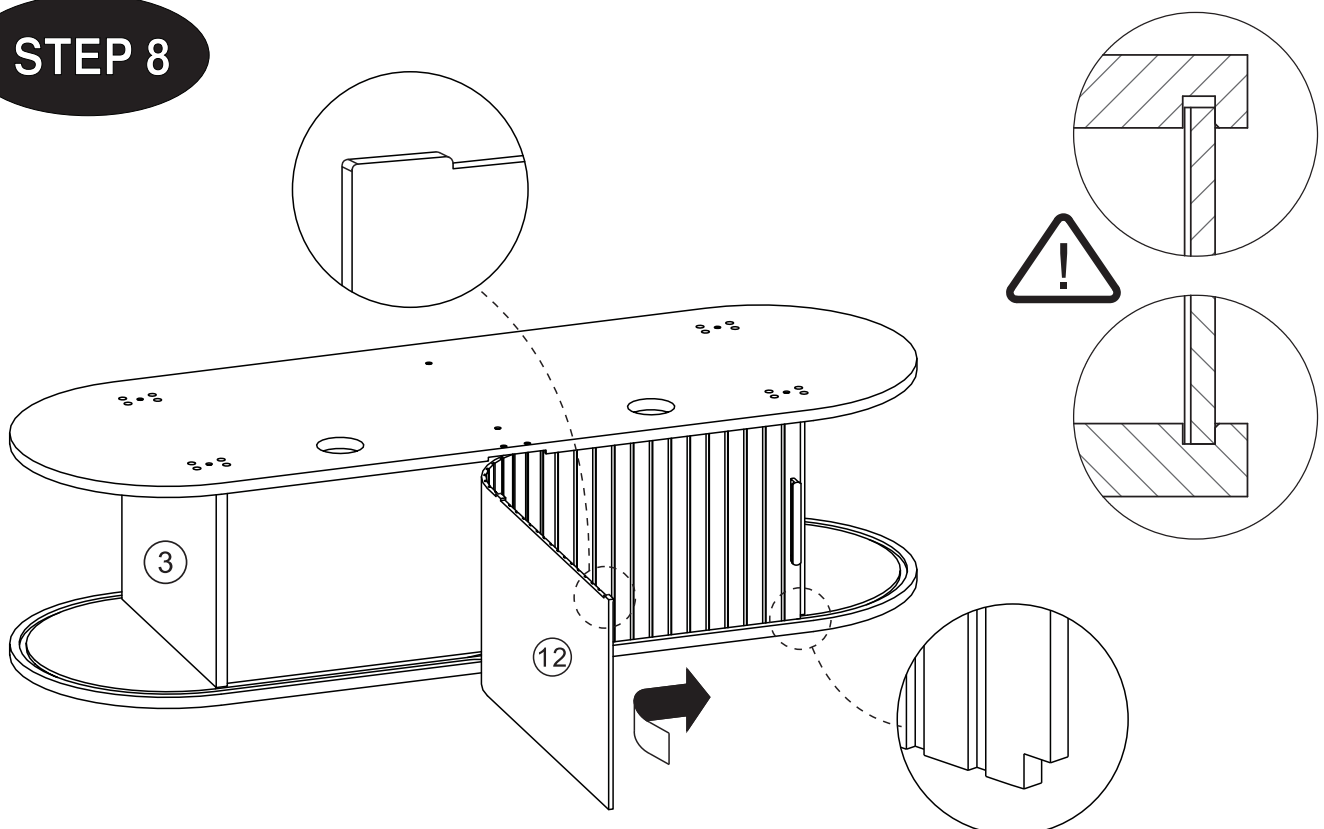


KRISTEN TV UNIT / LOW SIDEBOARD


Item Code: 418406

Assembly Instructions

 STEP 9

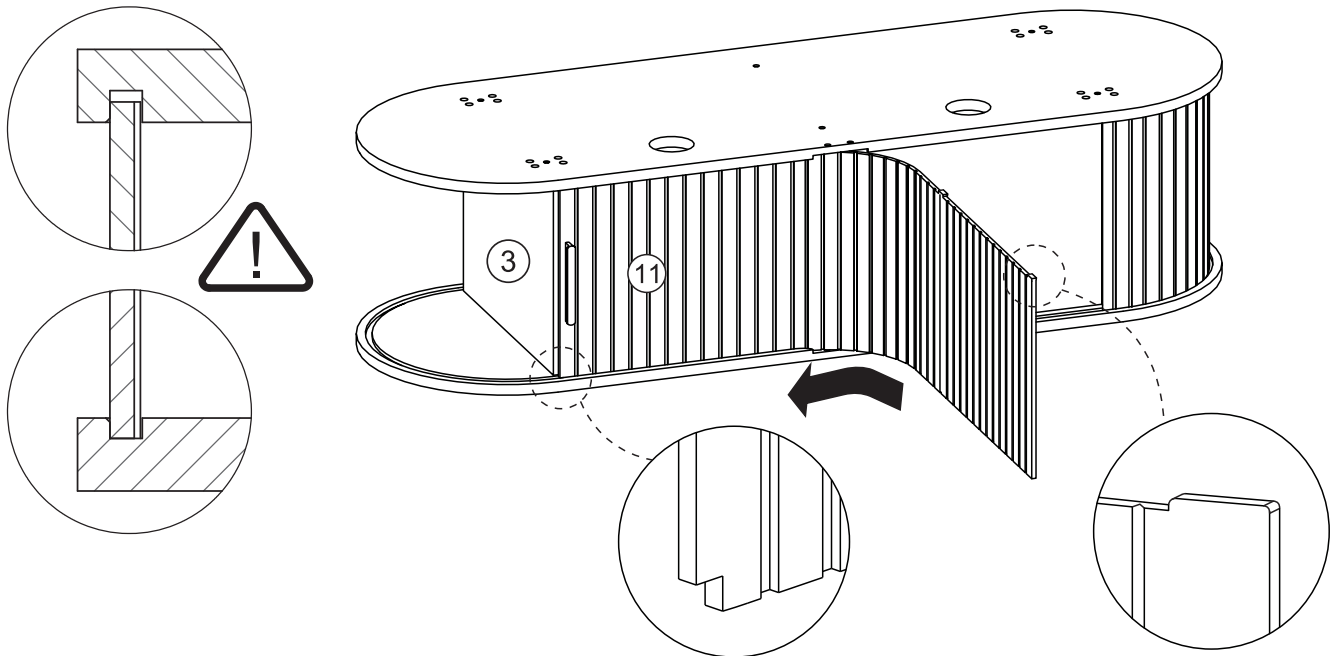

 STEP 10

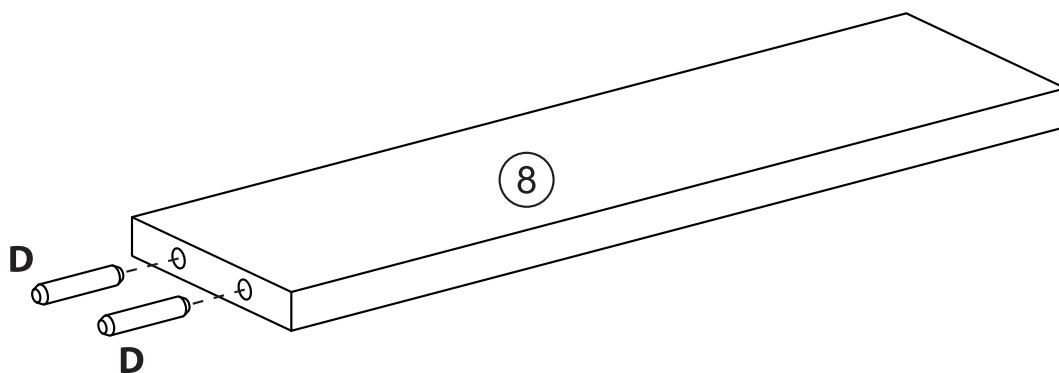


Ø6x30mm
D x 2

KRISTEN TV UNIT / LOW SIDEBORD



Item Code: 418406

Assembly Instructions

 STEP 11



Ø3.5x35mm
J x 2

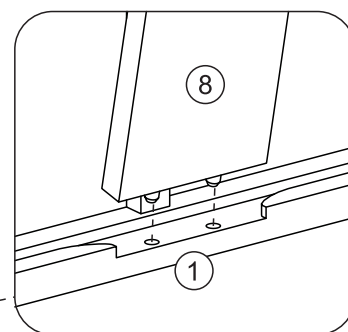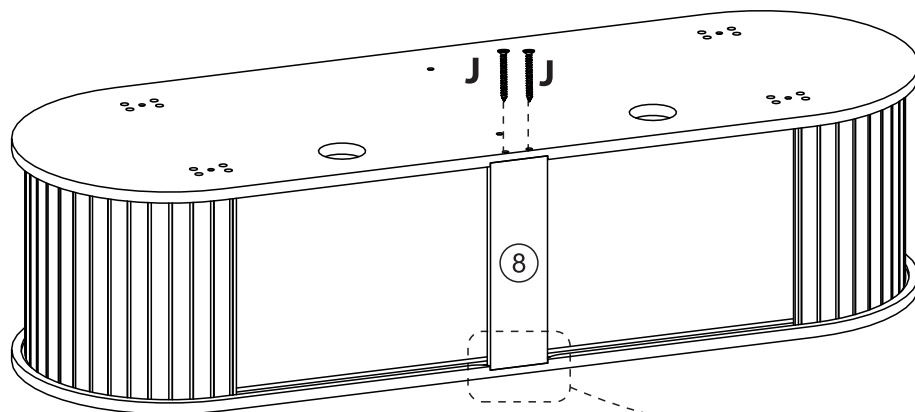  

STEP 12



 
 
M6x12mm
F x 16



4mm
M x 1



Ø25x10mm
P x 2

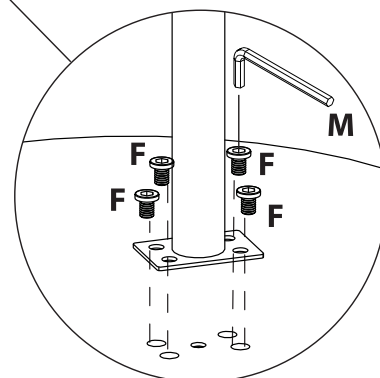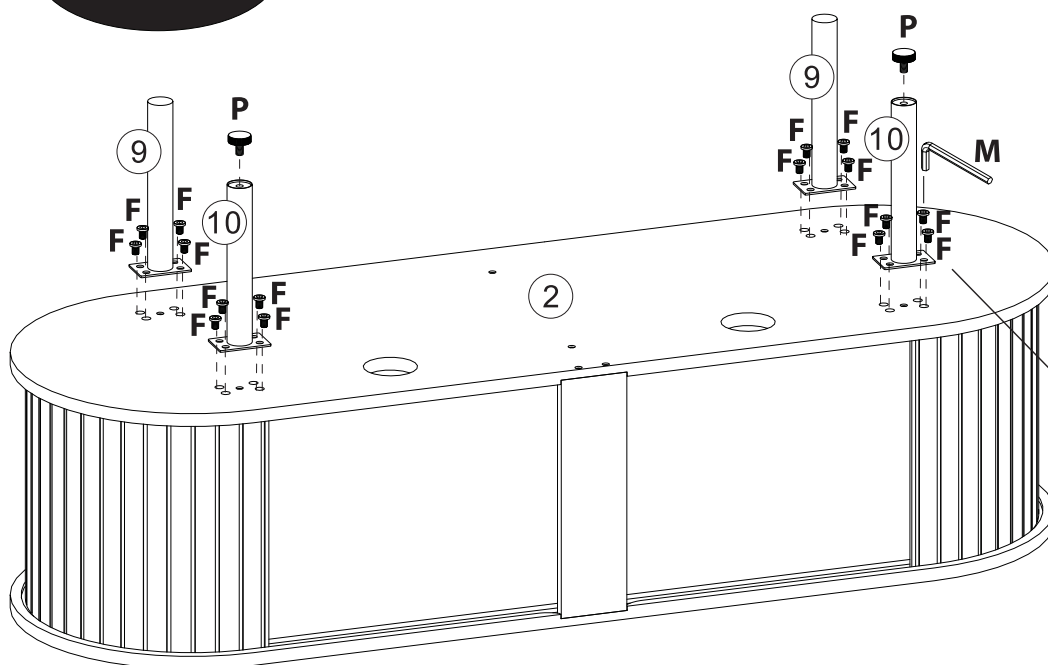

KRISTEN TV UNIT / LOW SIDEBORD

 
Item Code: 418406

Assembly Instructions


STEP 13



Ø5x16mm
N x 8

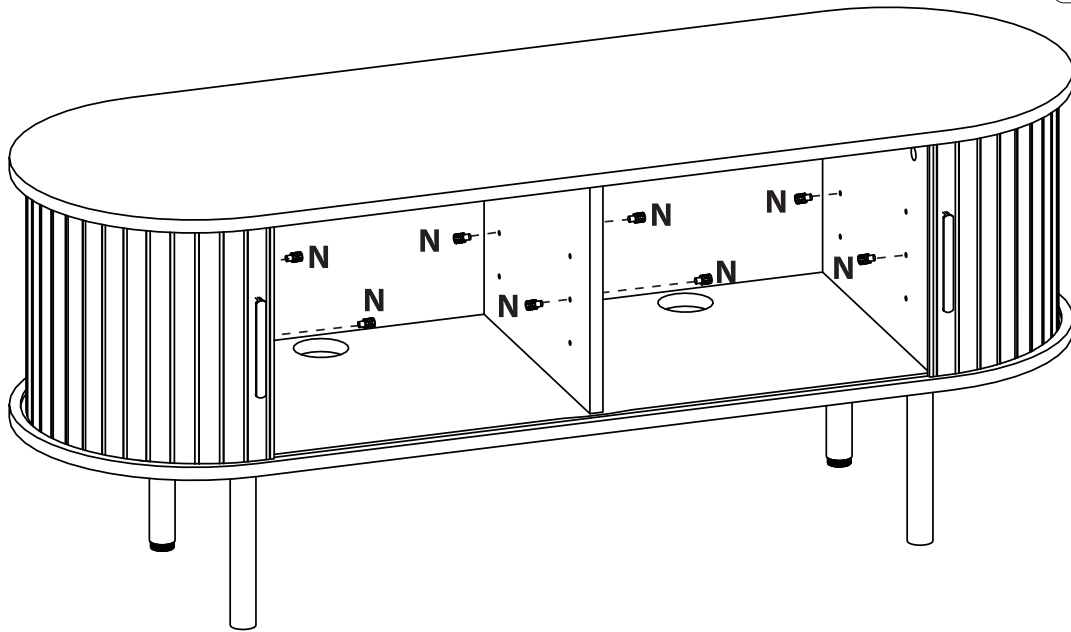

 STEP 14


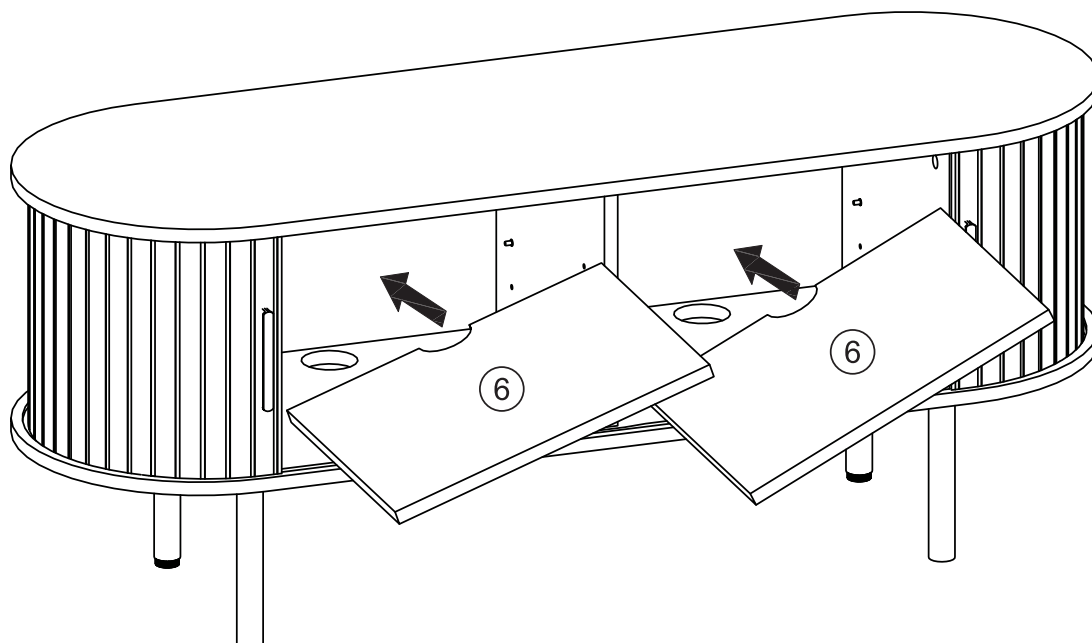


KRISTEN TV UNIT / LOW SIDEBOARD

Item Code: 418406

Assembly Instructions

  STEP 15

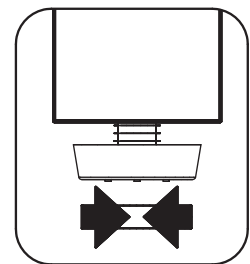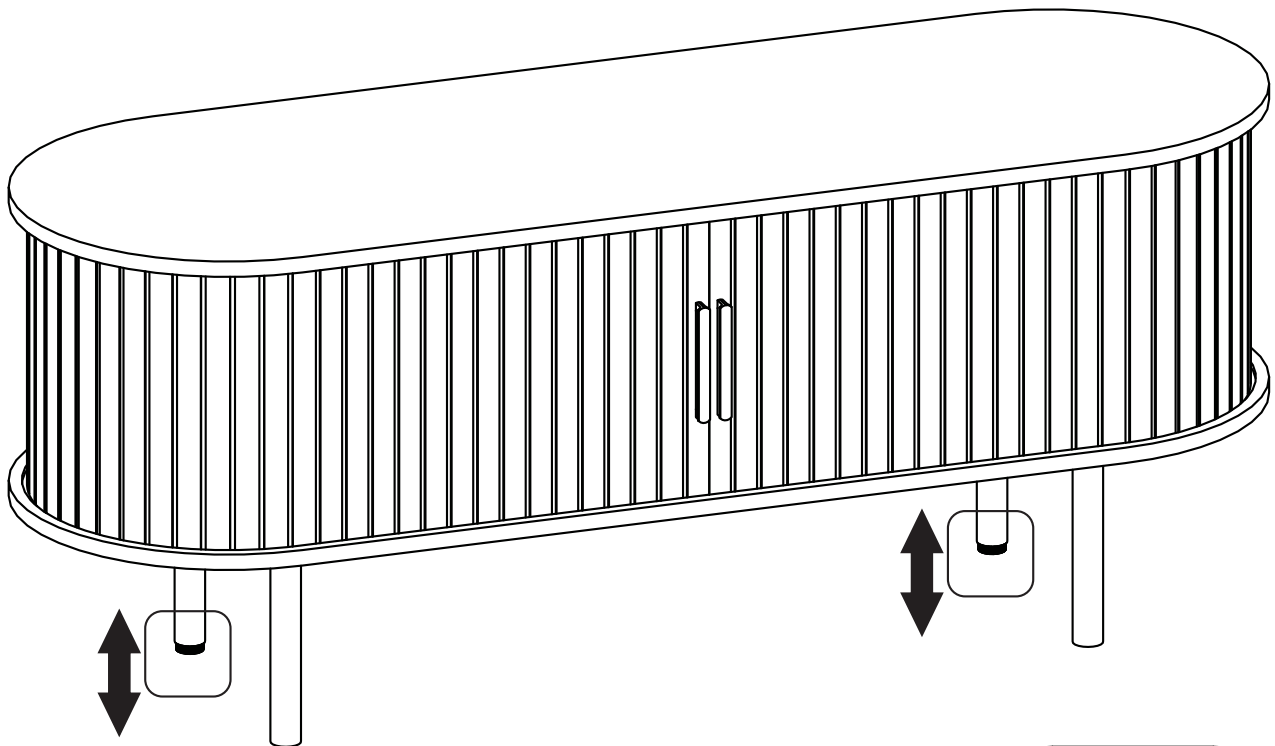

adjustable feet