

## Mayfair

#### **TV UNIT**

Item Code: 418774
Assembly Instructions

1.0 hr

APPROXIMATE ASSEMBLY TIME

 
**2 PEOPLE ASSEMBLY** 

FLOOR AREA 2Mx2M



**REQUIRED ASSEMBLY SPACE** 

REQUIRED ASSEMBLY TOOLS




POZI SCREWDRIVER (Not Provided)




MEASURING TAPE (Not Provided)

#### ASSEMBLED DIMENSIONS

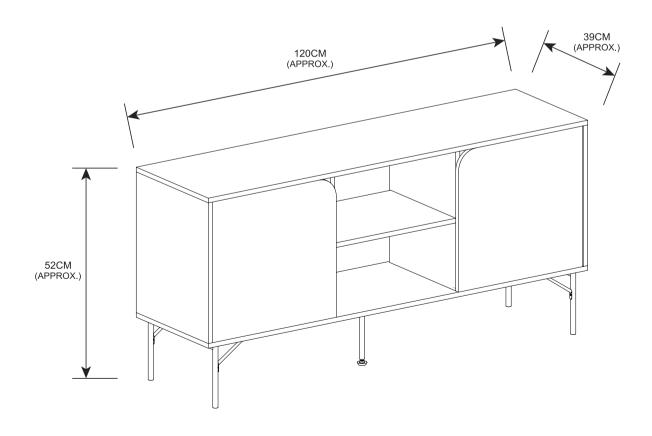


MAX LOADING: 40KG (TOP: 20KG, SHELF: 5KG EACH)

NO.	PART LIST	QTY	NO.	PART LIST	QTY
1	TOP PANEL	1	8	LEFT SIDE DOOR PANEL	1
2	LEFT SIDE PANEL	1	9	BOTTOM PANEL	1
3	LEFT SIDE MIDDLE PANEL	1	10	METAL LEG	2
4	RIGHT SIDE MIDDLE PANEL	1	11	METAL BAR	1
5	RIGHT SIDE PANEL	1	12	MIDDLE METAL LEG	1
6	BACK PANEL	1	13	METAL BAR	4
7	SHELF PANEL	1	14)	RIGHT SIDE DOOR PANEL	1

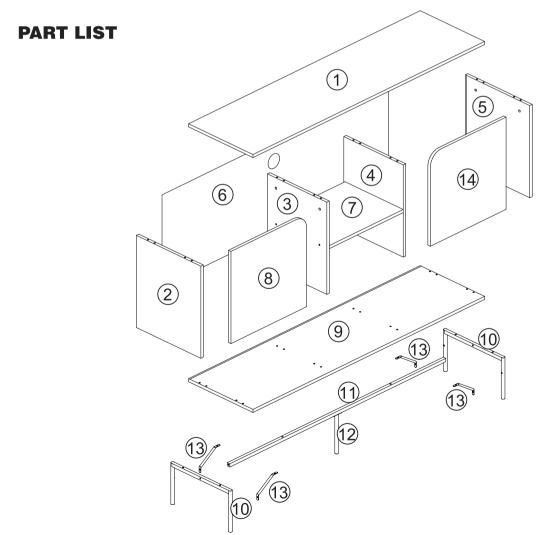

## Item Code: 418774 Assembly Instructions

#### **HARDWARE LIST**

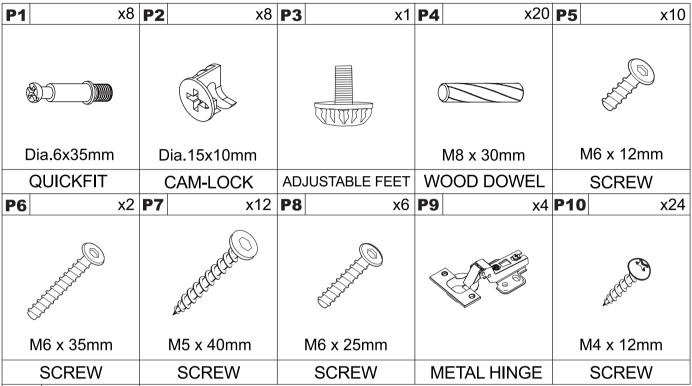

P11 x1

ALLEN WRENCH

## Item Code: 418774 Assembly Instructions



#### **Safety Advice and Care Advice**

KEEP ALL THE SAFETY ADVICE AND INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE!

#### MARNING! RISK OF LOSS OF LIFE OR ACCIDENT

**TO INFANTS AND CHILDREN!** Never leave children unsupervised with the packaging materials. Danger of suffocation.

⚠ CAUTION! RISK OF INJURY! Make sure that all parts are undamaged and assembled correctly. Improper assembly carries a risk of injury. Damaged parts may affect the safety and function of the product.

- Adult assembly required.
- Power tools are not recommended for the assembly of this product.
- Make sure that this product is stable & used only on a solid & flat surface.
- Do not use this product unless all screws and fixings are firmly secured.
- Do not leave children unsupervised! The product is not a climbing frame or a toy!
- Do not stand, sit or lean on this product.
- Do not use this product as a step ladder or as a chopping surface.
- Do not lift or move the product when it is loaded.
- Do not load more than a total of 40kg (Top: 20kg, Shelf: 5kg each) onto the unit, otherwise there is a risk of injury and/or damage to the product.
- Distribute weight evenly across the product so that it cannot overturn.
- Do not place hot items such as coffee cups directly on the surface(s) unless adequately thick table mats are used.
- · Please periodically check all fittings and re-tighten as necessary.
- · For Indoor & Domestic use only.


#### Care instructions:


- · Wipe clean with a dry cloth.
- Do not use scourers, abrasive or chemical solvents.
- Keep away from moisture and direct sunlight.
- Keep away from fire and inflammable objects.
- Store in a dry place.

Item Code: 418774
Assembly Instructions

# SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

CAM-LOCK

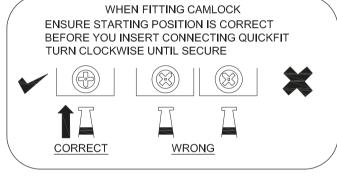


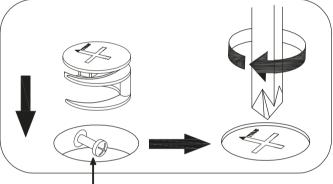



Quickfit head needs to be in centre


#### QUICKFIT


Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

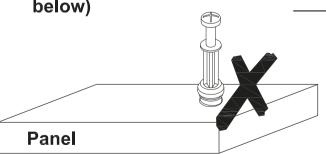


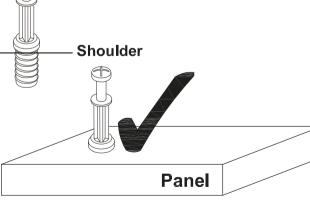


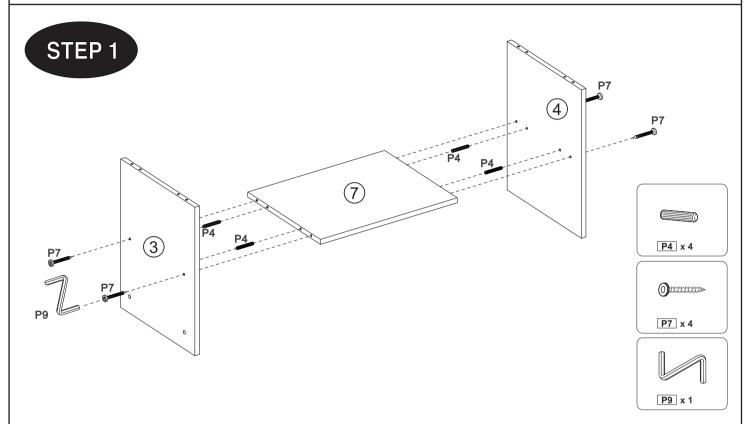


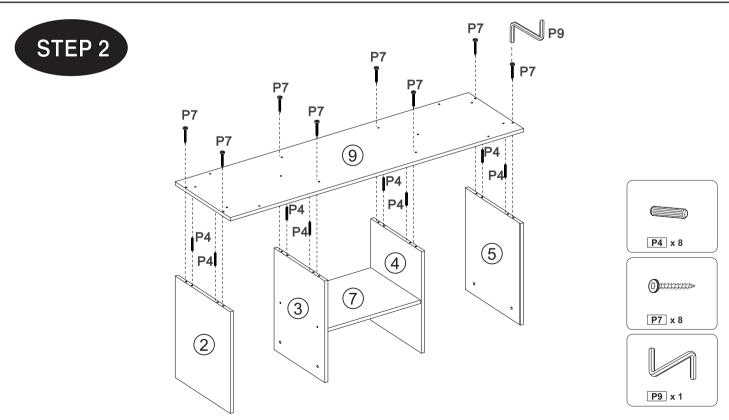


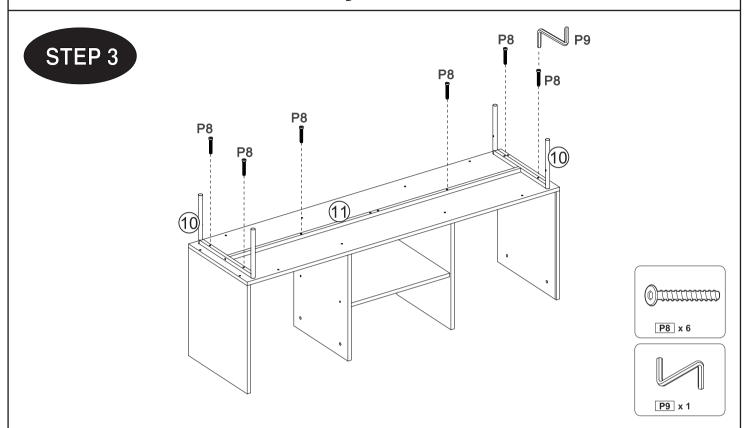


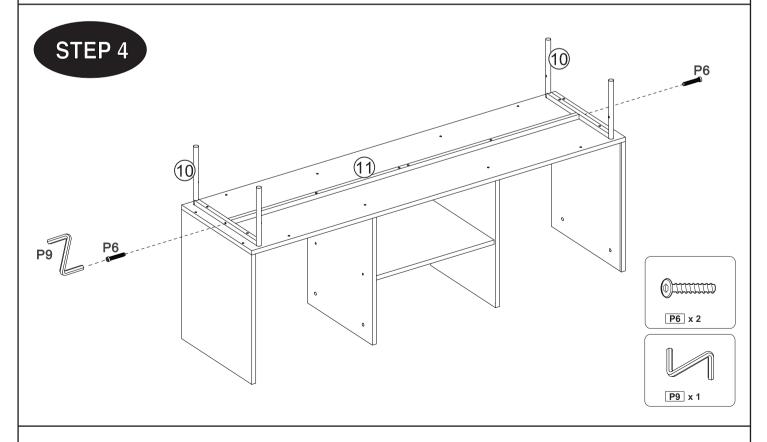

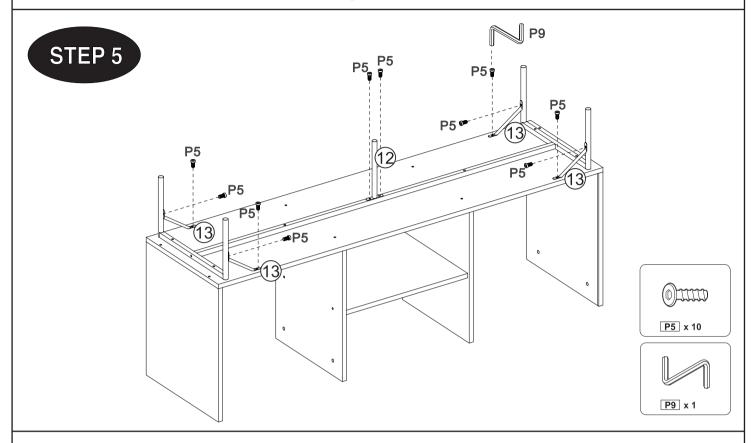

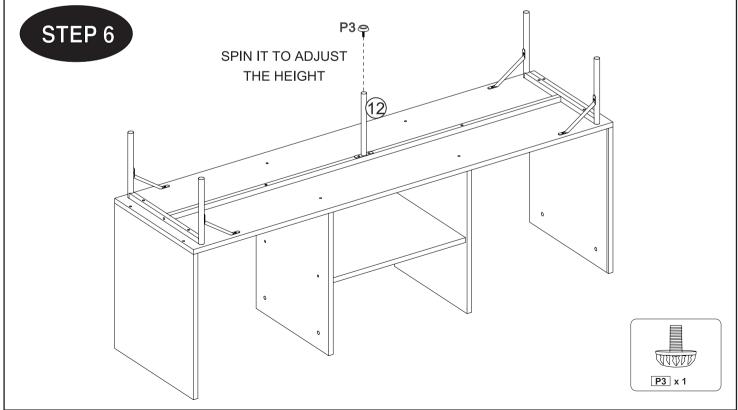

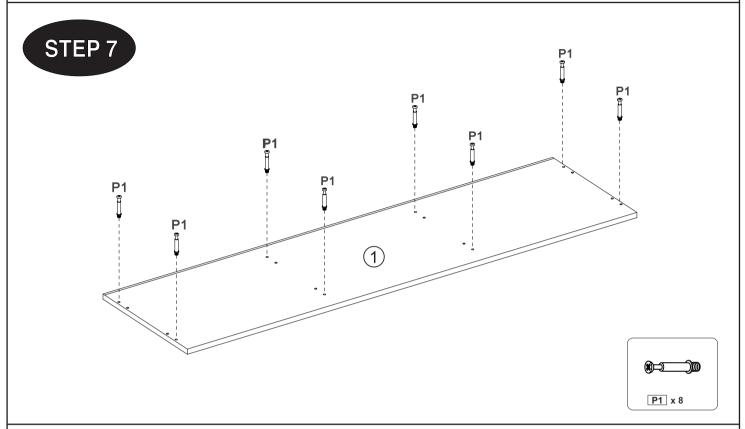


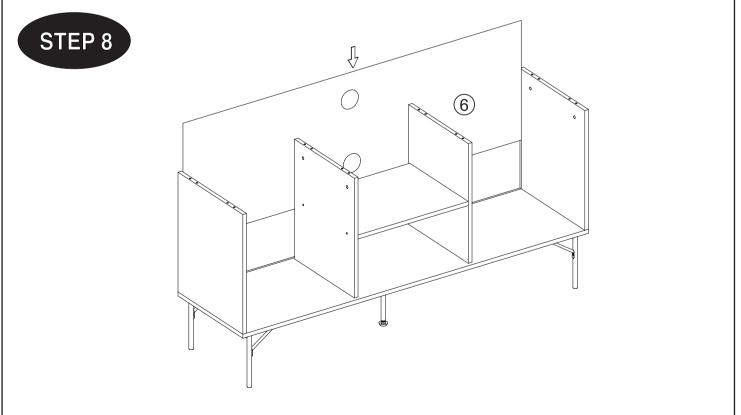

Item Code: 418774
Assembly Instructions


STEP 9 1 P4 P4 IP4 P4 P4 P2 P4 P2\_\_\_ P2 P2 (4) (5) P2 3 2 P2 x 8 


P4 x 8

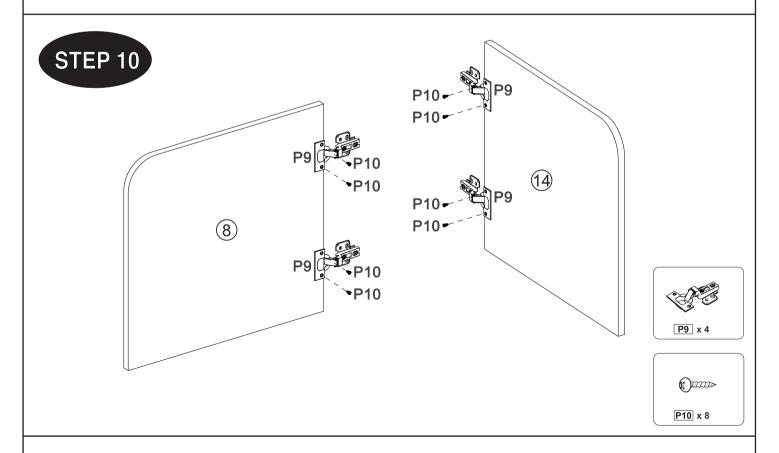

## Item Code: 418774 Assembly Instructions

STEP 11

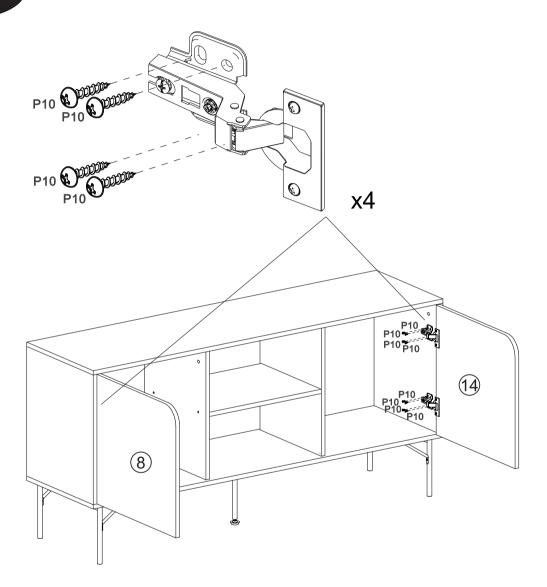

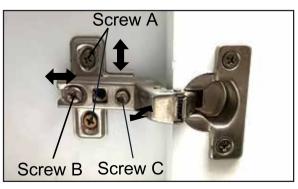

#### IMPORTANT: IF DOOR NOT ALIGNED

Screw A: You can adjust the doors up and down by releasing screw A.

Screw B: Release Screw B you can move the door forward or back till it is in the right position, then fully screw them.


Screw C: You can adjust the gap between the door and the side board by turning Screw C clockwise or anti-clockwise.



P10 x 16

Item Code: 418774
Assembly Instructions

STEP 12

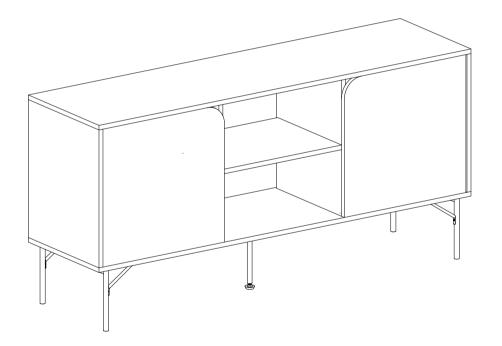

Domestic use only.