




Beside
Item Code: 425074
Assembly Instructions

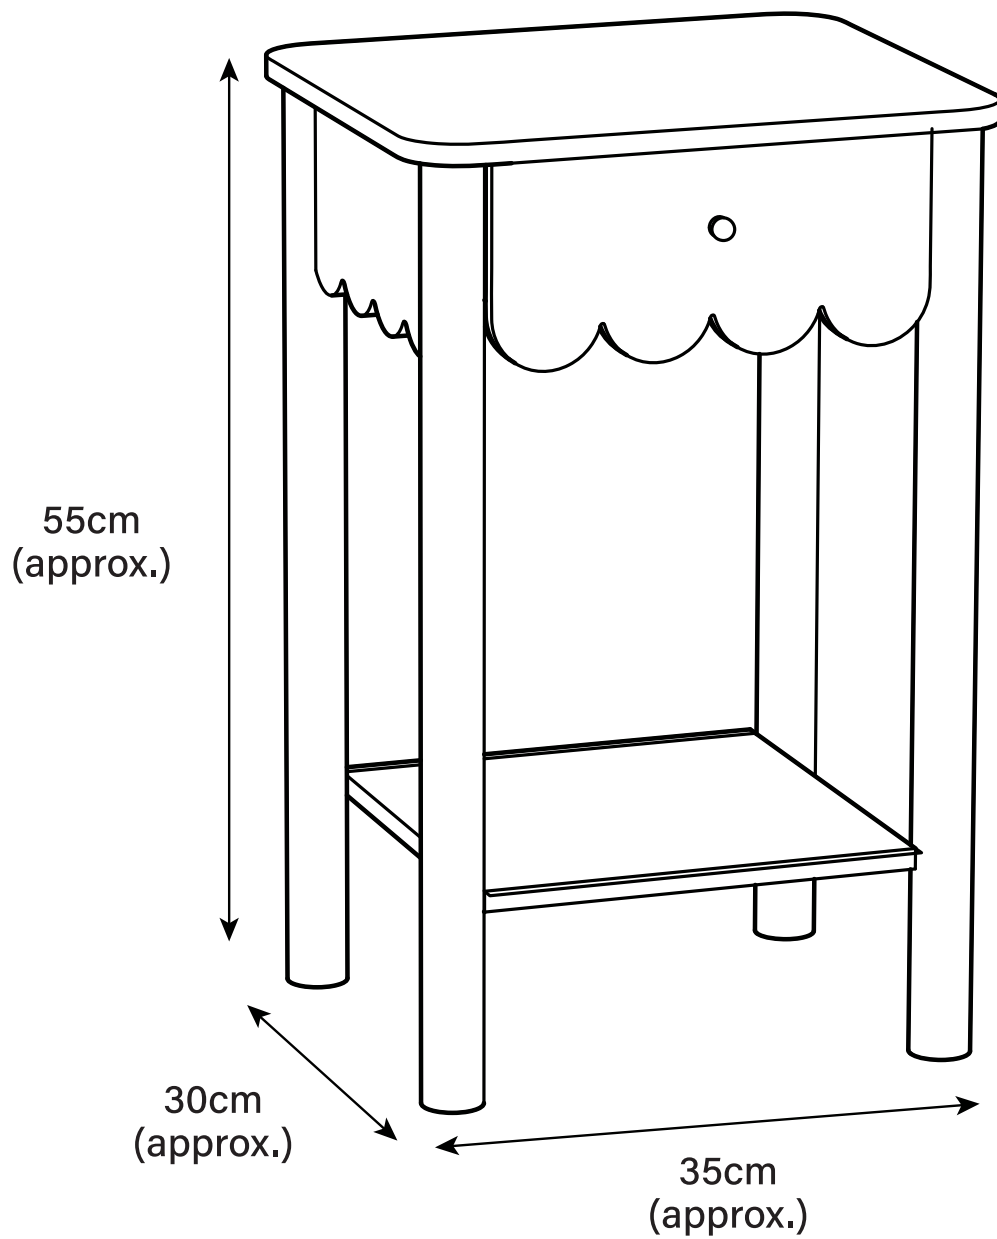

SAFETY INFORMATION

Top Tips Before You Start

- Please check that all parts are present before you start the assembly of your furniture.
- Assess the suitability of the wall or ceiling to ensure that the fastening devices will withstand the forces generated.
- For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
- Please ensure that you have sufficient space and people to assemble your product safely.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.

Warnings:


- Adult assembly is required. The assembly should be checked by an adult before each use.
- Unassembled product contains small parts which may present a choking hazard.
- Children should be kept away from the product during assembly to avoid any possible risk of injury.
- Do not use power tools in the assembly of this product as there is a risk of over - tightening and consequently splitting of the wood.
- This product is not suitable for children under age 3 & recommended for children in the age 3 to 6.
- Do not load more than 5kg (Top: 2kg / Drawer: 1kg / Shelf: 2kg) onto product. Otherwise there is a risk of injury and/or damage to the product.
- Adult supervision is required at all times whilst children play with this product.
- Do not use this item if any components are missing or damaged.
- Please remove all packaging and packing tags/wires before presenting to a child.
- Small parts. Choking hazard. Packaging is not a toy.
- The parent should regularly check all fittings and re-tighten as necessary before giving the product to children.
- Always place the product on flat, steady and stable surface to prevent tipped over.
- Do not stand on the product. Do not use the product as a stepladder.
- This product is intended for indoor, household use only as it is non industrial product.

Care and Maintenance of Your Furniture:



- Surface wipe only.
- To clean your item, please use a damp cloth and wipe clean. Dry naturally.
- Do not place hot items (e.g. hot drink) directly on the surface.
- Do not use cleaning products which contain ammonia, solvents or abrasive material.
- Do not drag and pull your furniture.
- Do not expose the item to extremes of heat and humidity.
- Examine the product regularly for wear before giving to a child.
- Do not let children play with broken furniture to avoid accidental swallowing suffocation.
- Please retain this information for future reference.

Part List




PART LIST

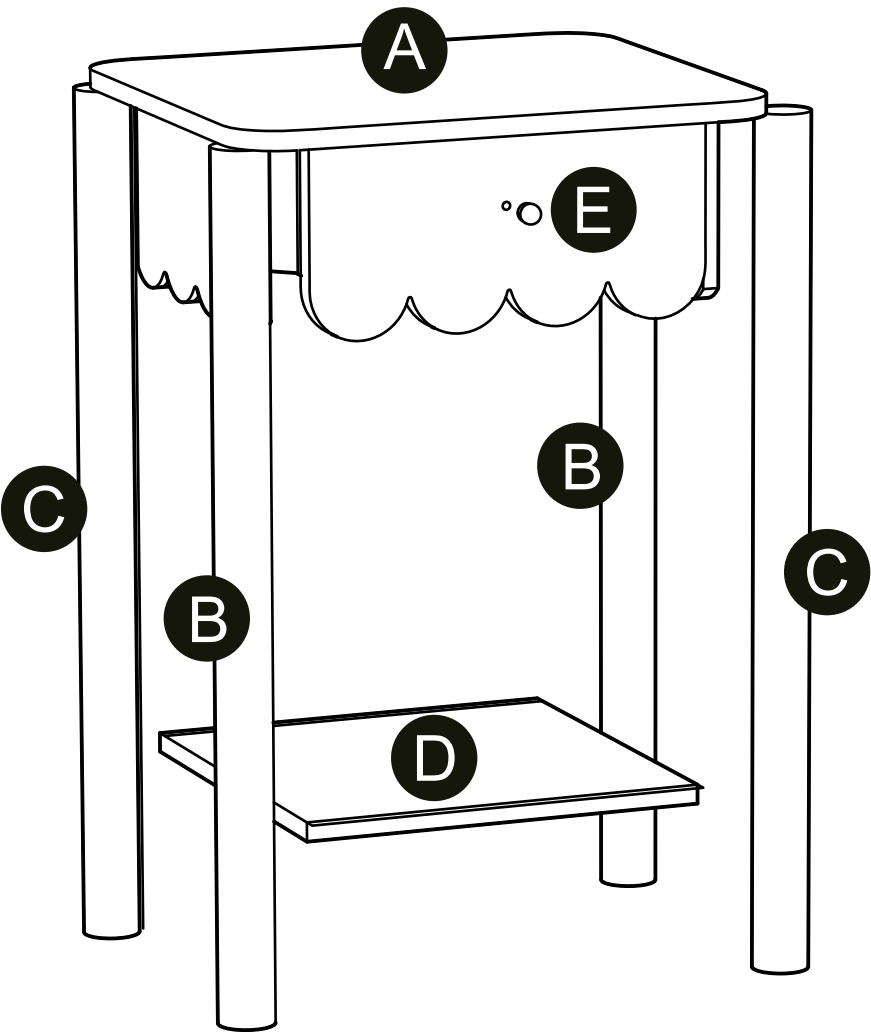


HARDWARE LIST

 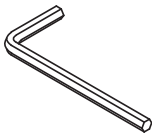A  x1	B  x2	C  x2	D  x1	E  x1
F  x4	G  x8	H  x4	I  x1	J  x1


STEP 1

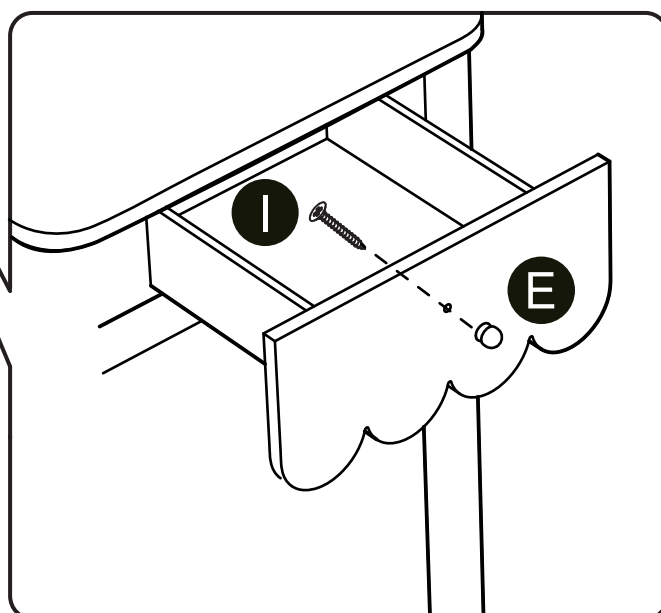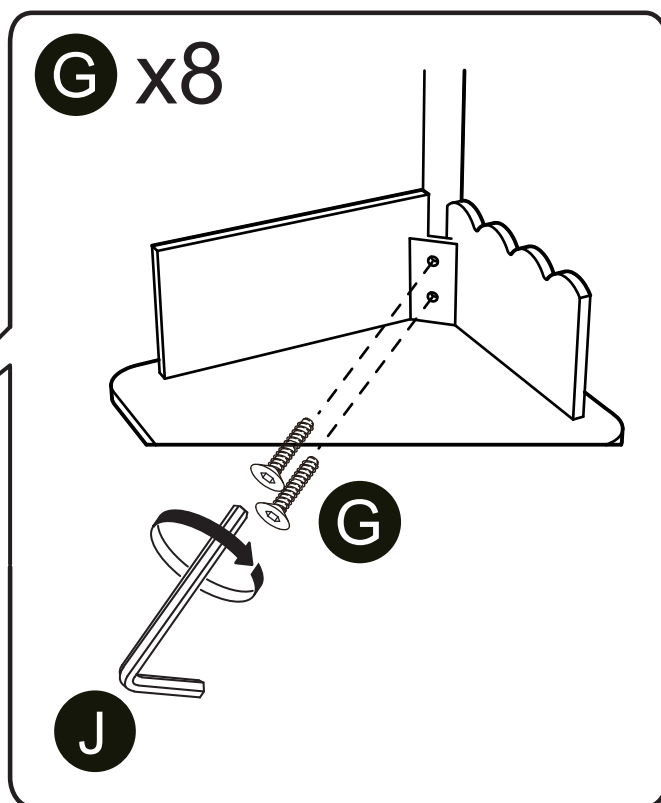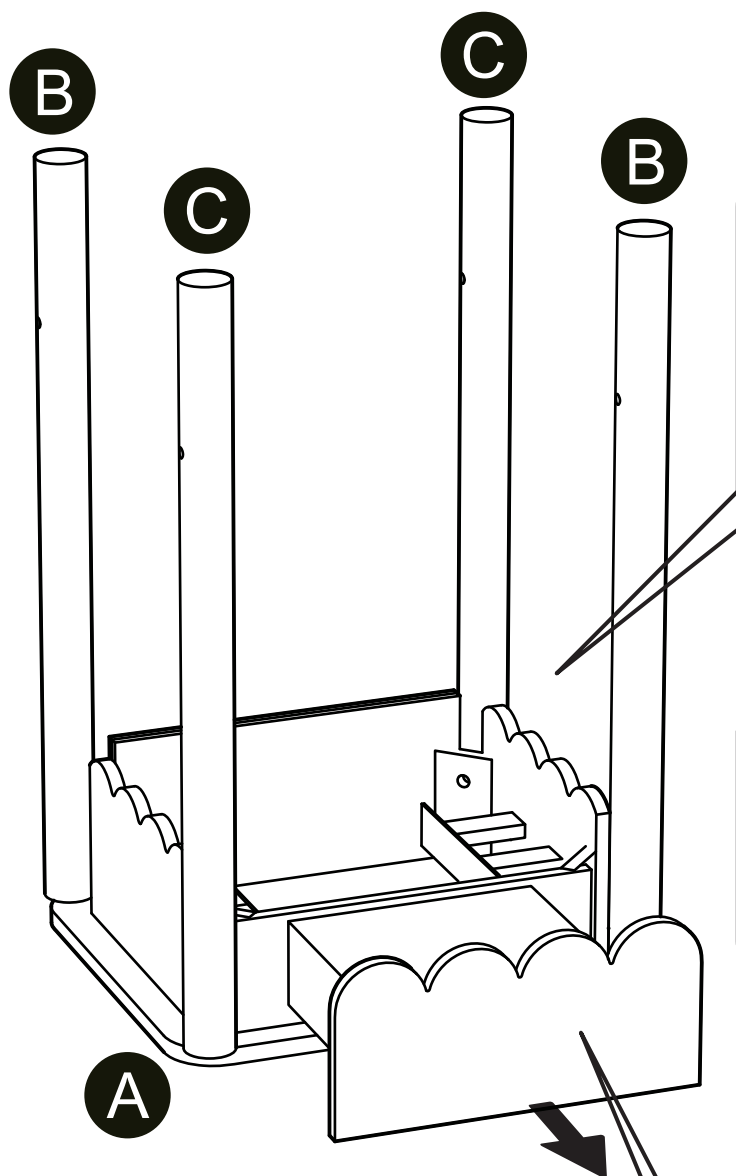

STEP 2

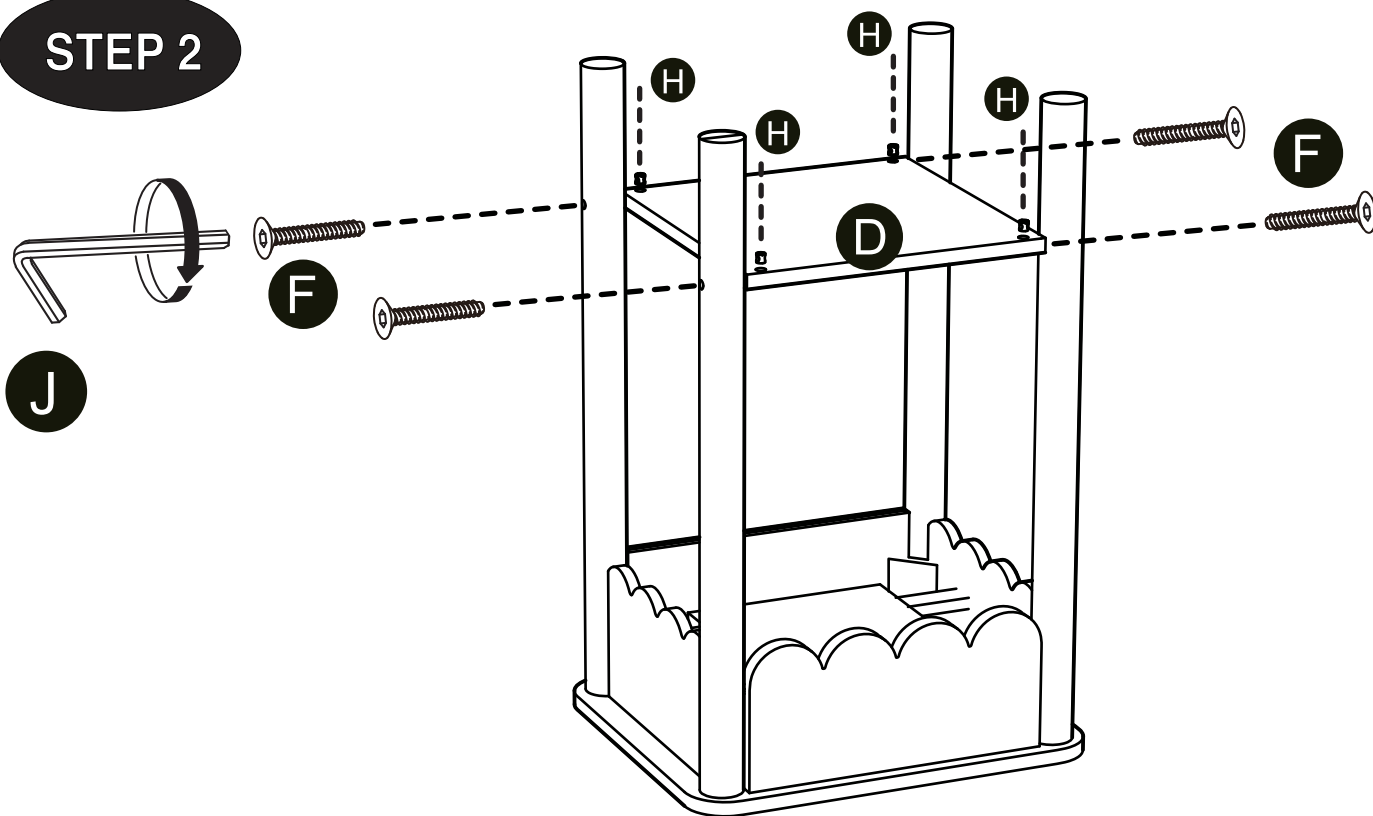

STEP 3

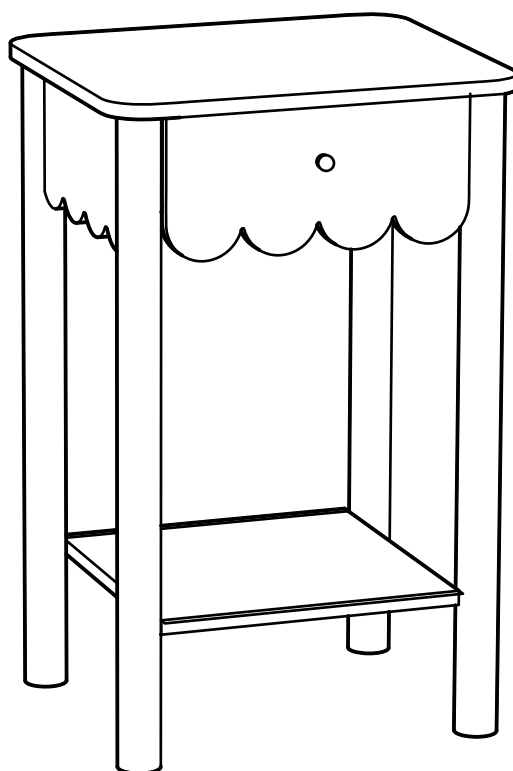

Max. Loading: 5kg
(Top: 2kg/ Drawer: 1kg/ Shelf: 2kg)



Domestic use only
B&M Retail, L24 8RJ, UK
www.bmstores.co.uk
B&M France SAS, 8 Rue du Bois Joli, 63800, France
MADE IN CHINA