

LED

2 DRAWER BEDSIDE

ITEM CODE: 428675
Assembly Instructions

1.0 hrs

APPROXIMATE ASSEMBLY TIME 2 PEOPLE ASSEMBLY

 


FLOOR AREA 2Mx2M




REQUIRED ASSEMBLY SPACE

REQUIRED ASSEMBLY TOOLS




SLOTTED SCREWDRIVER(Not Provided)

 POZI SCREWDRIVER(Not Provided)



MEASURING TAPE (Not Provided)

ASSEMBLED DIMENSIONS

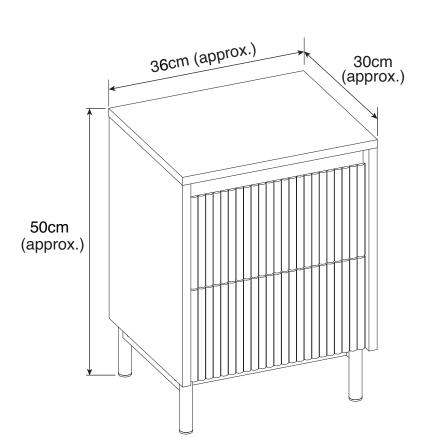


MAX LOADING: 14KG (TOP: 10KG, DRAWER: 2KG EACH)

1 - 15

ITEM CODE: 428675 Assembly Instructions

PART LIST

NO.	PART LIST	QTY	NO.	PART LIST	QTY
1	TOP PANEL	1	8	DRAWER FRONT PANEL	1
2	LEFT SIDE PANEL	1	9	LEFT DRAWER SIDE PANEL	2
3	RIGHT SIDE PANEL	1	10	RIGHT DRAWER SIDE PANEL	2
4	BOTTOM PANEL	1	11)	BACK DRAWER PANEL	2
(5)	SUPPORT BAR	1	12	BOTTOM DRAWER PANEL	2
6	BACK PANEL	1	13	METAL LEG	2
7	DRAWER FRONT PANEL	1	14)	METAL BAR	2

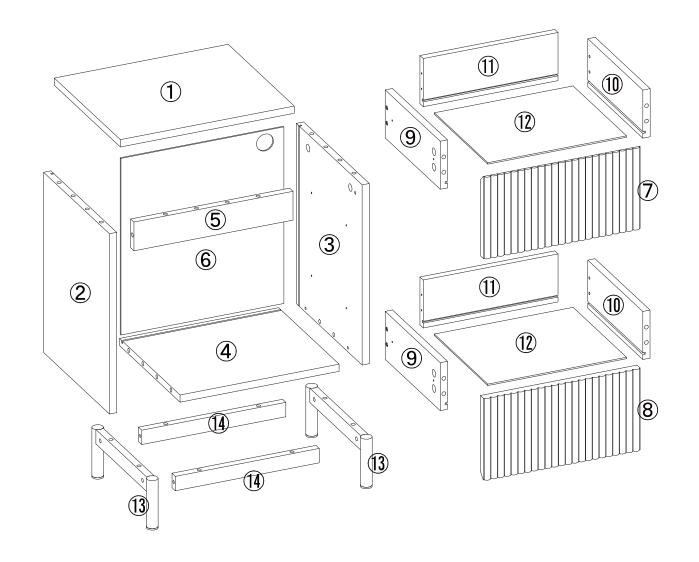

ITEM CODE: 428675
Assembly Instructions

HARDWARE LIST

A x2) B x20	C	x10	D	8x	E	x4	
		0)			Fammanas >			
M6 x 35mm	Dia.15 x 11mm	Dia.8 x 30mm		M4 x 35mm		M6 x 35mm		
QUICK FIT	CAM LOCK	WOOD DOWEL		SCREW		SCREW		
F x8	3 G x4	Н	Ⅎ x4		x20	J	x4	
M6 x 40mm	M6 x 12mm			M3.5 x 14mm				
SCREW	SLIDE RAIL	SLIDE RAIL		SCREW		ı	BACK PANEL SUPPORT	
K x1	L	L x1						
ALLEN KEY	ADAPTOR							

ITEM CODE: 428675
Assembly Instructions



Safety Advice and Care Advice

KEEP ALL THE SAFETY ADVICE AND INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE!

↑ WARNING! RISK OF LOSS OF LIFE OR ACCIDENT

TO INFANTS AND CHILDREN! Never leave children unsupervised with the packaging materials. Danger of suffocation.

⚠ CAUTION! RISK OF INJURY! Make sure that all parts are undamaged and assembled correctly. Improper assembly carries a risk of injury. Damaged parts may affect the safety and function of the product.

- Adult assembly required.
- Power tools are not recommended for the assembly of this product.
- Make sure that this product is stable & used only on a solid & flat surface.
- Do not use this product unless all screws and fixings are firmly secured.
- Do not leave children unsupervised! The product is not a climbing frame or a toy!
- Do not stand, sit or lean on this product
- Do not use this product as a step ladder or as a chopping surface.
- · Do not lift or move the product when it is loaded.
- Do not load more than a total of 14kg (top: 10kg / drawer: 2kg each) onto the unit, otherwise there is a risk of injury and/or damage to the product
- Distribute weight evenly across the product so that it cannot overturn.
- Do not place hot items such as coffee cups directly on the surface(s) unless adequately thick table mats are used.
- · Please periodically check all fittings and re-tighten as necessary.
- For Indoor & Domestic use only.

Care instructions:

- · Wipe clean with a dry cloth.
- Do not use scourers, abrasive or chemical solvents.
- Keep away from moisture and direct sunlight.
- · Keep away from fire and inflammable objects.
- Store in a dry place.

ITEM CODE: 428675
Assembly Instructions

 
SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT


CAM-LOCK



WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE





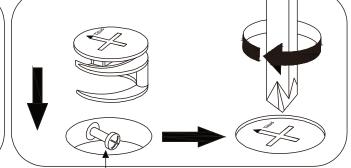


Quickfit head needs to be in centre


QUICKFIT


Tighten until shoulder is flush with panel. Do not overtighten or leave too loose. (see example below)






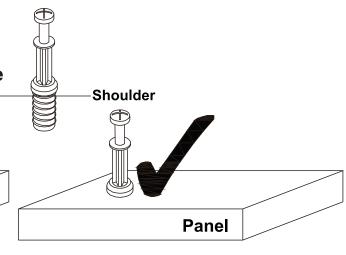

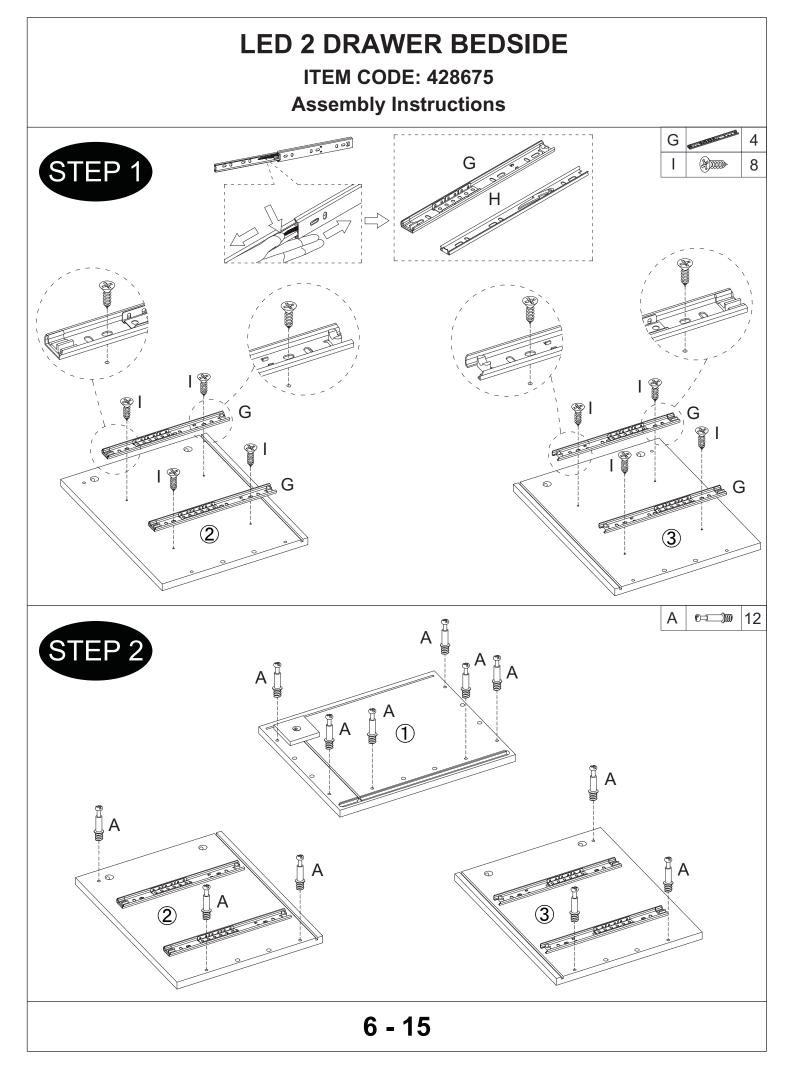


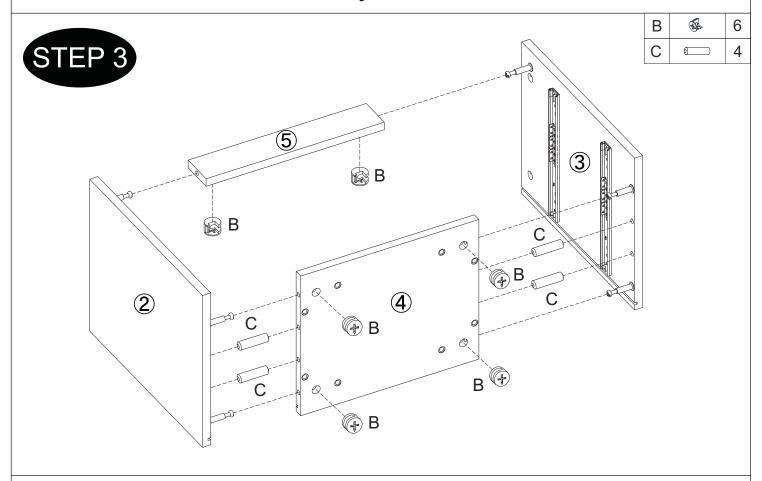


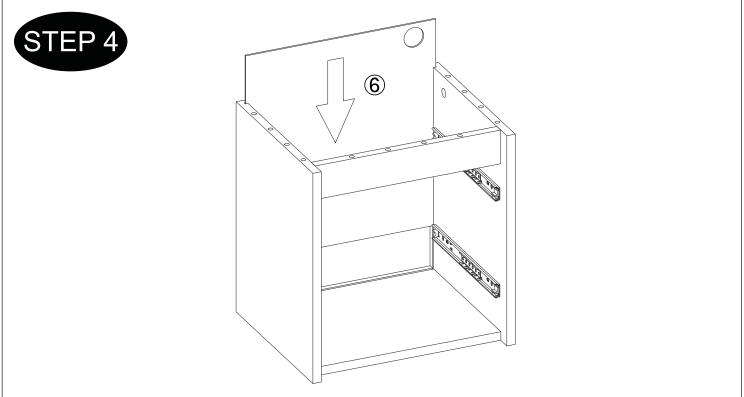


7 - 15




 


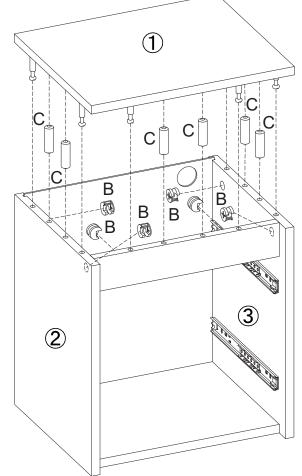


 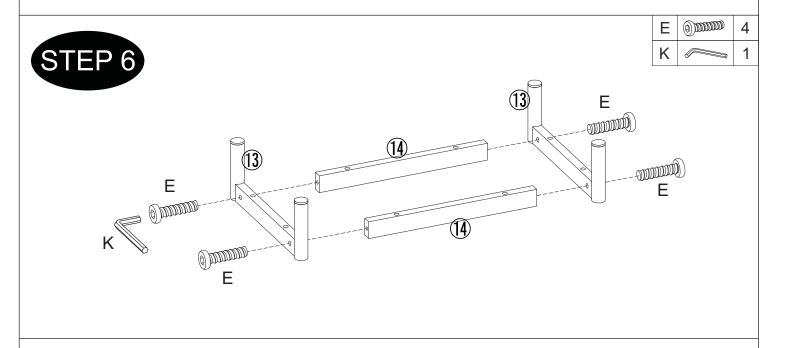





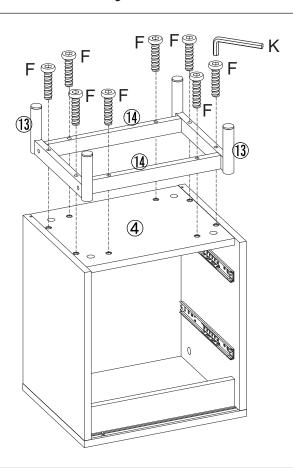



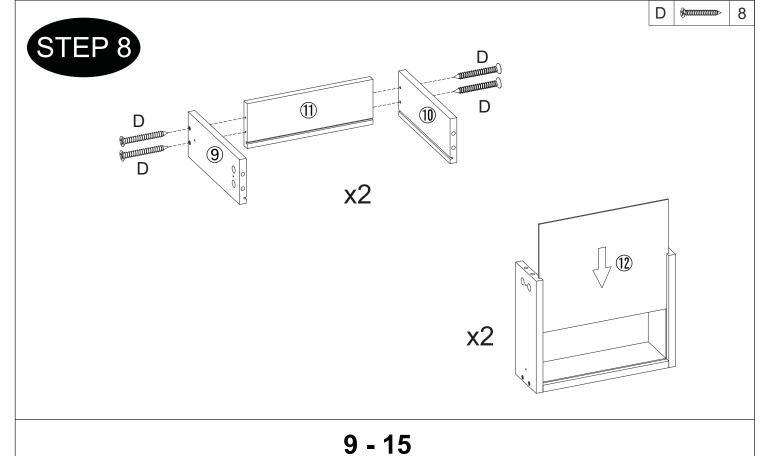

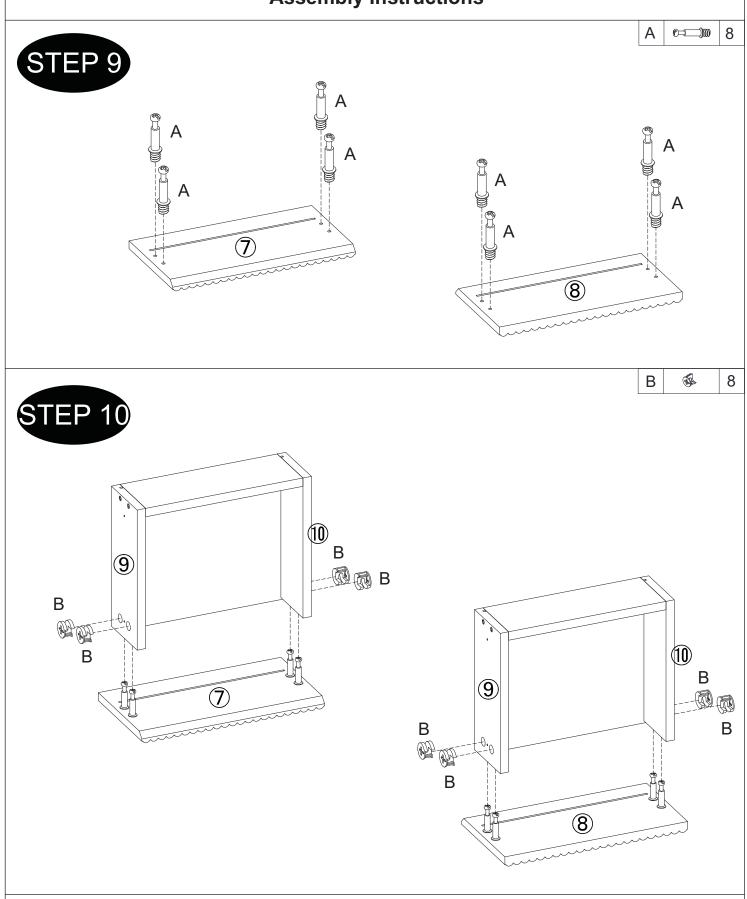

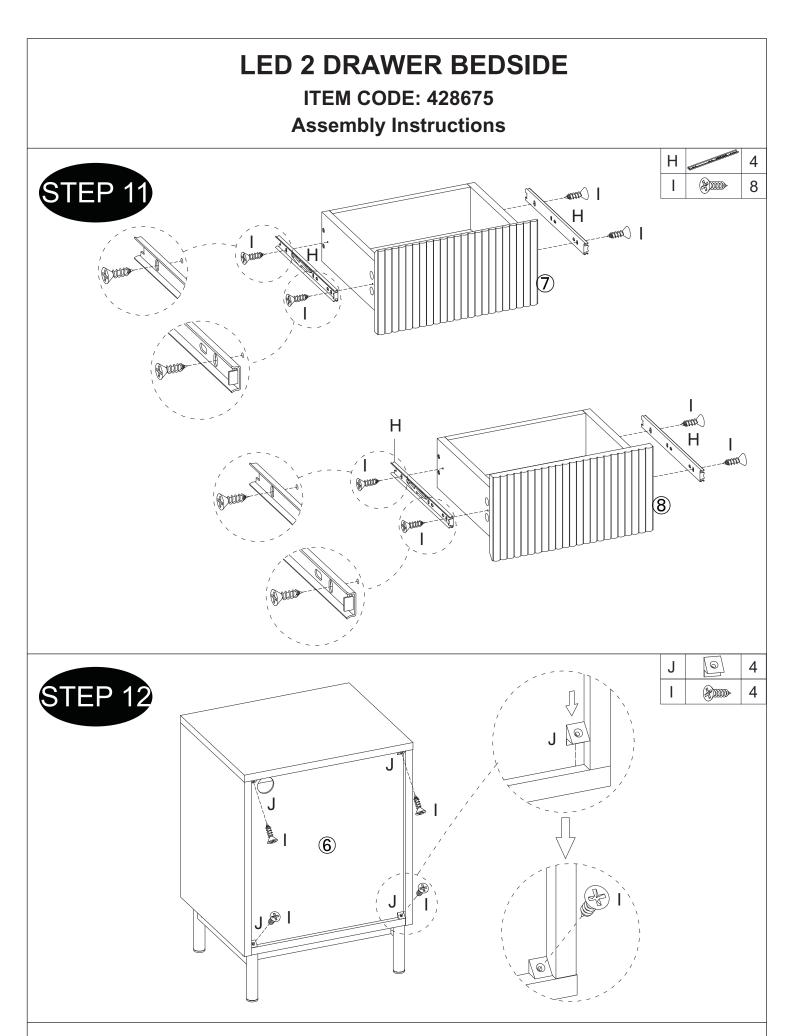


11 - 15


ITEM CODE: 428675
Assembly Instructions

Fig. m.




Specification Table (AC POWERED)				
Adaptor Power (Input):	220-240V~50/60Hz 0.1A			
Adaptor Power (Output):	12.0V == 1.0A 12.0W			
LED (Input):	12.0V			

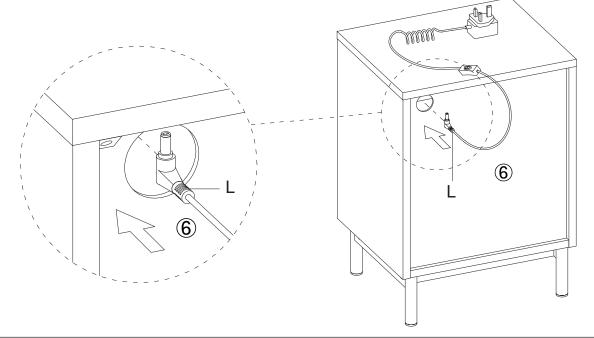


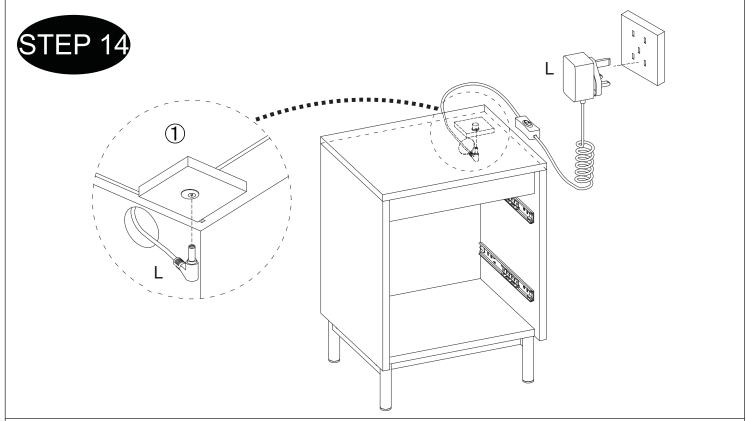



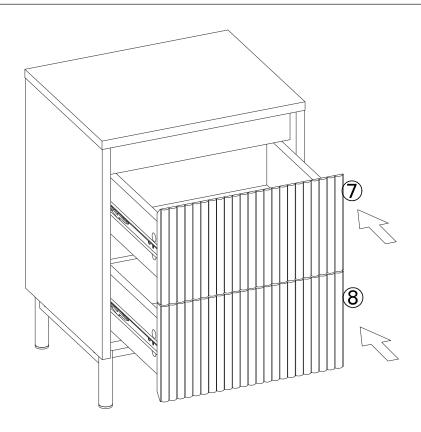



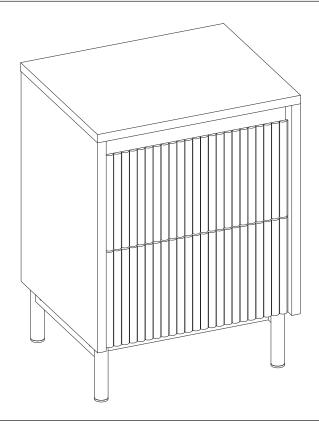

13-15

Operating Instructions

Please read these instructions thoroughly before use and retain for future reference

Instruction Manual

Warning:

- This product is designed for INDOOR USE ONLY.
- · Take care not to damage the adaptor.
- This product is powered by a mains AC/DC adaptor. Only use the product with the AC/DC adaptor that has been supplied. Use of another AC/DC adaptor could damage your product. This AC/DC adaptor MUST ONLY BE PLUGGED INDOORS.
- Retain these instructions for future reference.
- The product shall not be exposed to water sources, dripping or splashing and no objects filled with liquids, such as vases, shall be placed on it.
- · No naked flame or sources or heat, such as lit candles, should be placed on the product.
- Make sure that other people in your household are conversant with operation of the product.
- Children must not operate the product. Cleaning and use maintenance should not be performed by children without supervision.

Maintenance:

 Always unplug the power adaptor from the mains power supply and allow to cool sufficiently before performing any cleaning, or maintenance.

Wipe the unit with a soft, damp cloth and allow to dry thoroughly.

- Do not use harsh or abrasive cleaning solvents, as these may damage the finish of the unit.
- Do not immerse the unit in water or any other liquid.

Waste Disposal for Electrical & Electronic Equipment:

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment



This mark on a product and/or accompanying documents indicates that when it is to be

disposed of, it must be treated as Waste

Electrical & Electronic Equipment (WEEE).

Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used

For proper treatment, recovery and recycling: please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment of any hazardous materials that the waste may contain.



Electrical information (Power adaptor only):

- Never open the power adaptor, you risk getting an electric shock.
- Only use the power adaptor that is supplied with this product.
- You must always connect the power adaptor to the product before connecting to the mains power supply.
- The power adaptor must be used indoors only, and must not be subjected to damp conditions.
- The power adaptor does not have not have any user serviceable parts.

Caution!

- Do not use the product if your hands or the appliance are wet.
- To avoid the risk of electric shock or damage to the appliance.
- Do not operate or store it outdoors or in damp or wet areas.
- Do not use the product in humid or damp conditions or allow it to be exposed to rain or moisture.

UK Declaration

This product is intended for use within the UK.

This appliance complies with the below listed UK directives.

Electromagnetic Compatibility Regulations 2016

Electrical Equipment (Safety) Regulations 2016

The Restriction of the Use of Certain Hazardous Substances in Electrical and

Electronic Equipment Regulations 2012

The Ecodesign for Energy-Related Products and Energy Information (Amendment)

(EU Exit) Regulations 2019

~	Alternative current	Class II
	Direct Current	This product is for indoor use only

B&M Retail Ltd, Dakota Drive, Speke, Liverpool, L24 8RJ, UK, www.bmstores.co.uk B&M France SAS, 8 Rue du Bois Joli, 63800, Cournon-d'Auvergne, France MADE IN CHINA



Waste electrical products should not be disposed of with household waste. Please recycle at your local recycling facility. Check with your local authority for recycling advice.









