 


KIDS
HOME
collection

scalloped bookshelf

Item Code 436252

Assembly Instructions

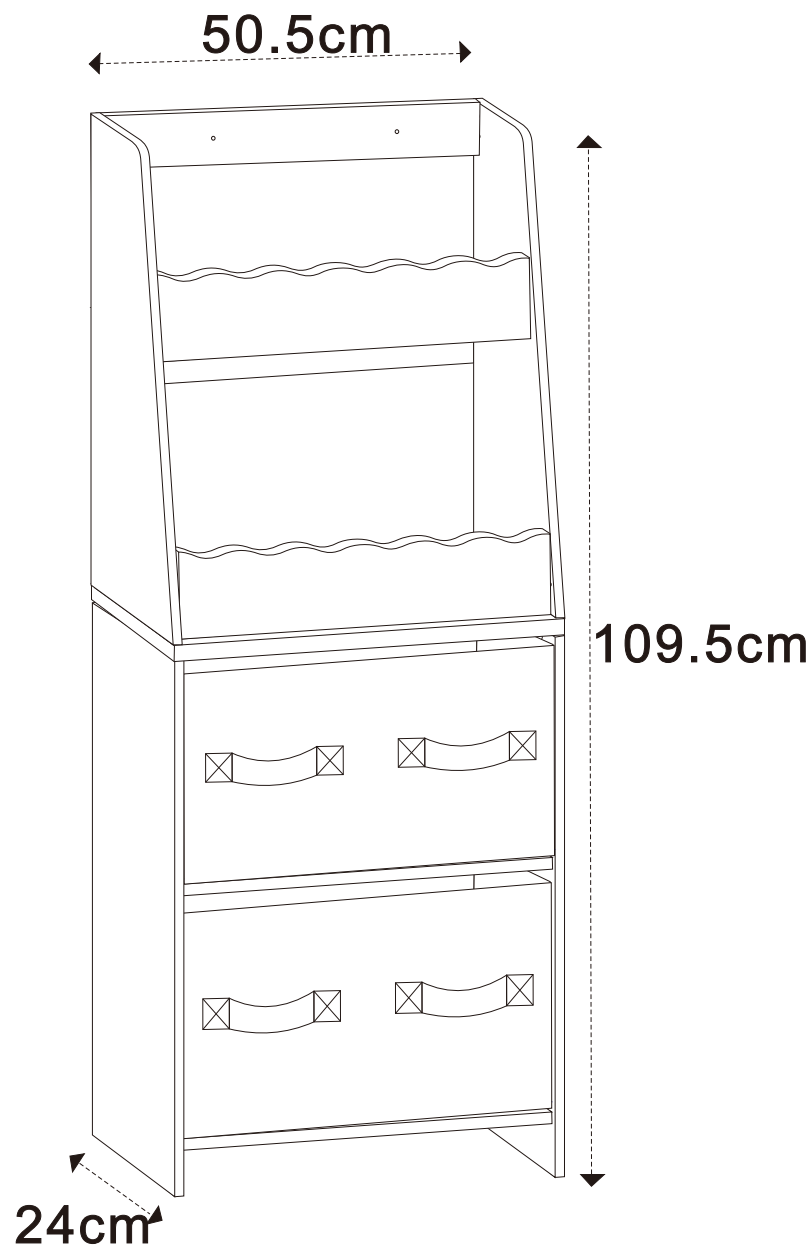

MAX LOADING: 16KG (SHELF: 2KG EACH / BASKET: 2KG EACH)

SAFETY INFORMATION

Top Tips Before You Start

- Please check that all parts are present before you start the assembly of your furniture.
- Assess the suitability of the wall or ceiling to ensure that the fastening devices will withstand the forces generated.
- For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
- Please ensure that you have sufficient space and people to assemble your product safely.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.

Warnings:

- Adult assembly is required. The assembly should be checked by an adult before each use.
- Unassembled product contains small parts which may present a choking hazard.
- Children should be kept away from the product during assembly to avoid any possible risk of injury.
- Do not use power tools in the assembly of this product as there is a risk of over - tightening and consequently splitting of the wood.
- This product is not suitable for children under age 3 & recommended for children in the age 3 to 6.
- Do not load more than max. loading: 16KG (shelf: 2kg each / basket: 2kg each) onto product. Otherwise there is a risk of injury and/or damage to the product.
- Adult supervision is required at all times whilst children play with this product.
- Do not use this item if any components are missing or damaged.
- Please remove all packaging and packing tags/wires before presenting to a child.
- Small parts. Choking hazard. Packaging is not a toy.
- The parent should regularly check all fittings and re-tighten as necessary before giving the product to children.
- Always place the product on flat, steady and stable surface to prevent.
- Do not stand or sit on the product. Do not use the product as a stepladder.
- This product is intended for indoor, household use only.

WARNING! IN ORDER TO PREVENT OVERTURNING THIS PRODUCT MUST BE USED WITH THE ANTI-TIPPING HARDWARE PROVIDED

Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent this item of furniture tipping over:

- Use the wall fixing hardware provided
- Do not let children climb or hang on basket or shelves
- Place the heaviest items on the lower baskets or shelves
- Do not place TV's or other heavy objects on top of this product, unless it has been specifically designed to support them
- Never open more than one basket at a time

An anti-tipping device is provided with your product, however you will need to source suitable fixings for your wall type. If in doubt, please consult a qualified tradesperson.

Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

Care and Maintenance of Your Furniture:

- Surface wipe only.
- To clean your item, please use a damp cloth and wipe clean. Dry naturally.
- Do not place hot items (e.g. hot drink) directly on the surface.
- Do not use cleaning products which contain ammonia, solvents or abrasive material.
- Do not drag and pull your furniture.
- Do not expose the item to extremes of heat and humidity.
- Examine the product regularly for wear before giving to a child.
- Do not let children play with broken furniture to avoid accidental swallowing suffocation.
- Please retain this information for future reference.

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



Tips & Tricks

 
Make sure that the hardware used is suitable for supporting your unit.

Please consult a qualified tradesperson if unsure.

- ☑ If you are unsure, please select a larger screw and wall plug.
- ☑ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☑ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types Of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

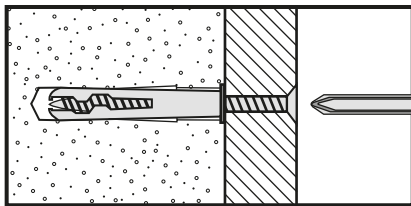


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

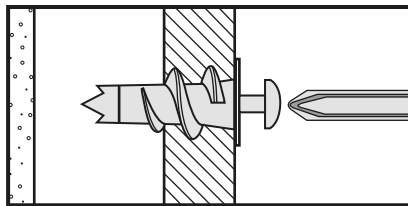


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

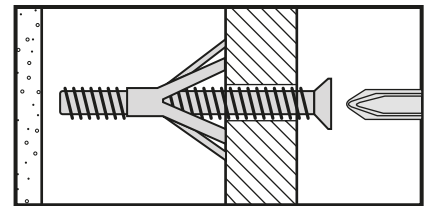


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

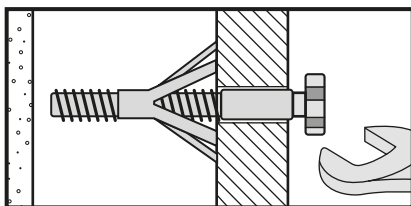


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

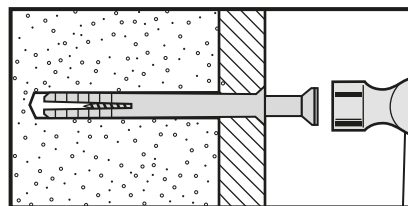

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

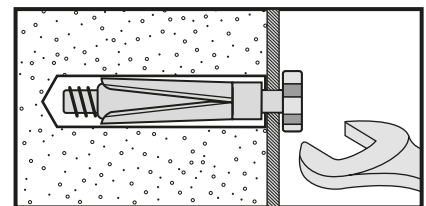


6. Shield Anchor Wall Plug Heavy Loads



For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.

SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

 CAM-LOCK

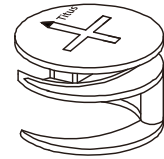

  
WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE

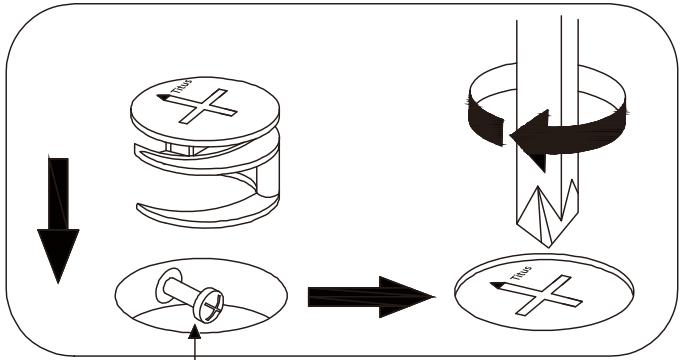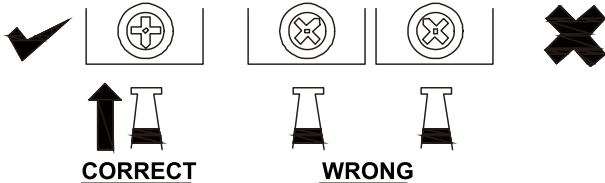

Quickfit head needs to be in centre


QUICKFIT

 Tighten until shoulder is flush with panel. Do not overtighten or leave too loose. (see example below)




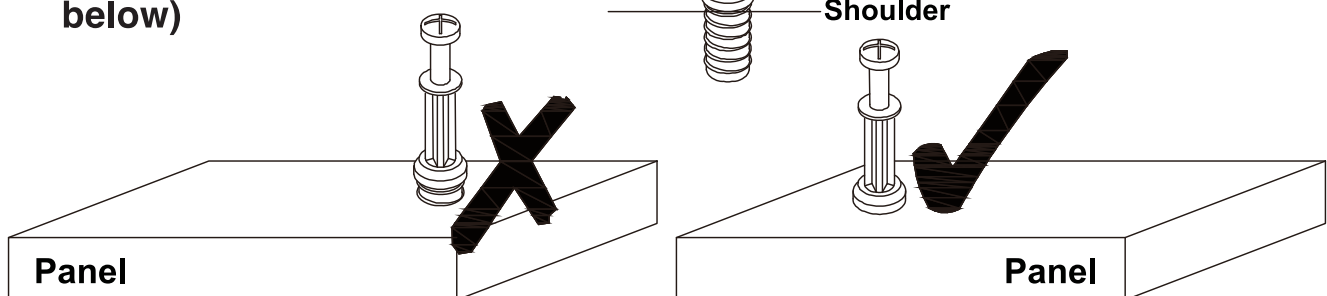


Part List

NO.	PART LIST	QTY	NO.	PART LIST	QTY
(1)	Upper left side panel	1	(8)	Shelf bottom panel	2
(2)	Upper right side panel	1	(9)	Shelf bottom panel	1
(3)	Front panel	1	(10)	Basket	2
(4)	Front panel	1	(11)	Basket bottom	2
(5)	Back panel	1	(12)	Bottom left side panel	1
(6)	Back panel	2	(13)	Bottom right side panel	1
(7)	Shelf bottom panel	1	(14)	Back panel	1

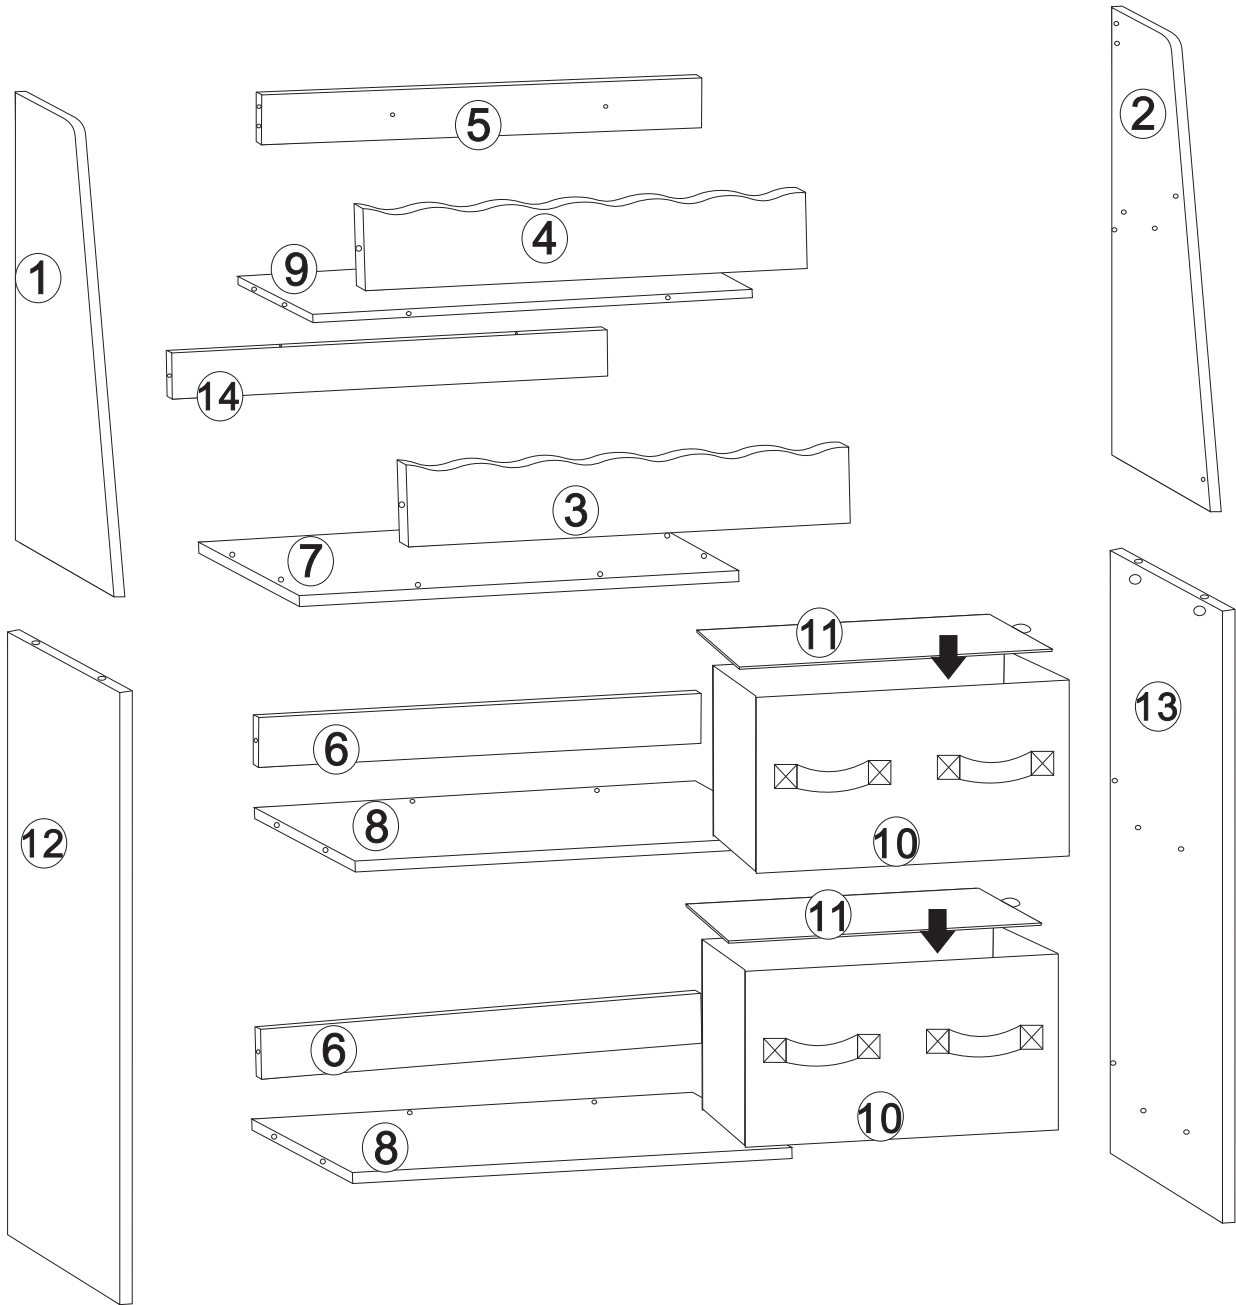 

Hardware List

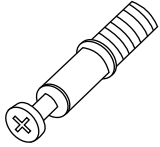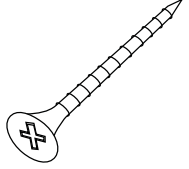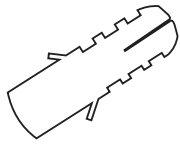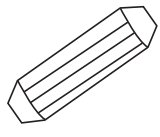    A	x24	B	x24	C	x 12
				 4x40mm	
Camlock		Quickfit		Screw	
D	x2	E	x 10		
					
Wallplug		Wooden dowel			

 
 
 
1



A x 4



B x 4

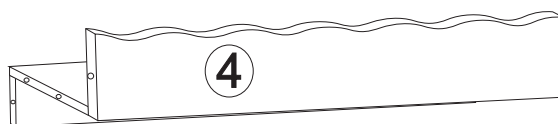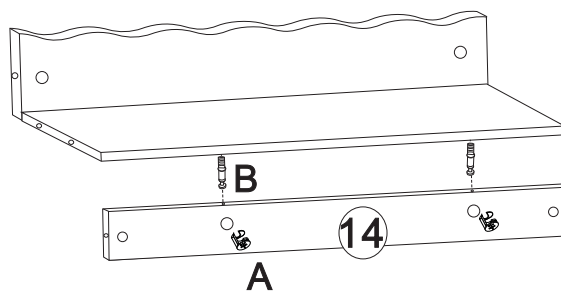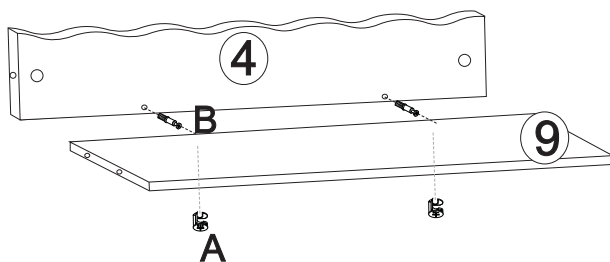


2






C x 4



 
x2

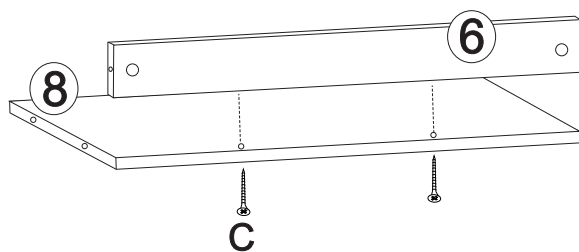




3

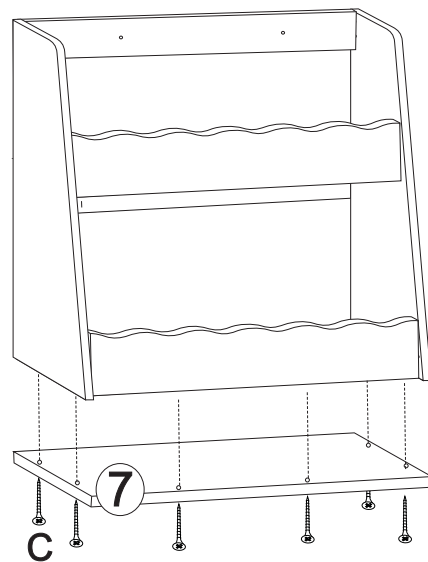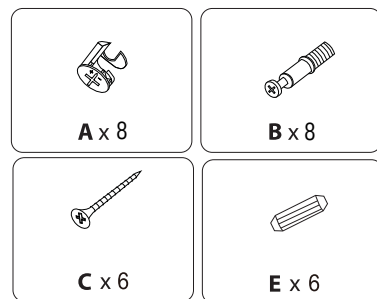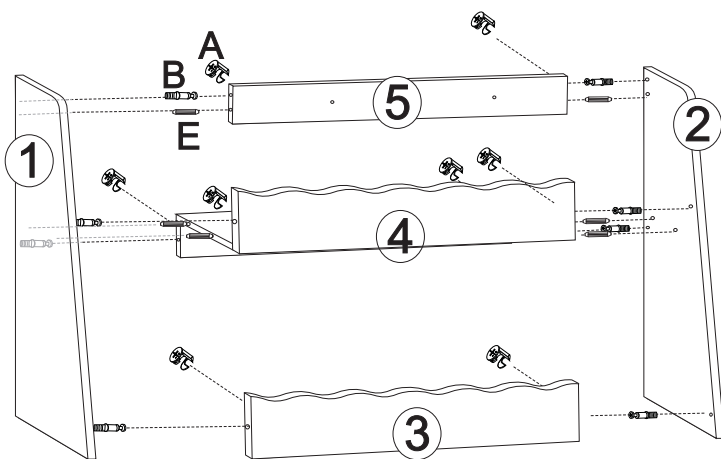   





4

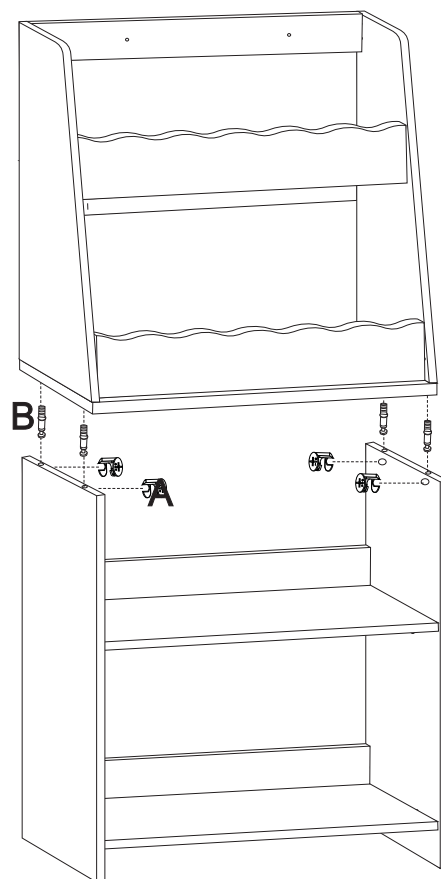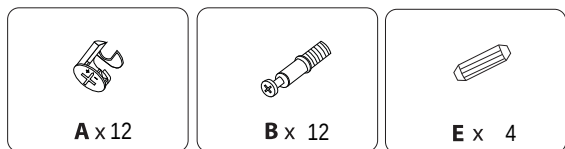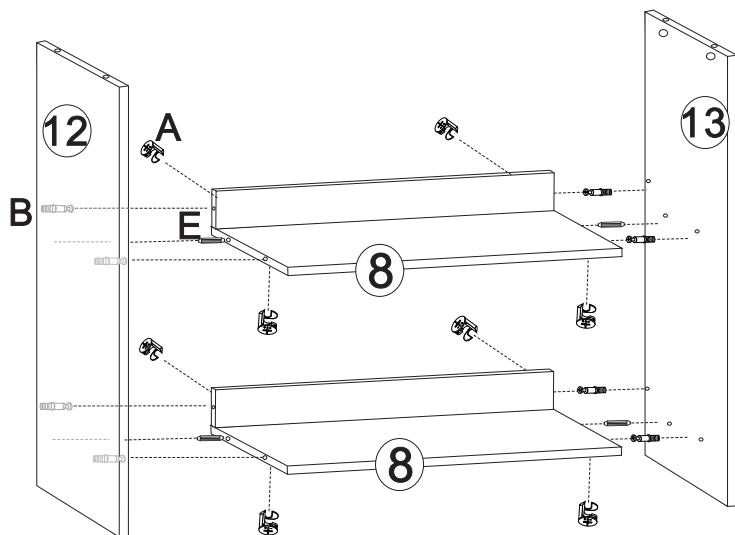   

5

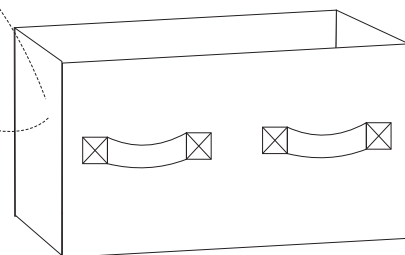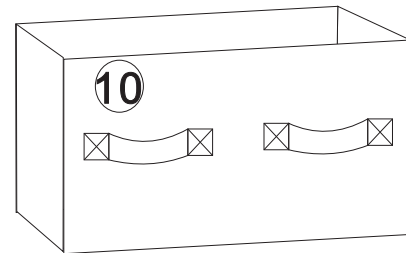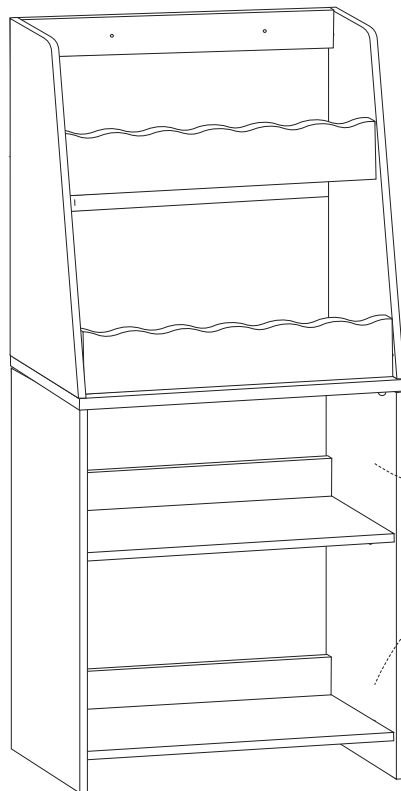   

6

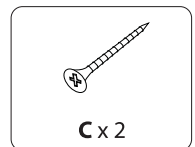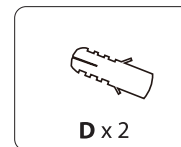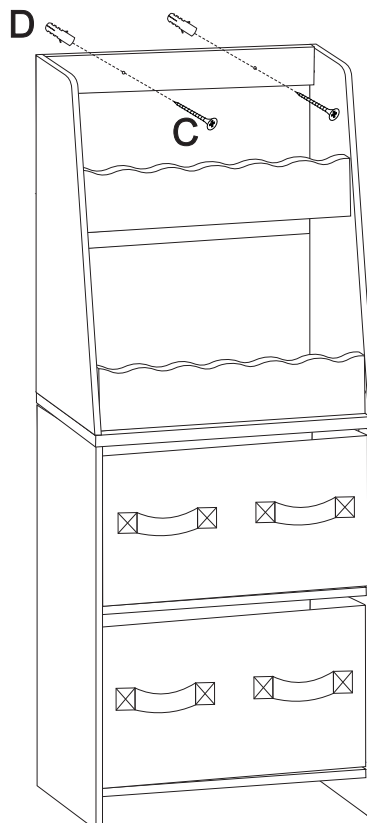    

WARNING:

Anti-tipping hardware is only a deterrent. It is not a substitute for proper adult supervision.

Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended.

This hardware, when properly installed, could provide protection against the unexpected tipping of furniture due to improper use.

Please ensure the anti-tipping hardware provided is suitable for your wall or else it might damage your wall during installation.

Domestic Use Only



B&M Retail, L24 8RJ, UK
www.bmstores.co.uk

B&M France SAS, 8 Rue du Bois Joli, 63800, France
MADE IN CHINA