BLAUPUNKT

Model Number: 368418

Owner's Manual



Enjoy it.

6 LITRE AIR COOLER

IMPORTANT:

PLEASE READ ALL OF THE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

IMPORTANT SAFETY INSTRUCTIONS

- When using electrical products, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.
- Children younger than 3 years old should be kept away from the product unless continuously supervised.
- Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if it has been placed in its intended operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.
- This is not a toy – children should be supervised to ensure they do not play with the product.
- Always unplug the product and allow to cool fully after use and before any cleaning or maintenance.
- Normal voltage is still present in this product as long as the product is connected to the electrical source.
- This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause damage. This includes any parts of the product that may become hot during use and other heat emitting products.
- Keep the power supply cord away from any parts of the product that may become hot during use.
- Keep hands, fingers, hair and any loose clothing away from the rotating parts of the product.Do not immerse the product in water or any other liquid.
- Do not operate the product with wet hands.
- Do not leave the product unattended whilst connected to the power supply or when in use.
- Do not remove the product from the power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not use this product for extended periods of time.
- Do not leave the product plugged in or operating overnight.
- Do not use the product for anything other than its intended use.
- Do not use this product outdoors.
- Do not move the product whilst it is in use.
- Do not shake the product.
- Do not cover the product.
- Do not put objects into any of the openings.
- Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage the product. This includes insecticide and chemical solvents.
- Always use the product on a flat, stable surface.
- Use of an extension cord with the product is not recommended.
- This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.
- The product is intended for floor or desk use only. Do not mount on ceilings or walls

Trip hazard – beware of trailing cables when in use and while in storage.
Strangulation hazard – children have strangled in cords. Keep power cords out of reach of children. Never leave a power cord positioned where a child could reach it

- This product is intended for domestic use only. It should not be used for commercial purposes.

WARNING: If a strong odour is emitted from the product, turn the product off and unplug it from the mains power supply.
Should the product fall or be pushed over while there is water in the tank, it must be unplugged from the mains outlet immediately as a first action. The product should be righted and dried thoroughly before it is used again.

GETTING STARTED

Remove the air cooler from the box.
Remove any packaging from the air cooler.
Place the packaging inside the box and either store or dispose of safely.

IN THE BOX

6 Litre Air Cooler
2 ice packs
Instruction manual

FEATURES

[TO MATCH AW]

DESCRIPTION OF PARTS

1. 6 Litre Air Cooler main unit
2. Fan speed buttons (LOW, MID, HIGH)
3. Swing button (SWING)
4. Cool button (COOL)
5. Off button
6. Horizontal grill
7. Vertical grill
8. Water level window
9. 360 ° castor wheels
10. Mesh filter carrier
11. Mesh filter
12. Filter carrier locks
13. Cable holder
14. Water tank
15. Water tank top lid
16. Water tank lock
17. Ice packs
18. Carry handle

1



INSTRUCTIONS FOR USE

Filling the Ice Cube Plus Personal Space Cooler


Before filling the air cooler, make sure that it is switched off and unplugged from the mains power supply.
STEP 1: Open the water tank at the back of the air cooler by twisting the water tank lock, carefully slide the water tank out just under halfway, checking that the water pump cables are not being either stretched or trapped.
STEP 2: Using a suitable measuring vessel, fill the water tank with cold, clean water. The water level should be no lower than the min. fill line and no higher than the max. fill line. Alternatively, open the water tank top lid and fill the water tank with cold, clean water. Water filled this way will run over the evaporation pad before draining into the main water tank.
STEP 3: The two ice packs can be used to achieve quicker, additional cooling; they should be ⅔ full of water and left to freeze for approx. 8 hours before use. Place them into the water tank before it has been filled with water.
STEP 4: To close the water tank, carefully push it back into position and twist the lock to make sure that it is secure.

Caution: Do not fill the air cooler with any liquid other than cool, clean water. Do not use any additives in the water.

STEP 1



STEP 2

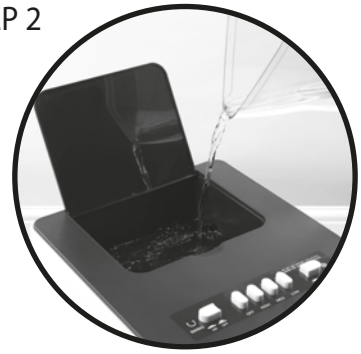

STEP 3



Using the 6 Litre Air Cooler

STEP 1: Plug in and switch on the air cooler at the mains power supply.
STEP 2: To turn on the air cooler and activate the purifier function, select the desired cooling speed by pressing any one of the adjustable cooling speed buttons (LOW, MID, HIGH).
STEP 3: Activate the swing function by pushing 'SWING'; the vertical grills of the air cooler will begin to turn left and right. To stop the vertical grills from turning, press 'SWING' once more.
STEP 4: To regulate the airflow up or down, manually adjust the horizontal grills on the front of the air cooler.
STEP 5: Cool and humidify air by pressing 'COOL'. The air cooler will begin to circulate water across the evaporation pad. To stop the function, press 'COOL' once more.
STEP 6: Turn off the air cooler by pressing 'OFF'.

Note: The air cooler is not designed to significantly reduce the room temperature; it provides a cool breeze.
When positioning the air cooler, do not lift it by the front panel; move it using the handles and the 360° castor wheels.
Warning: Do not use the humidifier function when the water tank is empty or if it is filled below the min. fill line.
The air cooler should not run continuously for more than 10–12 hours at any one time.
Check the water level regularly.
Do not attempt to operate the 'COOL' function if there is no water in the tank, as this will cause damage to parts.

STEP 2



STEP 4



STORAGE

Drain the water tanks and allow the air cooler to cool before storing in a cool, dry place. Carefully coil the power cable to avoid damage during storage.

PLEASE LET US KNOW WHICH PAGES TO PUT THESE IMAGES ON

IMAGE 1



IMAGE 2



CARE AND MAINTENANCE

Always wait until the air cooler has stopped completely and unplug it from the mains power supply before performing any cleaning or user maintenance.

STEP 1: The water tank must be drained of water after each use. To do so, twist the water tank lock and carefully pull the water tank out from the air cooler. Twist the water pump lock on the bottom of the water tank to remove the pump and free the water tank. Carefully empty the contents of the water tank down a drain. Once the water tank has been drained, wipe away any excess water with a soft cloth.
STEP 2: To clean the mesh filter, remove the two securing screws at the back of the air cooler and remove the mesh filter carrier. The mesh filter carrier can be pulled away from the air cooler; remove any loose fibres by hand, taking care not to pierce the mesh filters. The mesh filter can be washed in warm water with a mild detergent and a soft brush; allow to dry thoroughly before use.
STEP 3: Wipe the air cooler with a soft, damp cloth and allow to dry thoroughly. Replace the mesh filter carrier and reinsert the securing screws.
Do not use flammable liquid, abrasive cleaning solvents, polishes or scouring pads to clean the air cooler, as this may cause damage.
Note: Clean the air cooler and all of its parts regularly to reduce the risk of limescale and bacteria forming.

ELECTRICAL INFORMATION

(Fixed Mains Plug Only)
The mains lead supplied with this product is fitted with a BS1363/A 13 amp plug. If it is not suitable for your supply sockets it must be replaced with an appropriate plug.
If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions on the next page.
The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard.
If the fuse needs to be replaced it must be of the same rating and ASTA approved to BS1362. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the application can be used.

WIRING INSTRUCTIONS

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions shown. In both cases ensure that the outer sheath of the cable is held firmly in place by the cable clamp.


ELECTRICAL INFORMATION

(Power adapters only)
Never open the power adapter, you risk getting an electric shock. Only use the power adapter that is supplied with your product. You must always connect the power adapter to the product before connecting to the mains power supply. The power adapter must be used indoors only, and must not be subjected to damp conditions. The power adapter does not have any user serviceable parts.

2-CORE PLUG




WARNING: Do not connect either wire to the earth terminal.
This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.
The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.
The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

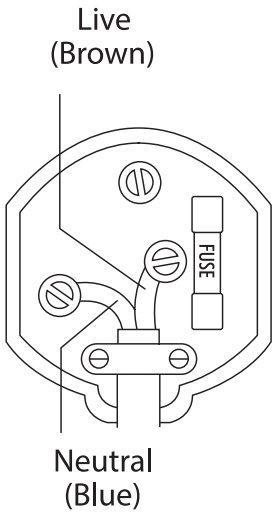

3-CORE PLUG



WARNING: This appliance must be earthed.
The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol, or coloured green or green and yellow.
The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.
The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

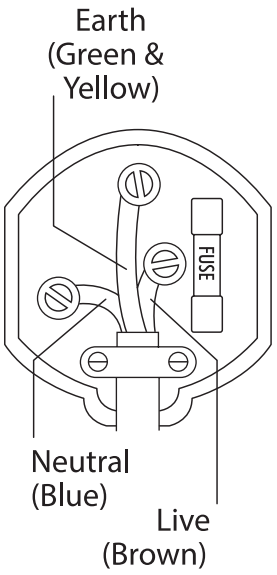

TROUBLESHOOTING

Problem	Possible Cause	Solution
The air cooler will not power on.	The air cooler is not connected to the mains power supply.	Plug in and switch on the air cooler at the mains power supply.
	The fuse has blown.	Replace the fuse with one of the same rating.
No air is blowing from the air cooler.	The desired cooling speed has not been selected.	Press any one of the cooling speed buttons named LOW-HIGH, HIGH being the strongest cooling speed.
The air blowing from the air cooler is not strong enough.	The cooling speed is set too low.	Select a higher cooling speed by pressing the relevant cooling speed button.
	The mesh filter is blocked.	Clean the mesh filter or evaporation pad following the instructions in the section entitled 'Care and Maintenance'.
The vertical grills are not turning left and right.	The swing function has not been selected.	Activate the swing function by pressing 'SWING'.
The air cooler is not cooling the air.	The humidifier function has not been selected.	To activate the humidifier function, press 'HUMIDFY'.
	The water tank has not been filled with enough water.	Fill the water tank to the max. fill mark.
	The ice packs are not ⅔ full with water.	Fill the ice packs with water so that they are ⅔ full; allow to freeze for approx. 8 hours before use.
	Ambient humidity is high.	The air cooler will not be able to cool due to the high humidity in the air.

TECHNICAL SPECIFICATION

Product code:	EH3187
Input:	220–240 V ~ 50 Hz
Output:	65 W
Water tank capacity:	6 L

BLAUPUNKT



Information on Waste Disposal for Consumers of Electrical & Electronic Equipment

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).

Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.

Imported by
B&M Retail Ltd
The Vault, Dakota Drive,
Estuary Commerce Park,
Speke, Liverpool, L24 8RJ, UK

Enjoy it.

Your statutory rights are not affected.
Made in China.
All brand names are registered trademarks of their respective owners.