



LOFT STUDIO WHITE BEDSIDE

366176

30 min

APPROXIMATE ASSEMBLY TIME 1 PERSON ASSEMBLY




FLOOR AREA
2.5Mx2.5M




REQUIRED ASSEMBLY SPACE


REQUIRED ASSEMBLY TOOLS



SLOTTED SCREWDRIVER (Not Provided)



POZI SCREWDRIVER (Not Provided)

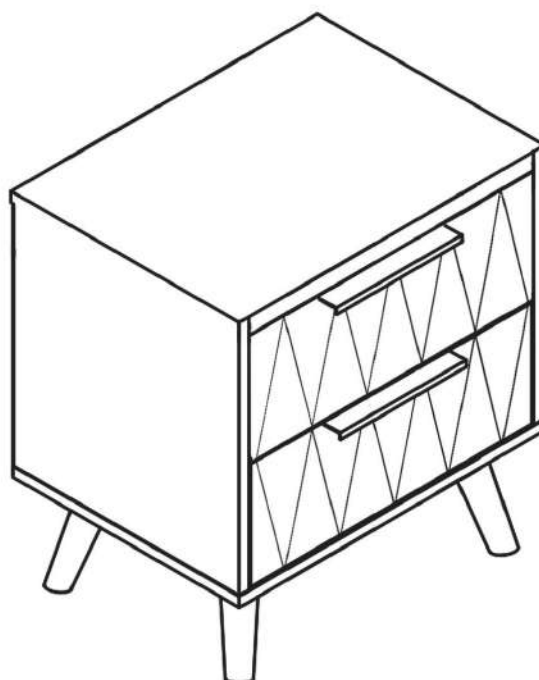




MODEL NAME:

LOFT STUDIO WHITE BEDSIDE

366176

NO.	PART LIST	QTY	NO.	PART LIST	QTY
①	TOP PANEL	1	⑨	DRAWER RIGHT PANEL	2
②	LEFT SIDE PANEL	1	⑩	DRAWER BACK PANEL	2
③	RIGHT SIDE PANEL	1	⑪	DRAWER BOTTOM PANEL	2
④	BOTTOM PANEL	1			
⑤	BACK PANEL	1			
⑥	DRAWER FRONT PANEL	1			
⑦	DRAWER FRONT PANEL	1			
⑧	DRAWER LEFT PANEL	2			

PARTS LIST

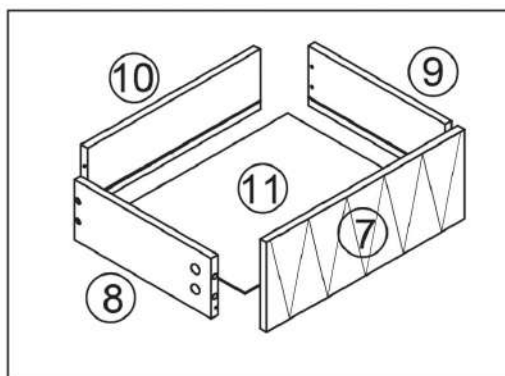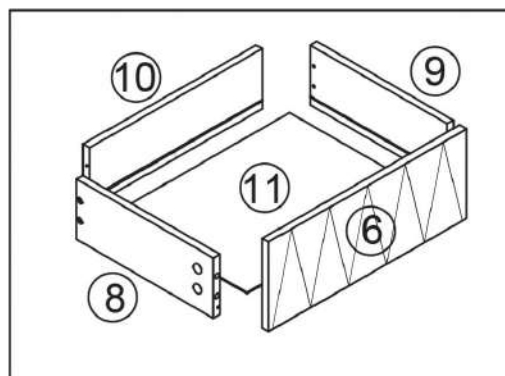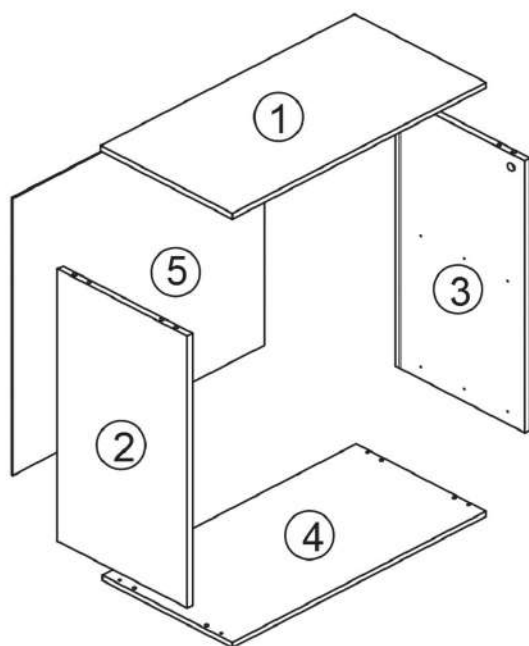


MODEL NAME:

LOFT STUDIO WHITE BEDSIDE

366176

HARDWARE LIST

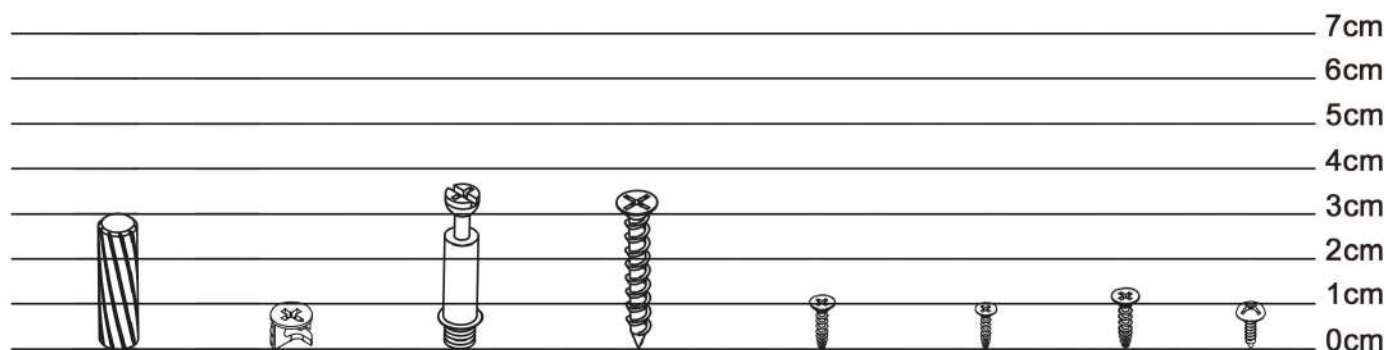

12x
6x30mm

A

WOOD DOWEL

12x
15x10mm

B

CAM LOCK

12x
6x35mm

C

CAM BOLT

12x
4x35mm

D

SCREWS

4x
3x12mm

F

SCREWS

24x
4x10mm

G

SCREWS

6x
3x16mm


I

SCREWS

20x
4x10mm

J

SCREWS



2x

E

HANDLE



6x

H

CORNER
BLOCK



4x

K

LEG



2x

L


METAL
RUNNER



2x

N

METAL
RUNNER

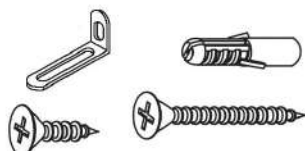

1x

M

WALL FIXING

	MODEL NAME: LOFT STUDIO WHITE BEDSIDE 366176
--	-------------------------------------------------------------------------

Top Tips before you start!

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. This product is intended for indoor, household use only as it is non industrial product.
9. Please do not kneel on any part of this product during assembly.

Care and Maintenance of your Furniture



- Please periodically check all fittings and re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot items (e.g. hot drinks) directly on to the wood surface.
- Please do not drag and pull your furniture.

MODEL NAME:



LOFT STUDIO WHITE BEDSIDE

366176

STEP 1

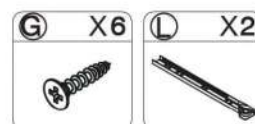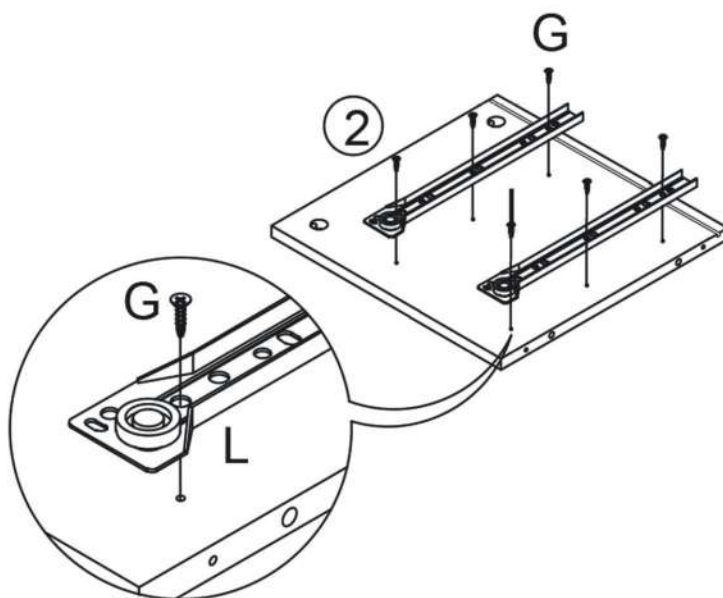

STEP 2

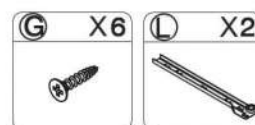
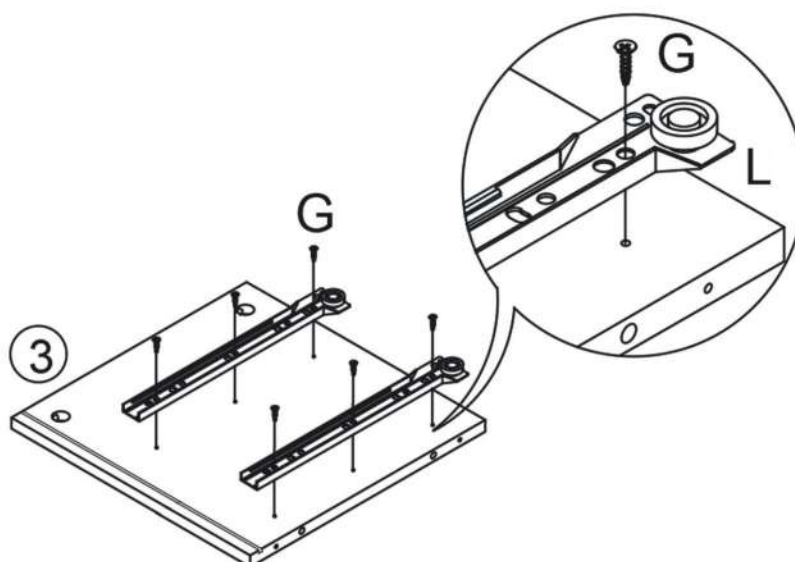


MODEL NAME:


LOFT STUDIO WHITE BEDSIDE

366176

STEP 3

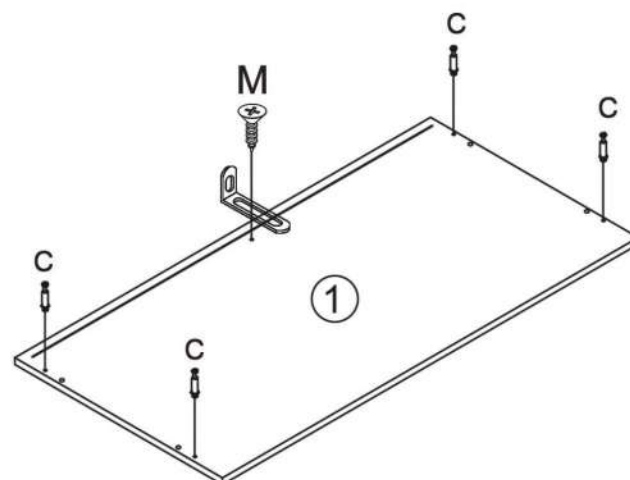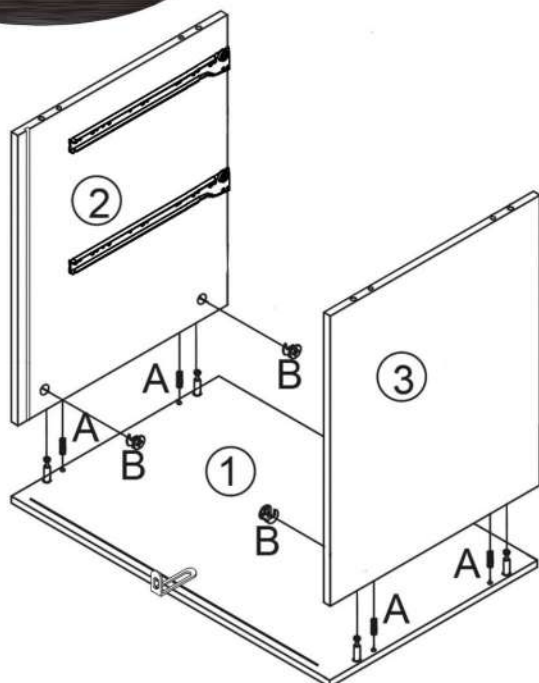


STEP 4

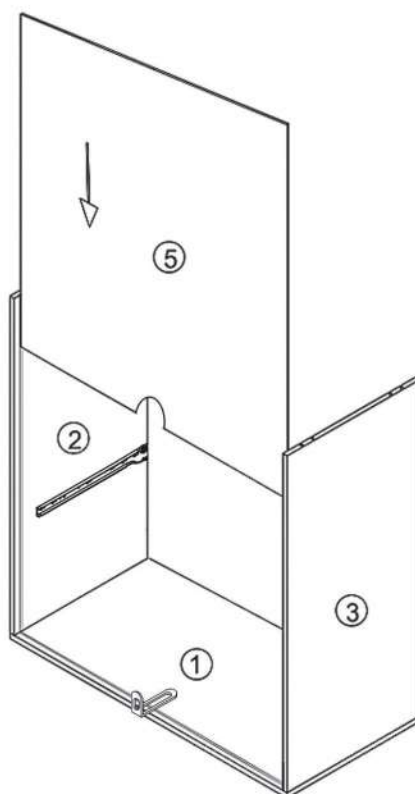


MODEL NAME:
LOFT STUDIO WHITE BEDSIDE
366176

STEP 5

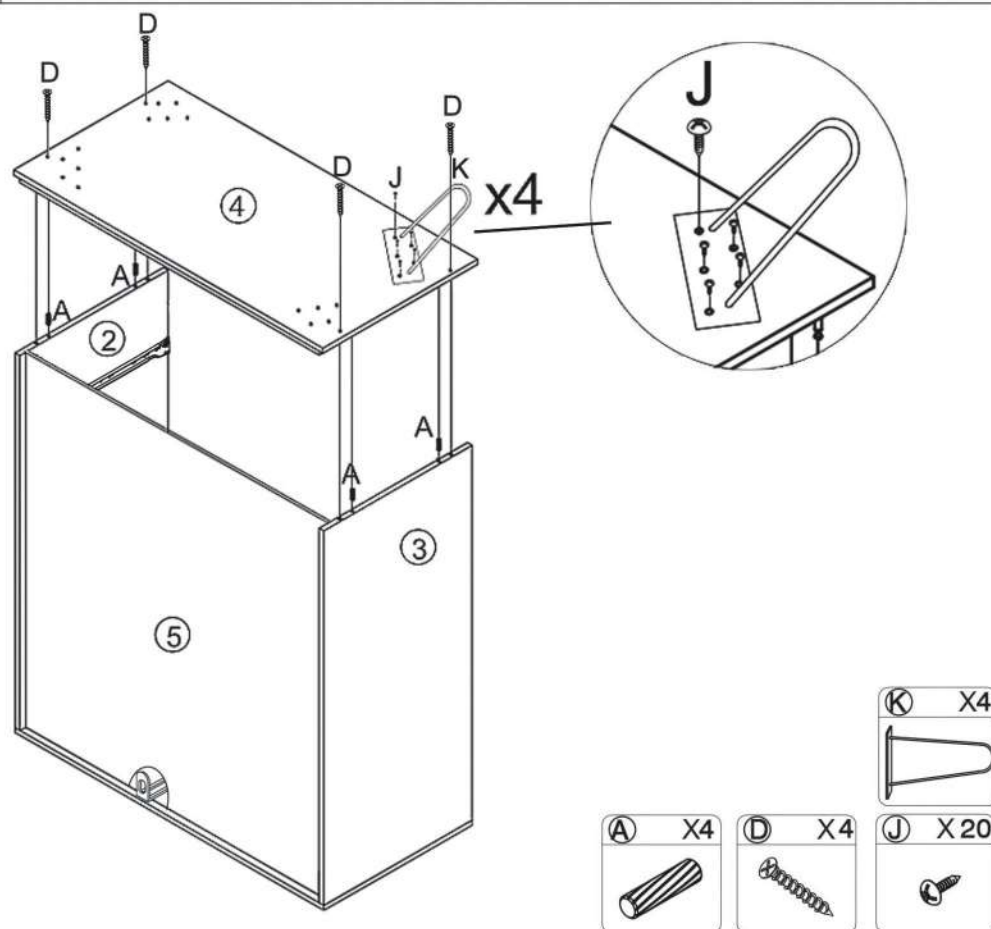

STEP 6

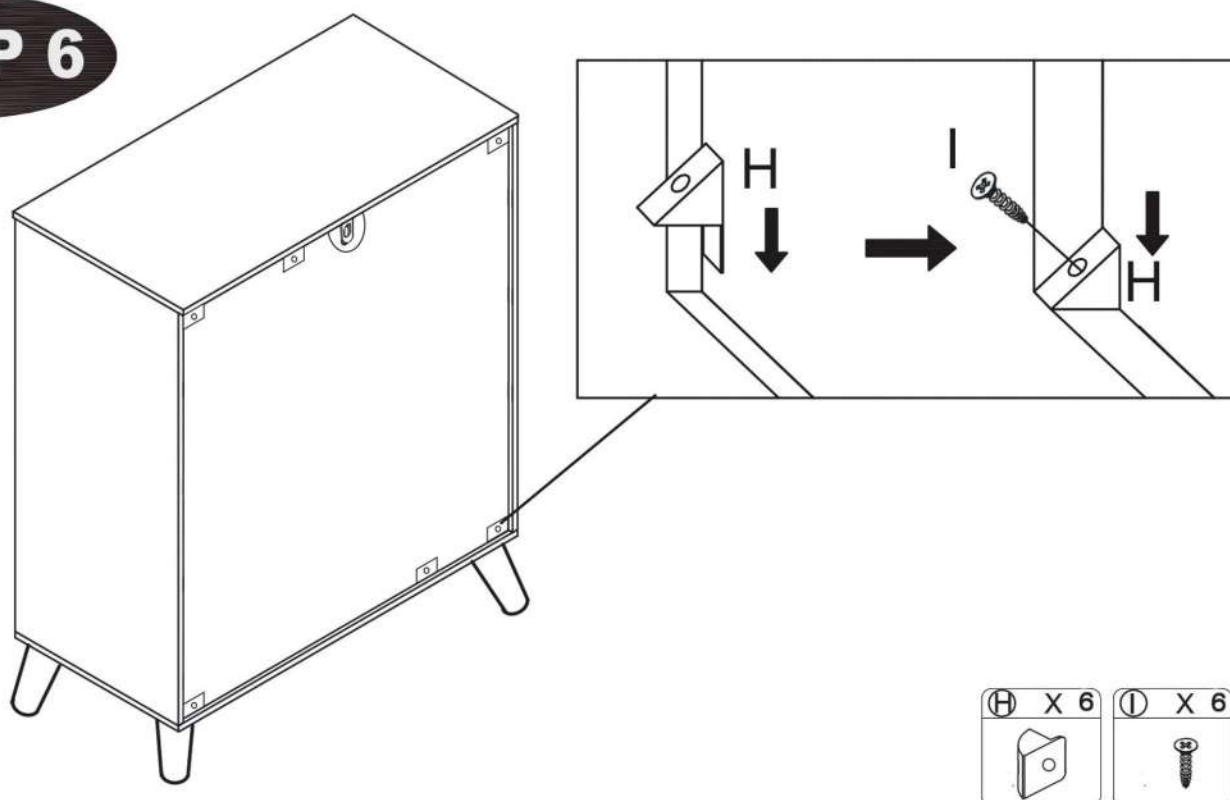

MODEL NAME:

LOFT STUDIO WHITE BEDSIDE


366176

STEP 7


WARNING: Anti-tipping hardware is only a deterrent. It is not a substitute for proper adult supervision.

Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended. This hardware, when properly installed, could provide protection against the unexpected tipping of furniture due to improper use.

Please ensure the anti-tipping hardware provided is suitable for your wall or else it might damage your wall during installation.

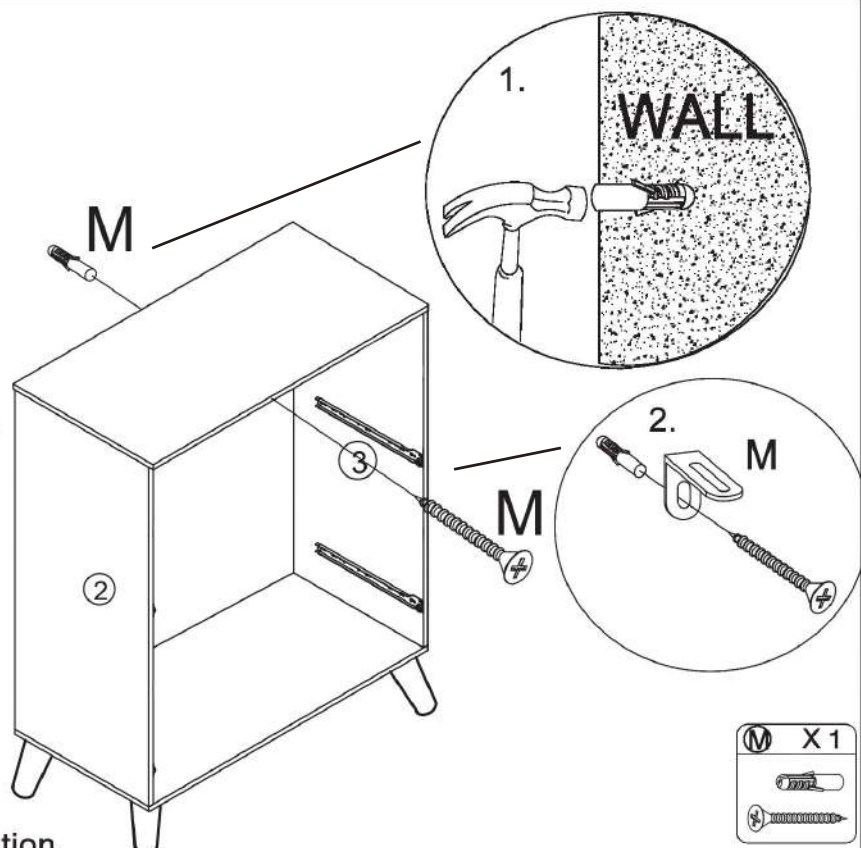

STEP 8

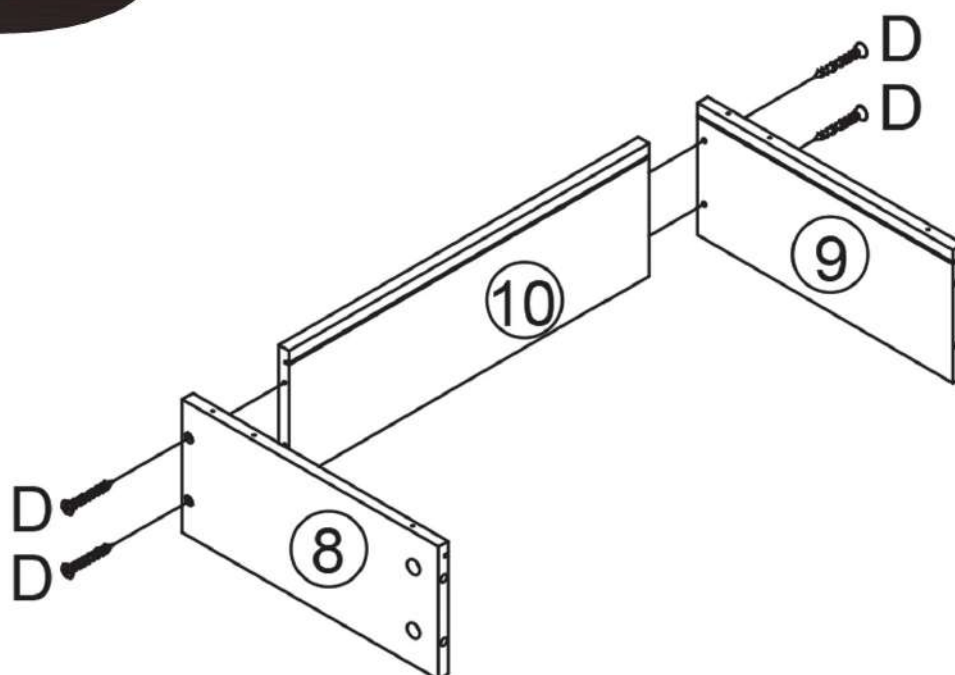


MODEL NAME:


LOFT STUDIO WHITE BEDSIDE

366176


STEP 9

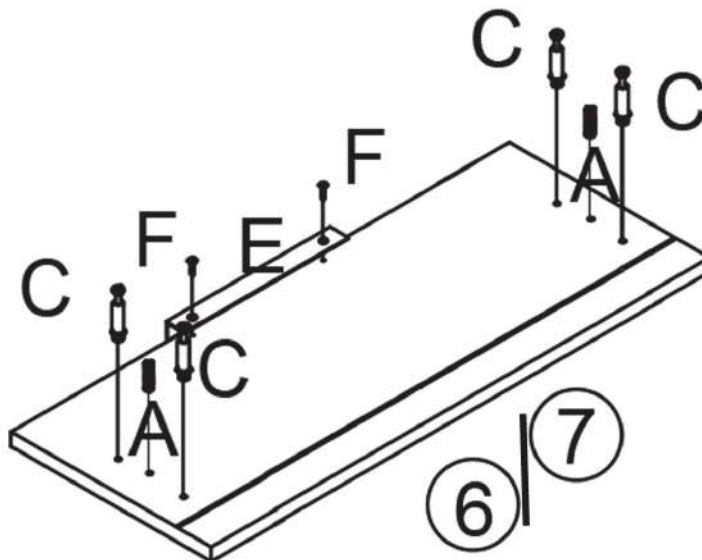


x2

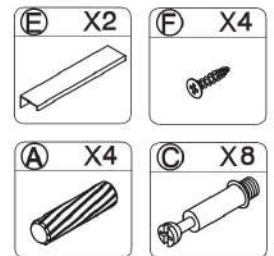

STEP 10

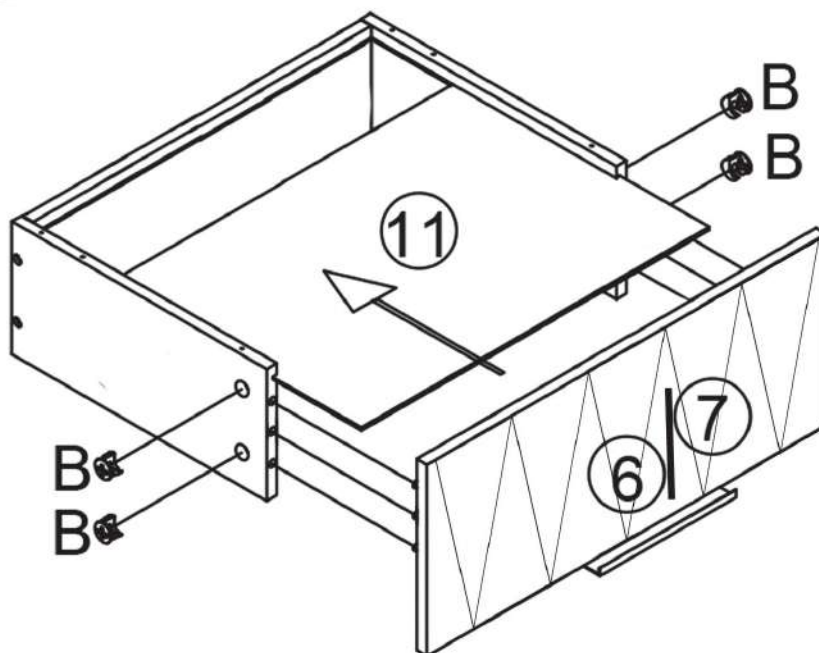

x2


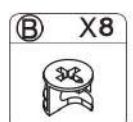


MODEL NAME:
LOFT STUDIO WHITE BEDSIDE
366176

MODEL NAME:
LOFT STUDIO WHITE BEDSIDE
366176

MODEL NAME:
LOFT STUDIO WHITE BEDSIDE
366176

STEP 11

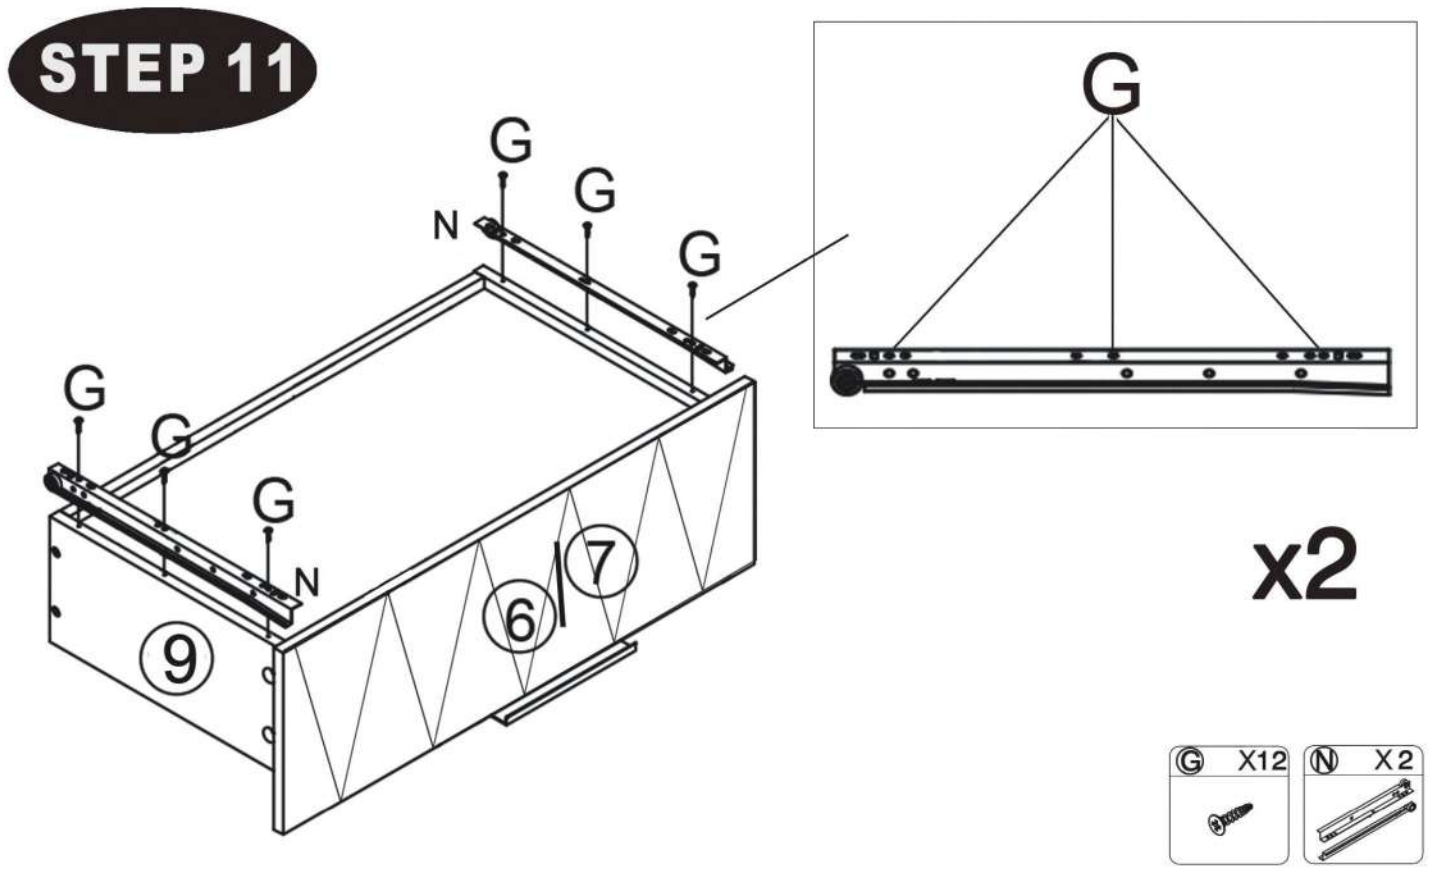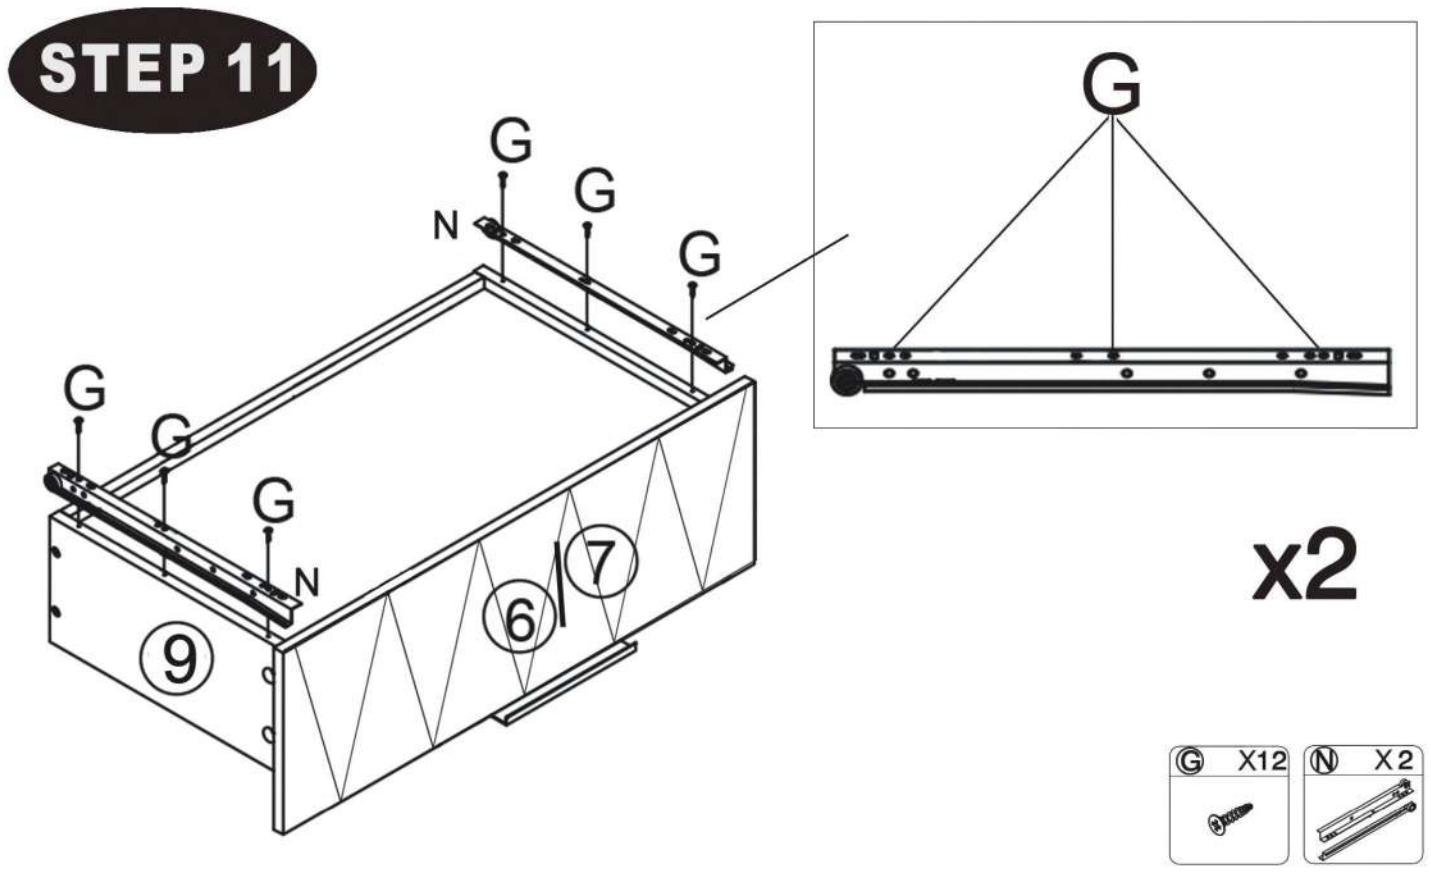

STEP 11

Diagram illustrating the assembly of the top rail (G) and corner brackets (N) onto the frame (6, 7, 9). The assembly is shown for two sides (x2).

Legend:

- G X12 (Top Rail)
- N X2 (Corner Bracket)

STEP 11

x2

G X12

N X2

STEP 12

