



## **DISPLAY SHLEF**

Item Code: 370082
Assembly Instructions

1.0hr



FLOOR AREA 2Mx2M



APPROXIMATE ASSEMBLY TIME


**2 PERSONS ASSEMBLY** 

**REQUIRED ASSEMBLY SPACE** 

REQUIRED ASSEMBLY TOOLS



ALLEN WRENCH (INCLUDED)

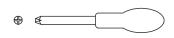


POZI SCREWDRIVER ( NOT INCLUDED )



MEASURING TAPE ( NOT INCLUDED )

## **ASSEMBLED DIMENSIONS**

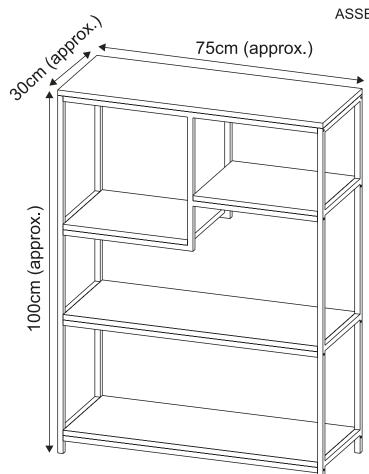


MAX. LOADING: 15KG (3KG PER SHELF)

# Item Code: 370082 Assembly Instructions

NO.	PART LIST	QTY	NO.	PART LIST	QTY
1	LEFT METAL FRAME	1	5	LONG SHELF PANEL	2
2	RIGHT METAL FRAME	1	6	SHORT SHELF PANEL	2
3	BACK METAL FRAME	2	7	TOP PANEL	1
4	CONNECTING PIPE	4			

## **PART LIST**

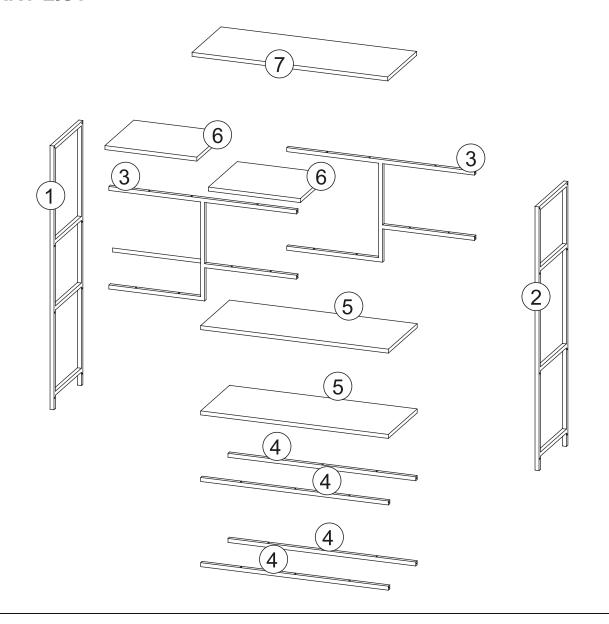

# Item Code: 370082 Assembly Instructions

Α	x16	В	x22	С	x1	D	x2	Ε	x2
						R. D.			
(	6 x 25 mm		4 x 25 mm			4	4 x 30 mm		
	SCREW		SCREW	ALLEN WRENCH		SCREW		ANTI-TIP STRAP	
F	x2	G	x8						
		4	4 x 20 mm						
W.	ALL PLUG		SCREW						

# Item Code: 370082 Assembly Instructions

## NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.



## **IMPORTANT:**

When drilling into walls, always check for hidden wires or pipes, etc.




## **Tips & Tricks**

Make sure that the hardware used is suitable for supporting your unit. Please consult a qualified tradesperson if unsure.

- $\square$  If you are unsure, please select a larger screw and wall plug.
- ☑ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


## Types Of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

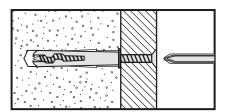


#### 1. General Purpose Wall Plug

Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

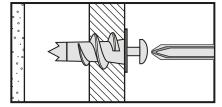


#### 2. Plasterboard Wall Plug

For use when attaching light loads onto plasterboard partitions.

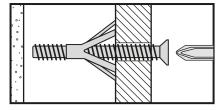


#### 3. Cavity Fixing Wall Plug

For use with plasterboard partitions or hollow wooden doors.

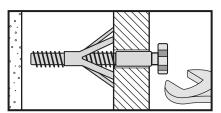


#### 4. Cavity Fixing Heavy Duty Wall Plug

For use when fitting or supporting heavy loads such as shelving and wall cabinets.

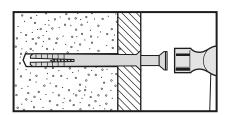

#### 5. Hammer Fixing Wall Plug


For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

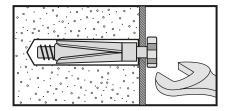


### 6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.

Item Code: 370082 **Assembly Instructions** 

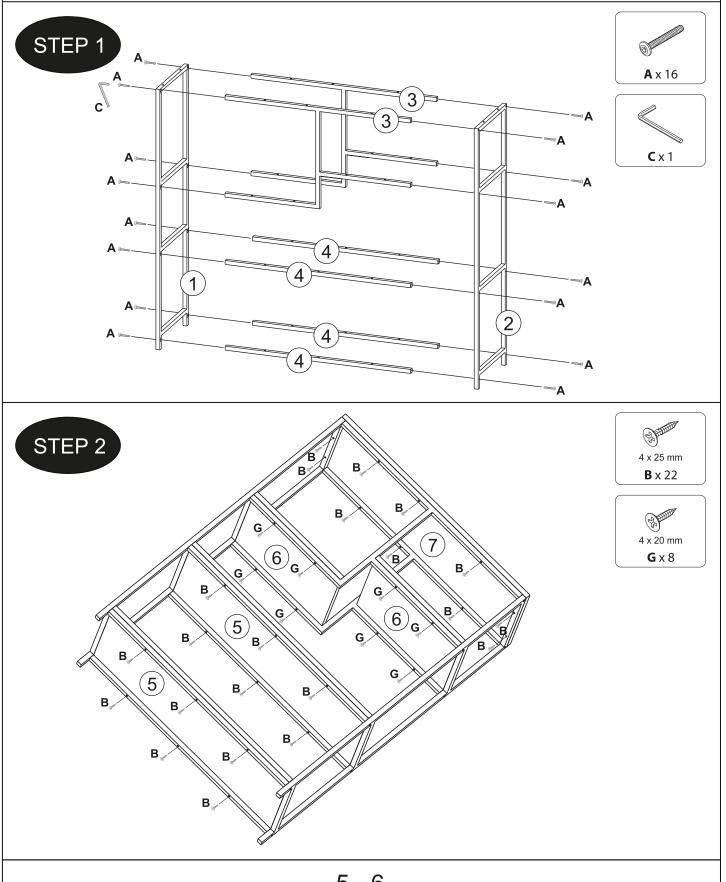


Item Code: 370082
Assembly Instructions

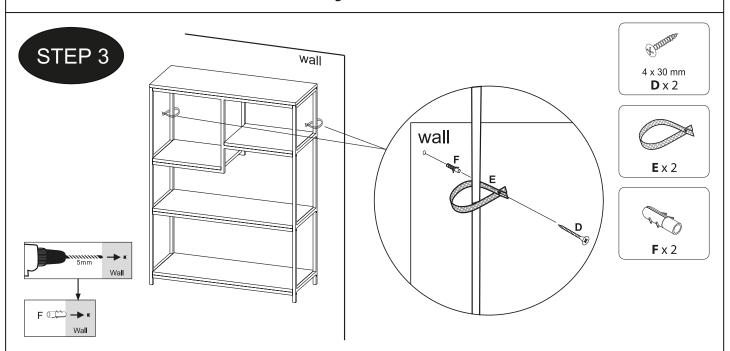

**WARNING:** Anti-tipping hardware is only a deterrent. It is not a substitute for proper adult supervision. Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended, could provide protection against the unexpected tipping of furniture due to improper use.

 $Please\ ensure\ the\ anti-tipping\ hardware\ provided\ is\ suitable\ for\ your\ wall\ or\ else\ it\ might\ damage\ your\ wall\ during\ installation.$ 



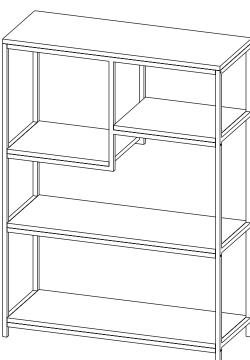



Domestic use only
Manufactured for B&M Retail, L24 8RJ, UK
Homesavers, 5 Old Dublin Rd, Dublin, A94 K1H5
Made in China