



nörsk
QUALITY ENGINEERING

BEDSIDE CABINET


Item Code: 383332

Assembly Instructions

45min

APPROXIMATE ASSEMBLY TIME

2 PERSONS ASSEMBLY

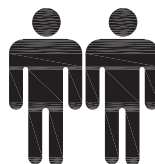


FLOOR AREA
1Mx1M




REQUIRED ASSEMBLY SPACE

REQUIRED ASSEMBLY TOOLS

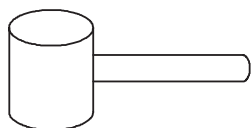


SOFT RUBBER HAMMER(Not Provided)



POZI SCREWDRIVER(Not Provided)

ASSEMBLED DIMENSIONS

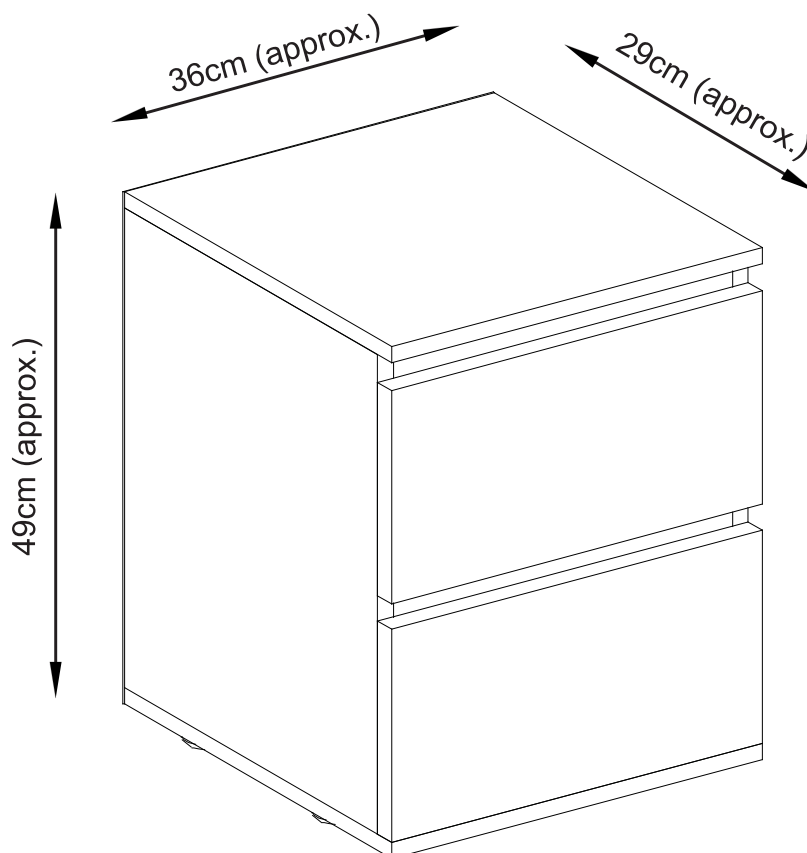

Max. Loading: 15kg (Top Panel: 5kg, Drawer: 5kg per each)


NÖRSK BEDSIDE CABINET

ITEM CODE: 383332

Assembly Instructions

NO.	PART LIST	QTY	NO.	PART LIST	QTY
①	DRAWER LEFT SIDE PANEL	2	⑦	RIGHT SIDE PANEL	1
②	DRAWER RIGHT SIDE PANEL	2	⑧	FRONT CROSS BAR	2
③	DRAWER BACK PANEL	2	⑨	TOP PANEL	1
④	DRAWER BOTTOM PANEL	2	⑩	BOTTOM PANEL	1
⑤	DRAWER FRONT PANEL	2	⑪	BACK PANEL	2
⑥	LEFT SIDE PANEL	1			



PART LIST

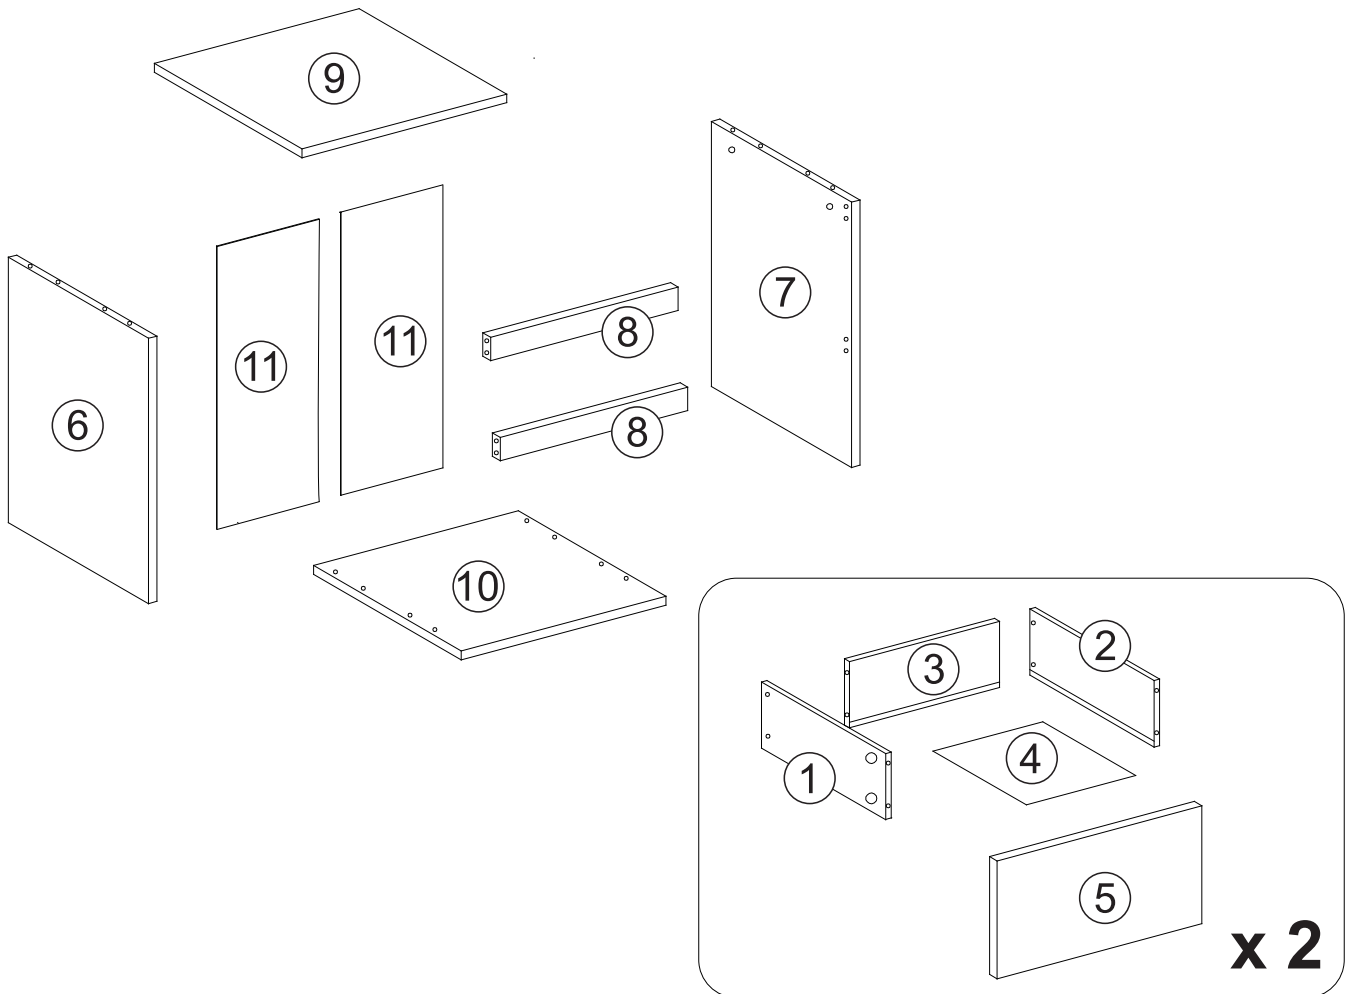

NÖRSK BEDSIDE CABINET

ITEM CODE: 383332
Assembly Instructions

HARDWARE LIST

P1	x12	P2	x12	P3	x8	P4	x16	P5	x24
					Dia.4x35mm				Dia.3.5x12mm
Quickfit		Cam-lock		Screw		Wooden Dowel		Screw	

P6	x2	P7	x4	P8	x4	P9	x4	P10	x1
 CL DL DR CR			Dia.4x16mm		Dia.5x40mm				
Drawer Runner		Screw		Screw		Floor Protector		Back Panel Joint Strip	

P11	x14	P12	x1
			
Nails		Allen Wrench	

NÖRSK BEDSIDE CABINET

ITEM CODE: 383332
Assembly Instructions



Safety Advice and Care Advice

KEEP ALL THE SAFETY ADVICE AND INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE!



WARNING! RISK OF LOSS OF LIFE OR ACCIDENT

TO INFANTS AND CHILDREN! Never leave children unsupervised with the packaging materials. Danger of suffocation.



CAUTION! RISK OF INJURY! Make sure that all parts are undamaged and assembled correctly. Improper assembly carries a risk of injury. Damaged parts may affect the safety and function of the product.

- Adult assembly required.
- Power tools are not recommended for the assembly of this product.
- Make sure that this product is stable & used only on a solid & flat surface.
- Do not use this product unless all screws and fixings are firmly secured.
- Do not leave children unsupervised! The product is not a climbing frame or a toy!
- Do not stand, sit or lean on this product
- Do not use this product as a step ladder or as a chopping surface.
- Do not lift or move the product when it is loaded.
- Do not load more than a total of 15kg (Top Panel: 5kg, Drawer: 5kg per each) onto the unit, otherwise there is a risk of injury and/or damage to the product
- Distribute weight evenly across the product so that it cannot overturn.
- Do not place hot items such as coffee cups directly on the surface(s) unless adequately thick table mats are used.
- Please periodically check all fittings and re-tighten as necessary.
- For Indoor & Domestic use only.

Care instructions:


- Wipe clean with a dry cloth.
- Do not use scourers, abrasive or chemical solvents.
- Keep away from moisture and direct sunlight.
- Keep away from fire and inflammable objects.
- Store in a dry place.

NÖRSK BEDSIDE CABINET



ITEM CODE: 383332
Assembly Instructions

SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

CAM-LOCK

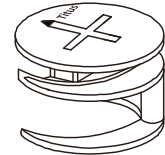


WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE

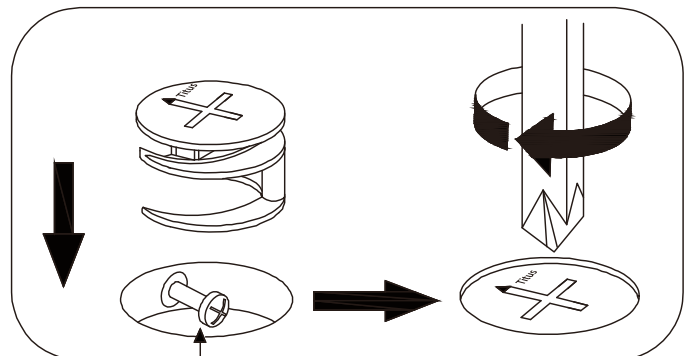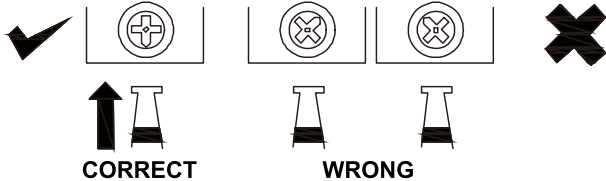

Quickfit head needs to be in centre

QUICKFIT




Tighten until shoulder is flush with panel. Do not overtighten or leave too loose. (see example below)

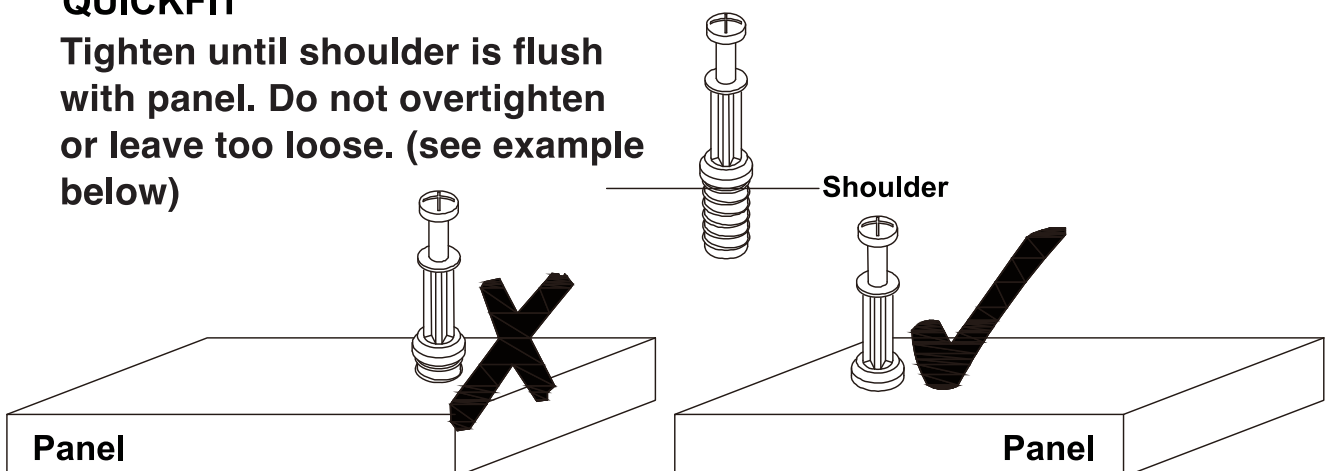

NÖRSK BEDSIDE CABINET

ITEM CODE: 383332
Assembly Instructions

STEP 1

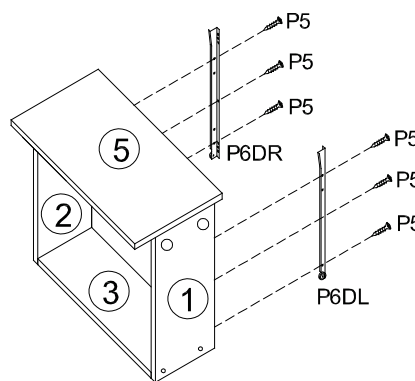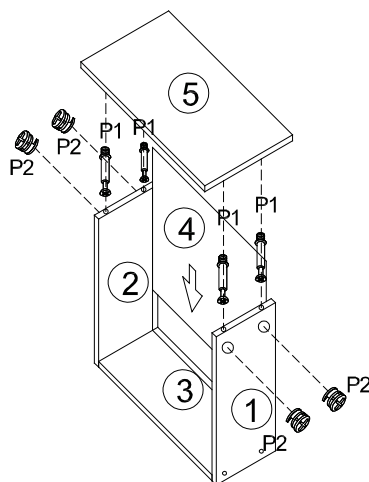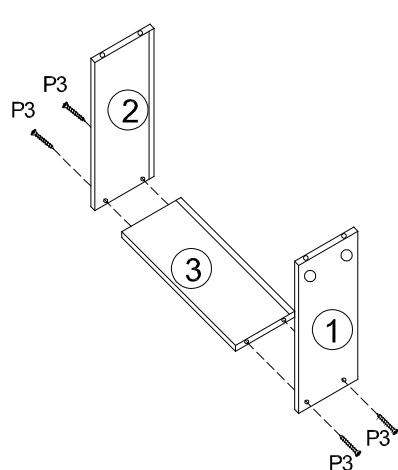

P1 x 8




P3 x 8



P2 x 8





P5 x 12



DL DR
P6 x 2

x2

STEP 2

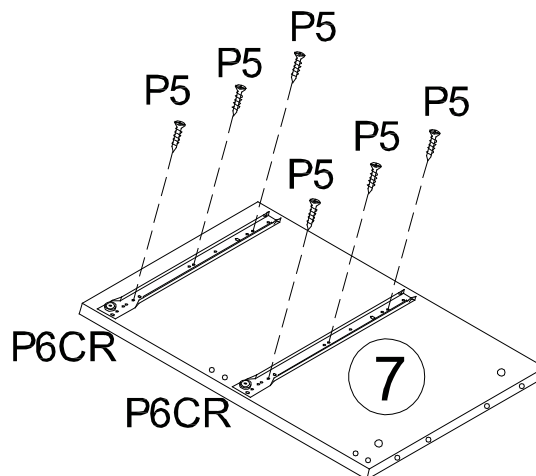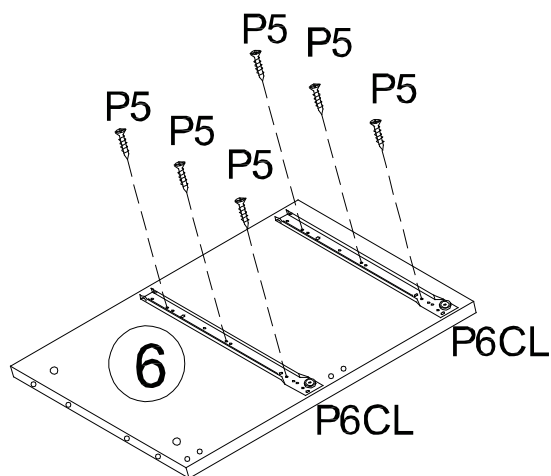

P5 x 12





CL CR
P6 x 2

NÖRSK BEDSIDE CABINET


ITEM CODE: 383332
Assembly Instructions

STEP 3

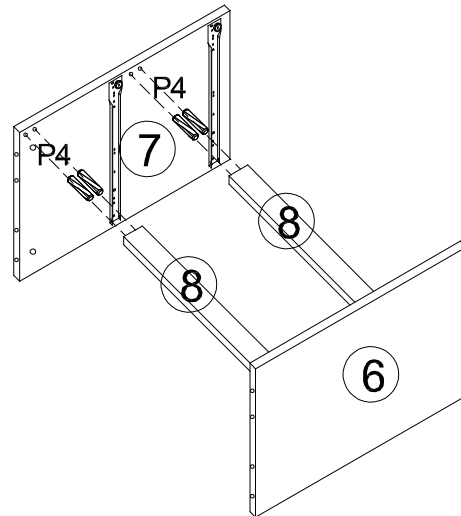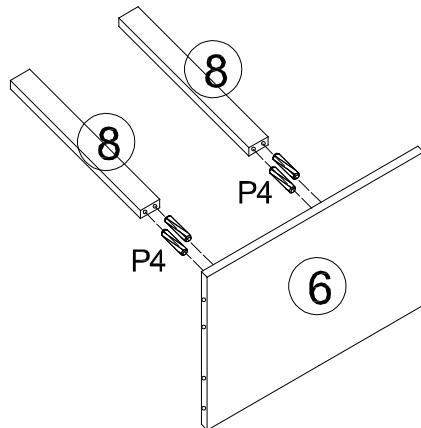

P4 x 8

STEP 4

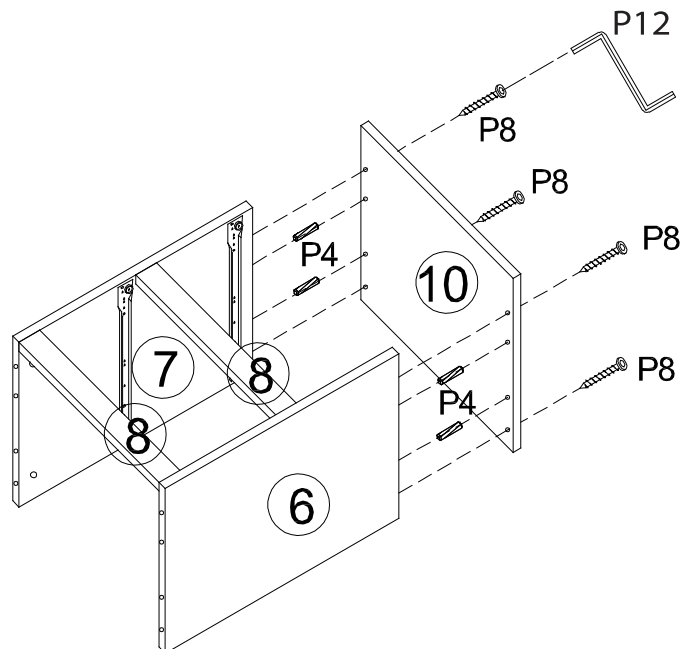

P4 x 4



P8 x 4




P12 x 1

NÖRSK BEDSIDE CABINET

ITEM CODE: 383332
Assembly Instructions

STEP 5

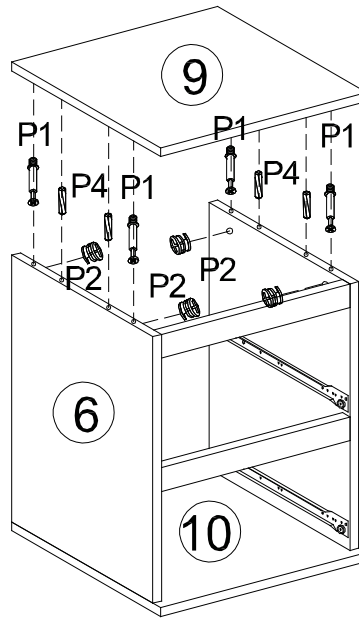

P1 x 4




P2 x 4



P4 x 4

STEP 6

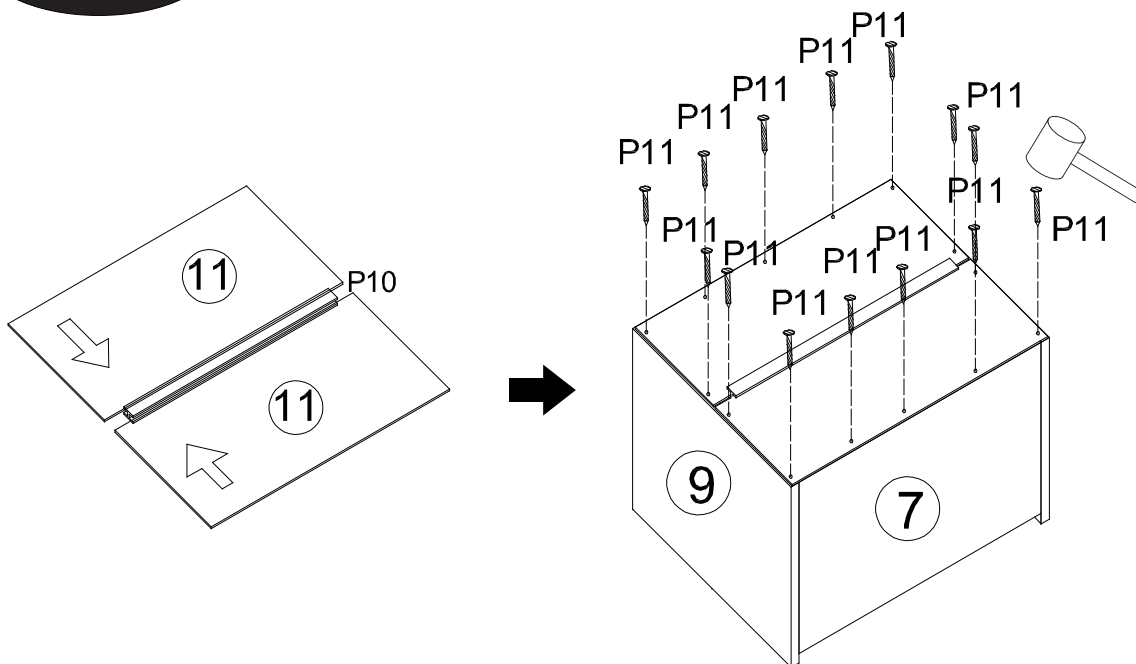

P10 x 1




P11 x 14

NÖRSK BEDSIDE CABINET

ITEM CODE: 383332
Assembly Instructions

STEP 7

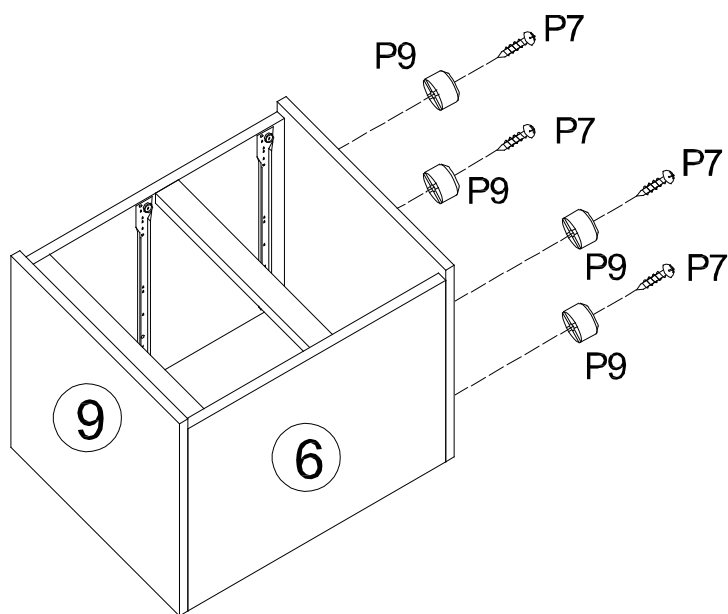


P7 x 4



P9 x 4

STEP 8

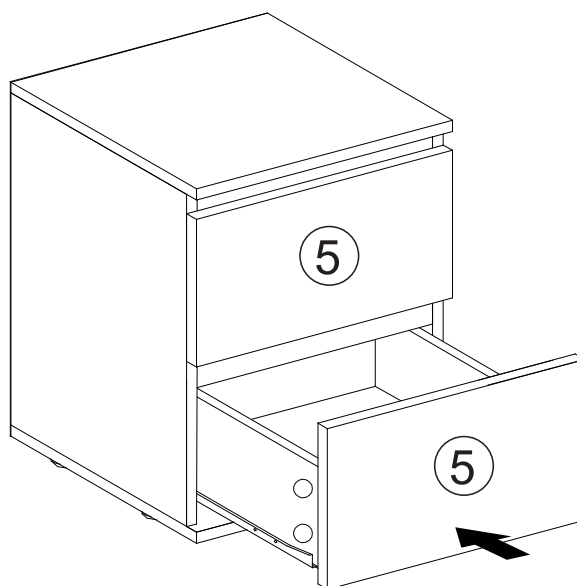

B&M Retail, L24 8RJ, UK
www.bmstores.co.uk
B&M France SAS, 8 Rue du Bois Joli, 63800, France
MADE IN CHINA

Peel off the PVC protective mask before using