



BEDSIDE

ITEM CODE: 395519

Assembly Instructions

0.5hr

APPROXIMATE ASSEMBLY TIME

1 PEOPLE ASSEMBLY




FLOOR AREA
1MX1M




REQUIRED ASSEMBLY SPACE

REQUIRED ASSEMBLY TOOLS




SOFT RUBBER HAMMER (Not Included)



POZI SCREWDRIVER (Not Included)

ASSEMBLED DIMENSIONS

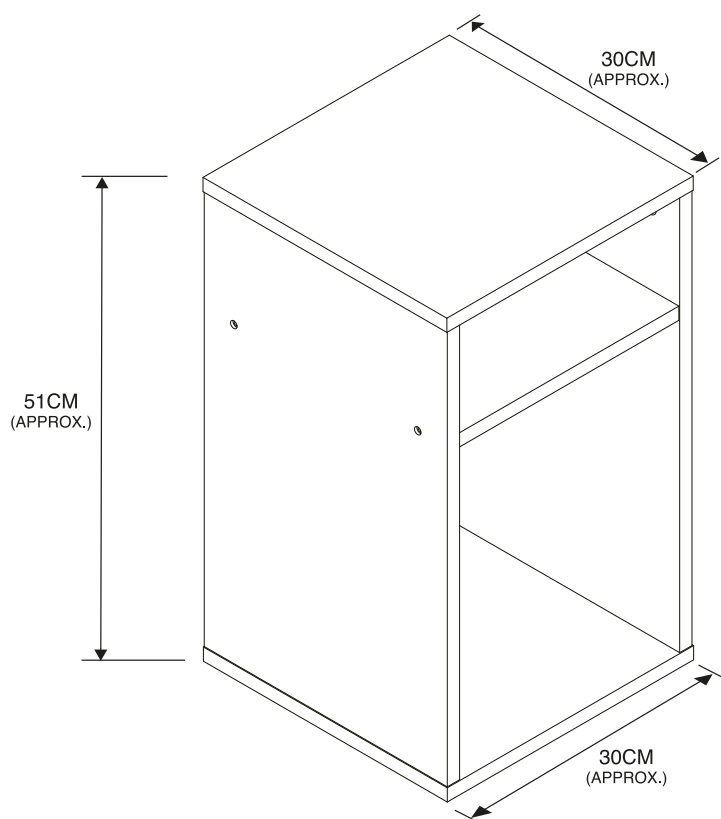

Max. Loading: 9kg (3kg per shelf)


SIMPLY BEDSIDE

ITEM CODE: 395519

Assembly Instructions




NO.	PART LIST	QTY	NO.	PART LIST	QTY
①	TOP PANEL	1	④	RIGHT SIDE PANEL	1
②	BOTTOM PANEL	1	⑤	SHELF	1
③	LEFT SIDE PANEL	1	⑥	BACK PANEL	1

PART LIST

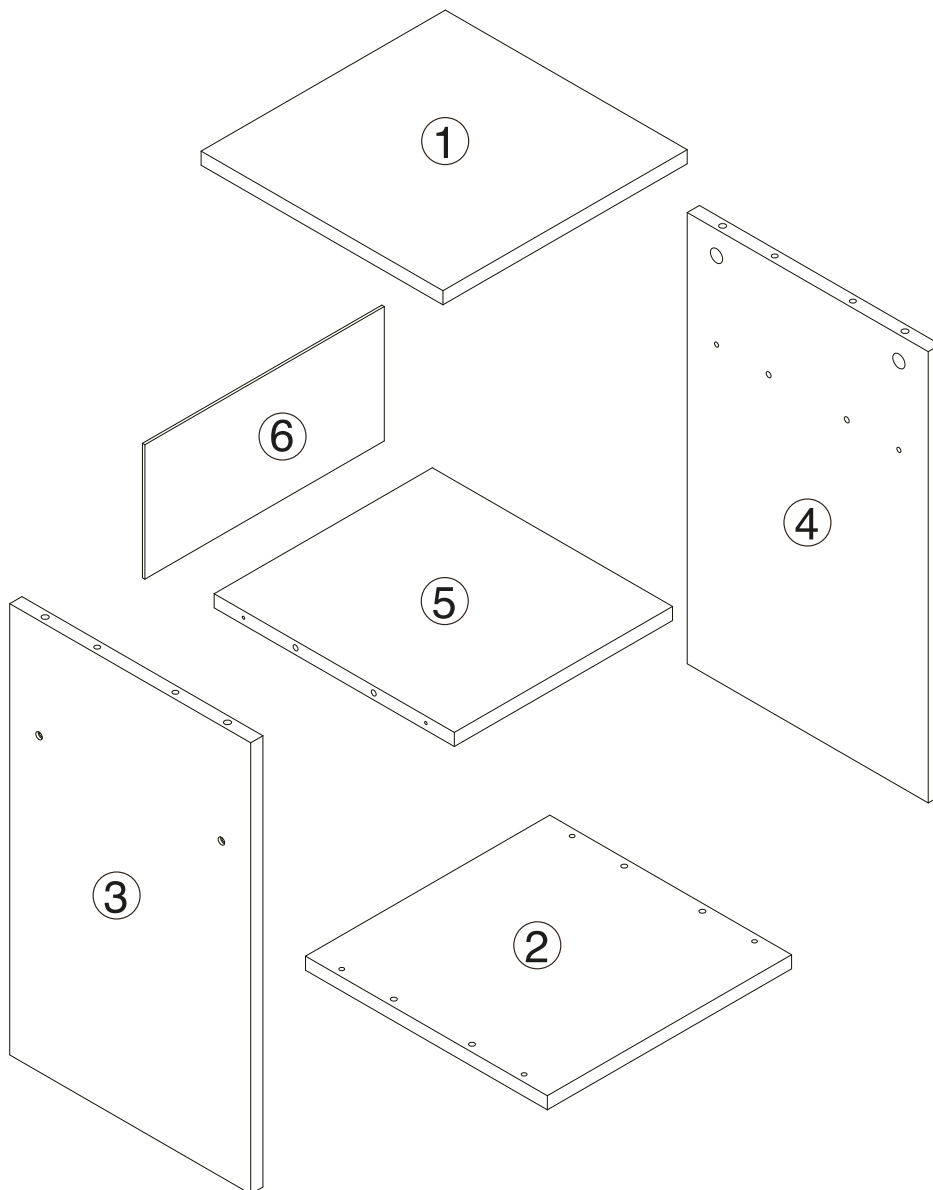

SIMPLY BEDSIDE
ITEM CODE: 395519
Assembly Instructions

HARDWARE LIST

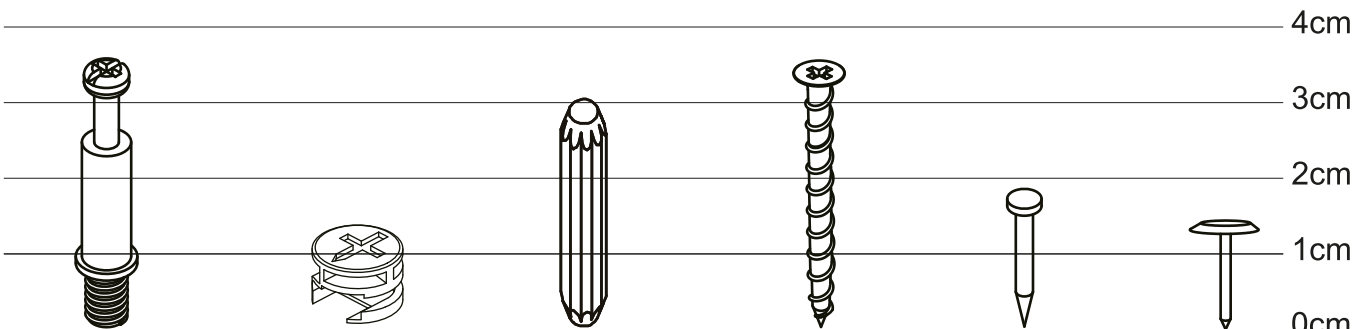					
					
x4	X4	X12	X8	X6	X4
M6 x 35mm	M15 x 10mm	M6 x 30mm	M4 x 35mm	M2 x 18mm	M15 x 1mm
A	B	C	D	E	F
QUICKFIT	CAM-LOCK	WOOD DOWEL	SCREW	NAIL	FLOOR PROTECTOR



x4
M15mm
G
STICKER

SIMPLY BEDSIDE

ITEM CODE: 395519

Assembly Instructions



Safety Advice and Care Advice

KEEP ALL THE SAFETY ADVICE AND INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE!



WARNING! RISK OF LOSS OF LIFE OR ACCIDENT

TO INFANTS AND CHILDREN! Never leave children unsupervised with the packaging materials. Danger of suffocation.



CAUTION! RISK OF INJURY! Make sure that all parts are undamaged and assembled correctly. Improper assembly carries a risk of injury. Damaged parts may affect the safety and function of the product.

- Adult assembly required.
- Power tools are not recommended for the assembly of this product.
- Make sure that this product is stable & used only on a solid & flat surface.
- Do not use this product unless all screws and fixings are firmly secured.
- Do not leave children unsupervised! The product is not a climbing frame or a toy!
- Do not stand, sit or lean on this product.
- Do not use this product as a step ladder or as a chopping surface.
- Do not lift or move the product when it is loaded.
- Do not load more than a total of 9kg (3kg per shelf) onto the unit, otherwise there is a risk of injury and/or damage to the product.
- Distribute weight evenly across the product so that it cannot overturn.
- Do not place hot items such as coffee cups directly on the surface(s) unless adequately thick table mats are used.
- Please periodically check all fittings and re-tighten as necessary.
- For Indoor & Domestic use only.


Care instructions:

- Wipe clean with a dry cloth.
- Do not use scourers, abrasive or chemical solvents.
- Keep away from moisture and direct sunlight.
- Keep away from fire and inflammable objects.
- Store in a dry place.



SIMPLY BEDSIDE
ITEM CODE: 395519
Assembly Instructions

SPECIAL TIPS FOR FITTING CAM-LOCKS **AND QUICKFIT**

CAM-LOCK

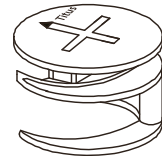


**WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE**

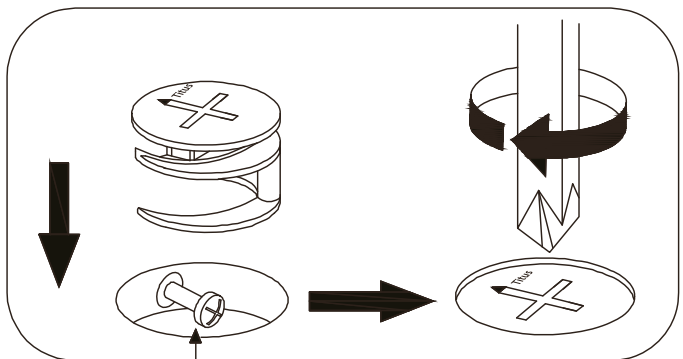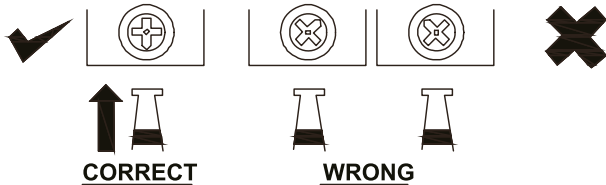

Quickfit head needs to be in centre

QUICKFIT

Tighten until shoulder is flush with panel. Do not overtighten or leave too loose. (see example below)

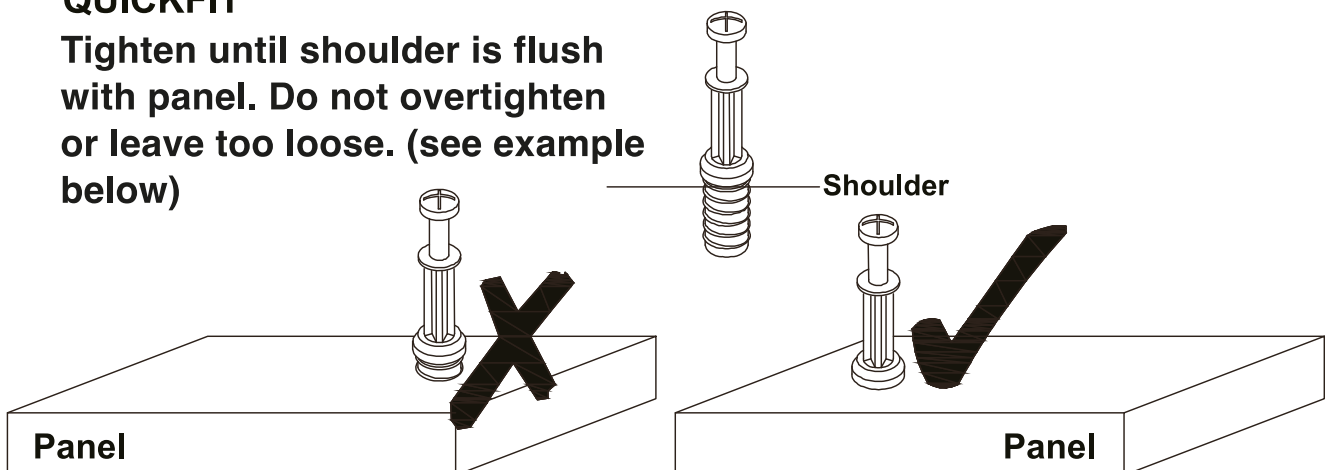


SIMPLY BEDSIDE

ITEM CODE: 395519


Assembly Instructions

STEP 1

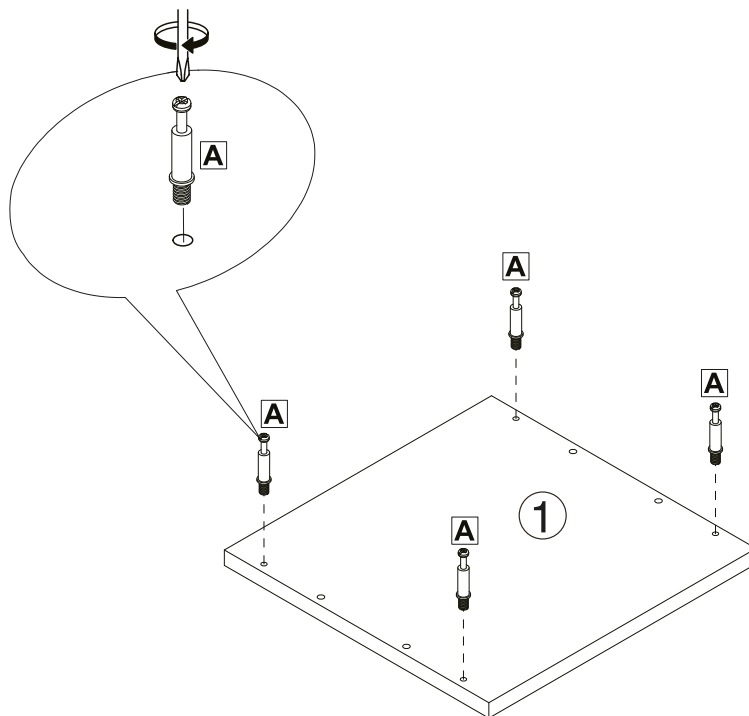

A x 4

STEP 2

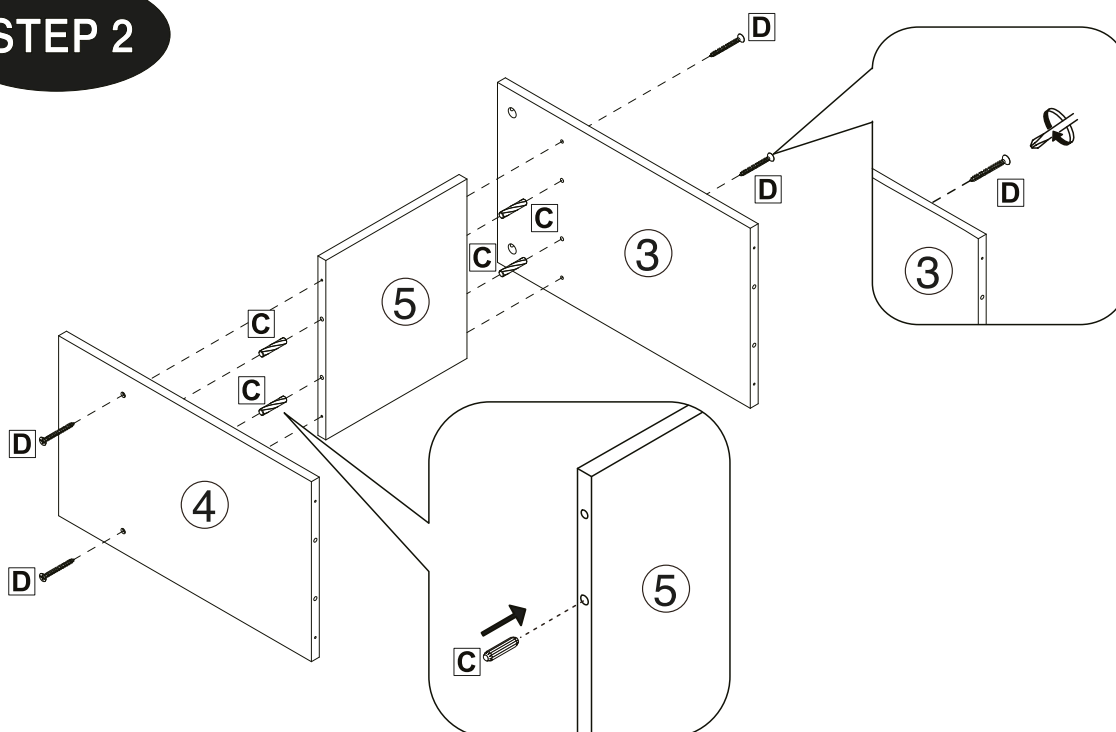

C x 4




D x 4

SIMPLY BEDSIDE

ITEM CODE: 395519

Assembly Instructions

STEP 3

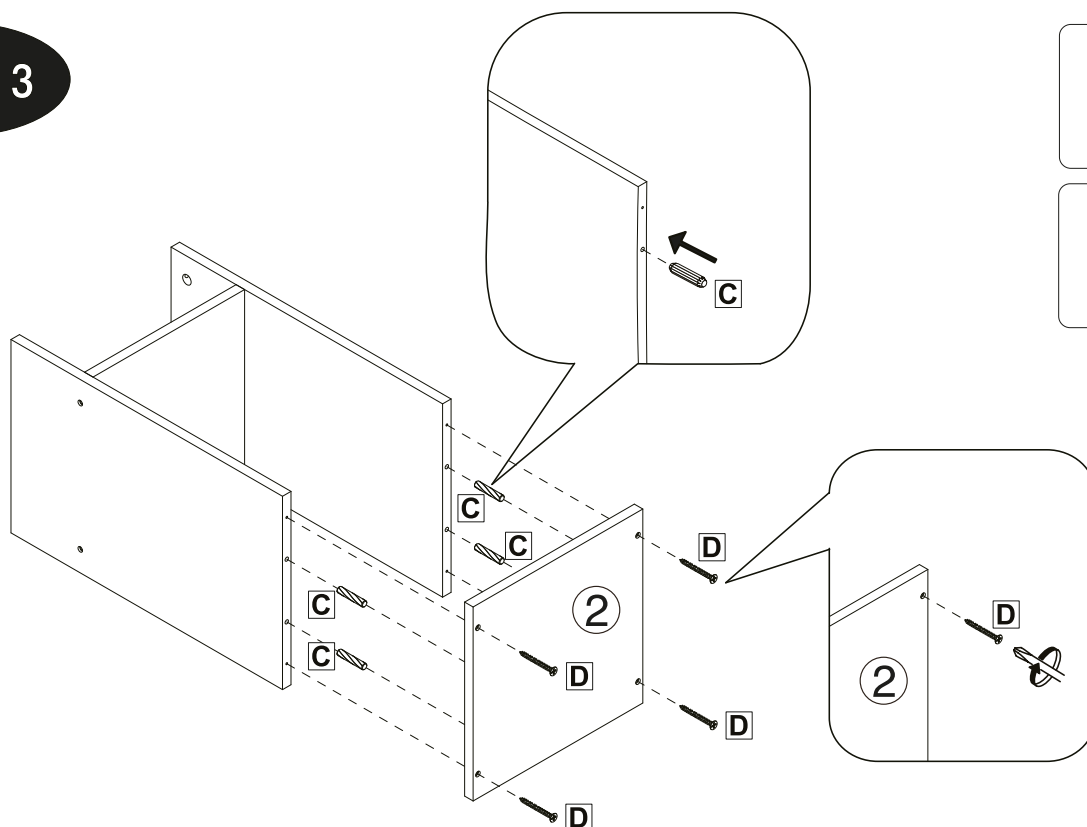


C x 4



D x 4

STEP 4

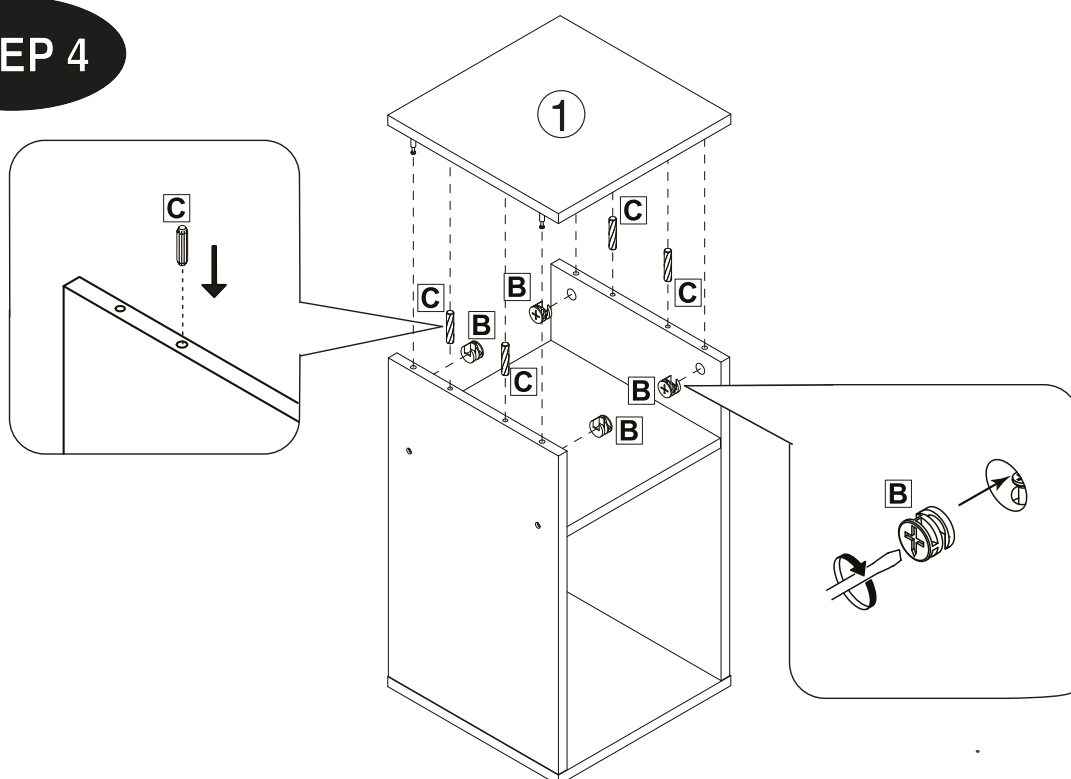

B x 4




C x 4

SIMPLY BEDSIDE

ITEM CODE: 395519


Assembly Instructions

STEP 5

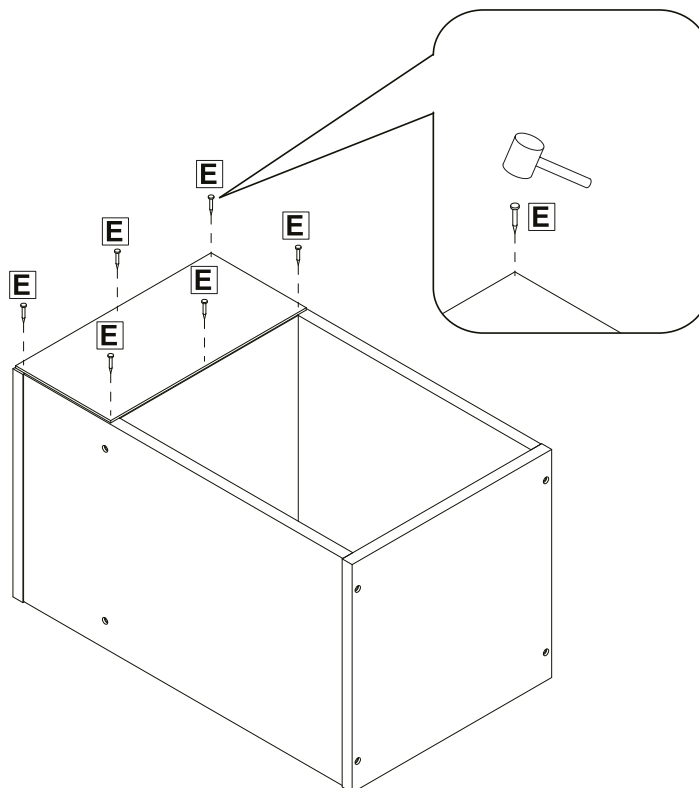

E x 6

STEP 6

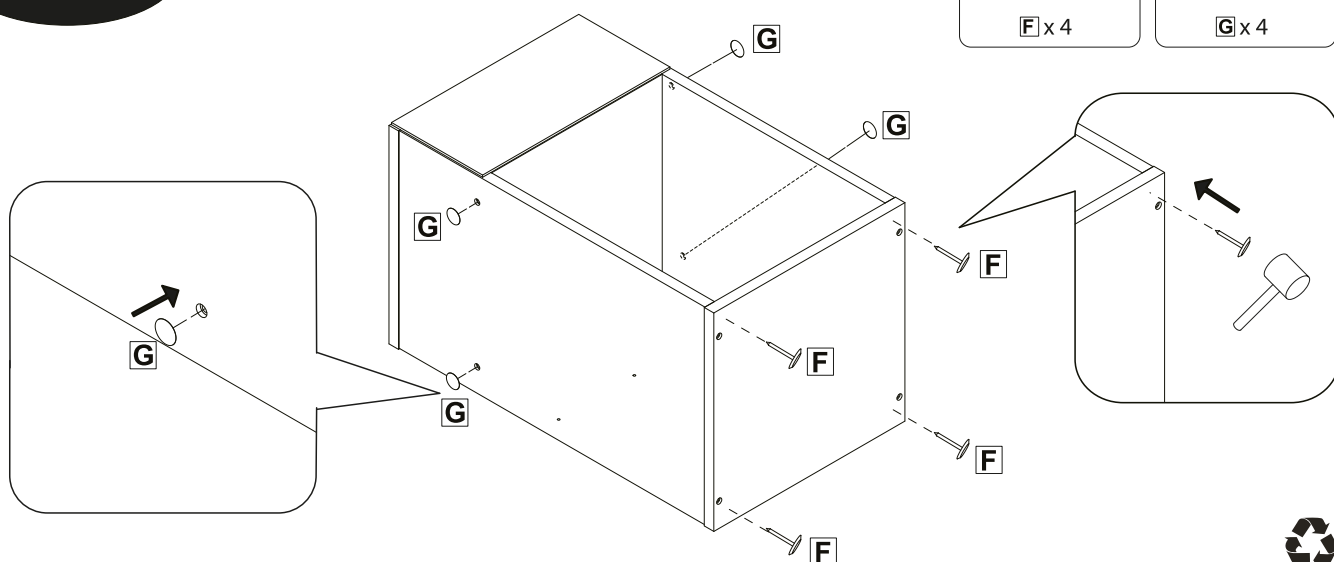

F x 4



G x 4



Domestic use only.

Manufactured for B&M Retail, L24 8RJ, UK

www.bmstores.co.uk

B&M France SAS, 8 Rue du Bois Joli, 63800, France

Made In China