



COBERG

2 DOOR BATHROOM CABINET

Item Code: 418770
Assembly Instructions


45mins

APPROXIMATE ASSEMBLY TIME

1 PEOPLE ASSEMBLY




FLOOR AREA
1MX1M

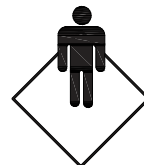


REQUIRED ASSEMBLY SPACE

REQUIRED ASSEMBLY TOOLS




SOFT RUBBER HAMMER (Not Included)



POZI SCREWDRIVER (Not Included)

ASSEMBLED DIMENSIONS

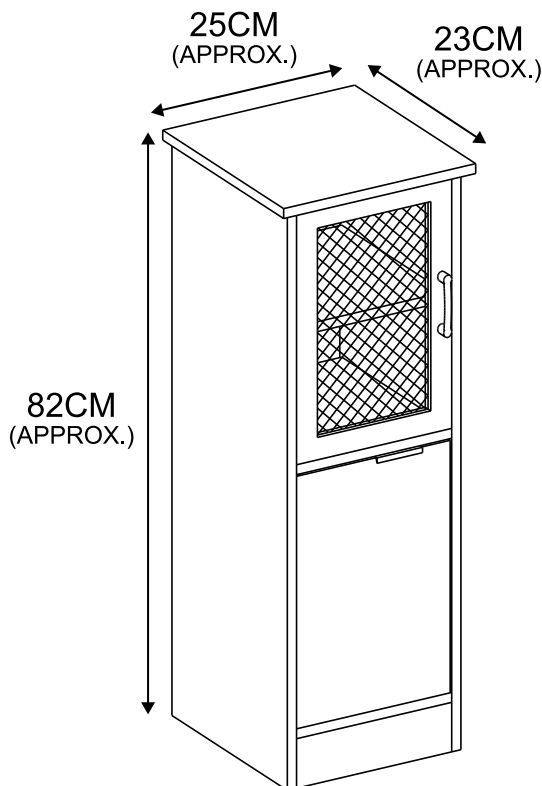

Max. Loading: 15kg (3kg per shelf)


COBERG 2 DOOR BATHROOM CABINET

Item Code: 418770

Assembly Instructions

NO.	PART LIST	QTY	NO.	PART LIST	QTY
①	TOP PANEL	1	⑥	SHELF PANEL	1
②	LEFT SIDE PANEL	1	⑦	SUPPORT BAR	1
③	RIGHT SIDE PANEL	1	⑧	BACK PANEL	1
④	SHELF PANEL	2	⑨	METAL MESH DOOR	1
⑤	SHELF PANEL	1	⑩	DOOR PANEL	1

PART LIST


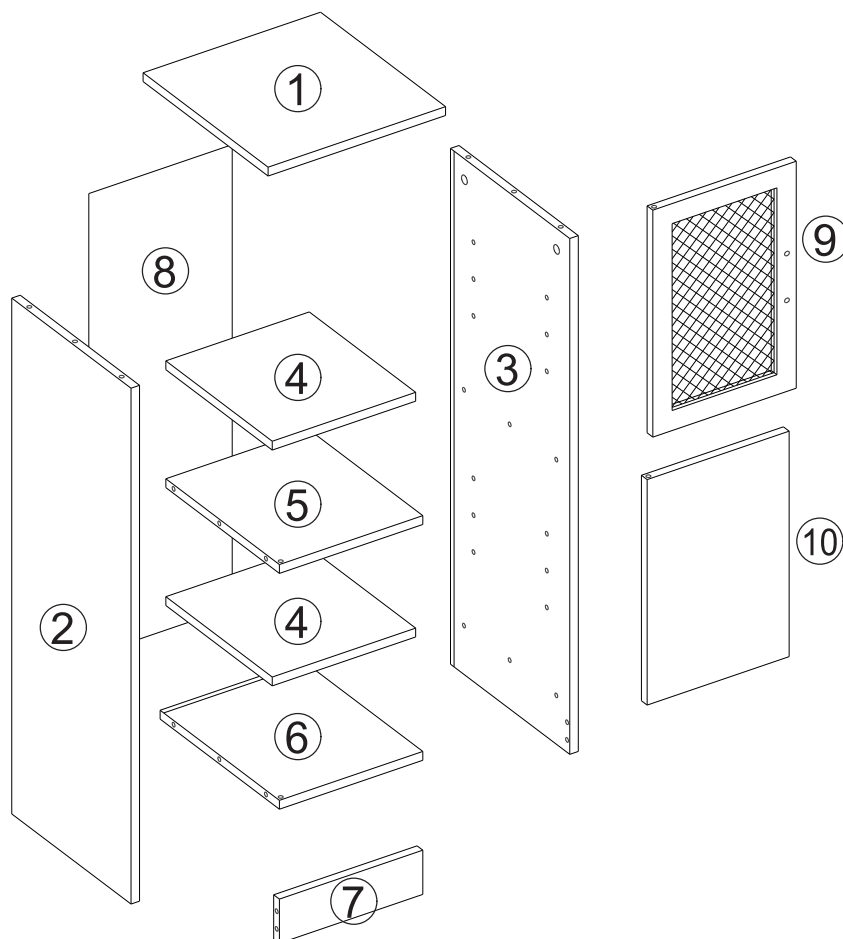


COBERG 2 DOOR BATHROOM CABINET

Item Code: 418770

Assembly Instructions

HARDWARE LIST

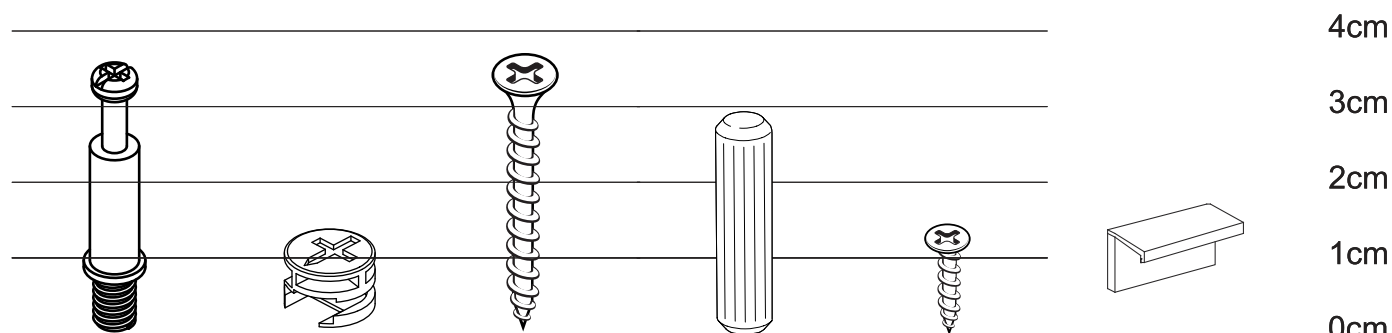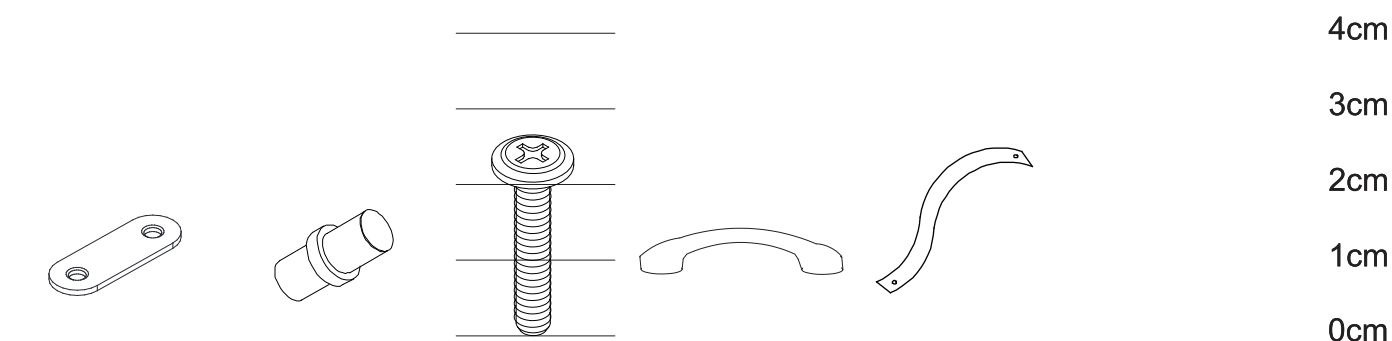
					
X12	X12	X1	X10	X3	X1
M6 x 35mm	M15 x 10mm	M4 x 35mm	M5.8 x 30mm	M3.5 x 12mm	
P1	P2	P3	P4	P5	P6
QUICKFIT	CAM-LOCK	SCREW	WOOD DOWEL	SCREW	HANDLE
					
X1	X4	X2	X1	X1	
		M4 x 20mm			
P7	P8	P9	P10	P11	
METAL PLATE	DOOR SPINDLE	SCREW	HANDLE	WALL STRAP	

COBERG 2 DOOR BATHROOM CABINET

Item Code: 418770

Assembly Instructions


HARDWARE LIST



X2

P12


SUPPORT PLATE



X1

P13

WALL PLUG

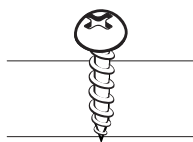


X4

M3 x 14mm

P14


SCREW

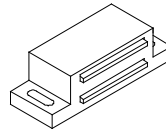

X2

P15

MAGNETIC
CATCH



X8

P16

SHELF SUPPORT


4cm

3cm

2cm

1cm


0cm



X4

P17

FLOOR
PROTECTOR



X2

M3 x 10mm

P18

SCREW

4cm

3cm

2cm

1cm

0cm

COBERG 2 DOOR BATHROOM CABINET

Item Code: 418770

Assembly Instructions



Safety Advice and Care Advice

KEEP ALL THE SAFETY ADVICE AND INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE!

⚠ WARNING! RISK OF LOSS OF LIFE OR ACCIDENT TO INFANTS AND CHILDREN! Never leave children unsupervised with the packaging materials. Danger of suffocation.

⚠ CAUTION! RISK OF INJURY! Make sure that all parts are undamaged and assembled correctly. Improper assembly carries a risk of injury. Damaged parts may affect the safety and function of the product.

- Adult assembly required.
- Power tools are not recommended for the assembly of this product.
- Make sure that this product is stable & used only on a solid & flat surface.
- Do not use this product unless all screws and fixings are firmly secured.
- Do not leave children unsupervised! The product is not a climbing frame or a toy!
- Do not stand, sit or lean on this product.
- Do not use this product as a step ladder or as a chopping surface.
- Do not lift or move the product when it is loaded.
- Do not load more than a total of 15kg (3kg per shelf) onto the unit, otherwise there is a risk of injury and/or damage to the product.
- Distribute weight evenly across the product so that it cannot overturn.
- Do not place hot items such as coffee cups directly on the surface(s) unless adequately thick table mats are used.
- Please periodically check all fittings and re-tighten as necessary.
- For Indoor & Domestic use only.

Care instructions:

- Wipe clean with a dry cloth.
- Do not use scourers, abrasive or chemical solvents.
- Keep away from moisture and direct sunlight.
- Keep away from fire and inflammable objects.
- Store in a dry place.

COBERG 2 DOOR BATHROOM CABINET

Item Code: 418770

Assembly Instructions

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.




Tips & Tricks

Make sure that the hardware used is suitable for supporting your unit.
Please consult a qualified tradesperson if unsure.

- ✓ If you are unsure, please select a larger screw and wall plug.
- ✓ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ✓ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ✓ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types Of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

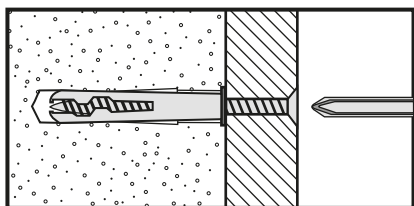


1. General Purpose Wall Plug

Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

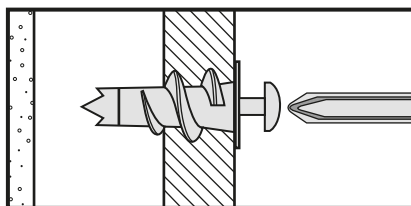


2. Plasterboard Wall Plug

For use when attaching light loads onto plasterboard partitions.

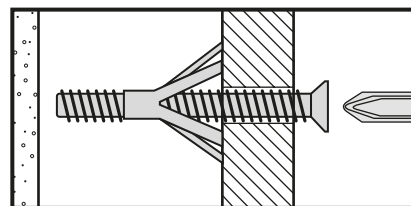


3. Cavity Fixing Wall Plug

For use with plasterboard partitions or hollow wooden doors.

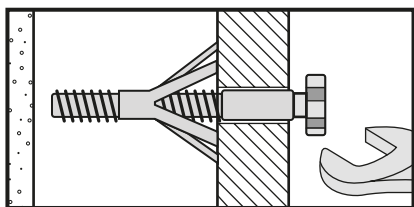


4. Cavity Fixing Heavy Duty Wall Plug

For use when fitting or supporting heavy loads such as shelving and wall cabinets.

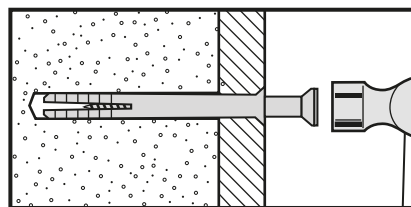

5. Hammer Fixing Wall Plug

For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

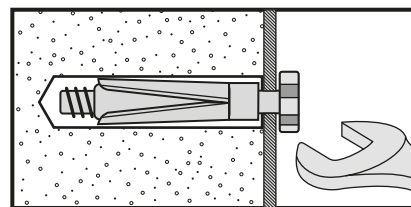


6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.



COBERG 2 DOOR BATHROOM CABINET
Item Code: 418770
Assembly Instructions

SPECIAL TIPS FOR FITTING CAM-LOCKS
AND QUICKFIT

CAM-LOCK

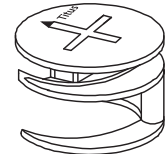


WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE

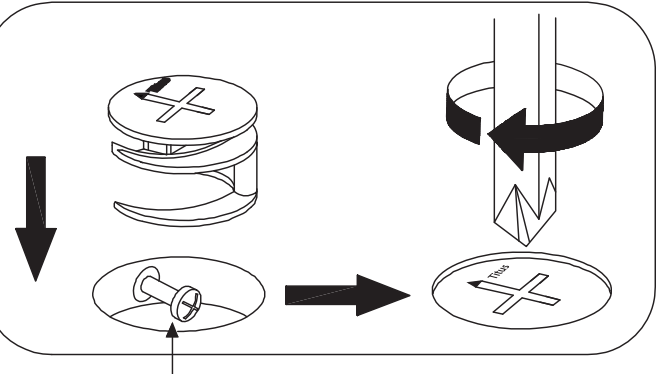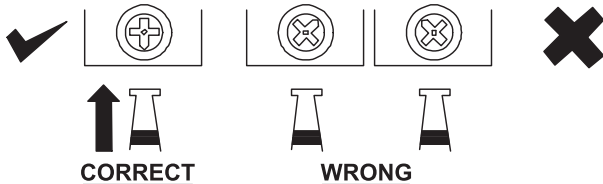

Quickfit head needs to be in centre

QUICKFIT

Tighten until shoulder is flush with panel. Do not overtighten or leave too loose. (see example below)

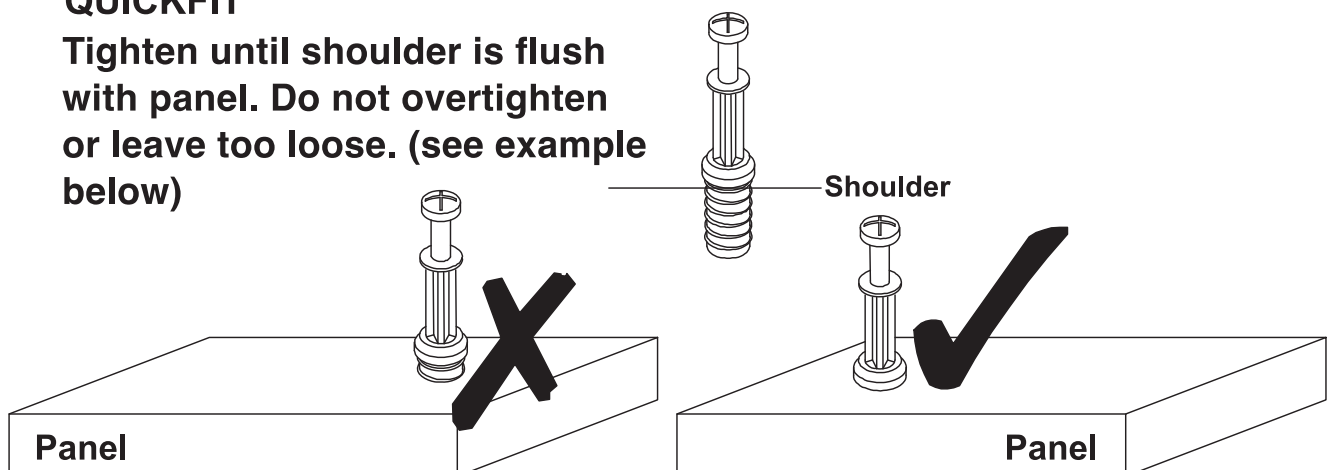


COBERG 2 DOOR BATHROOM CABINET


Item Code: 418770

Assembly Instructions

STEP1

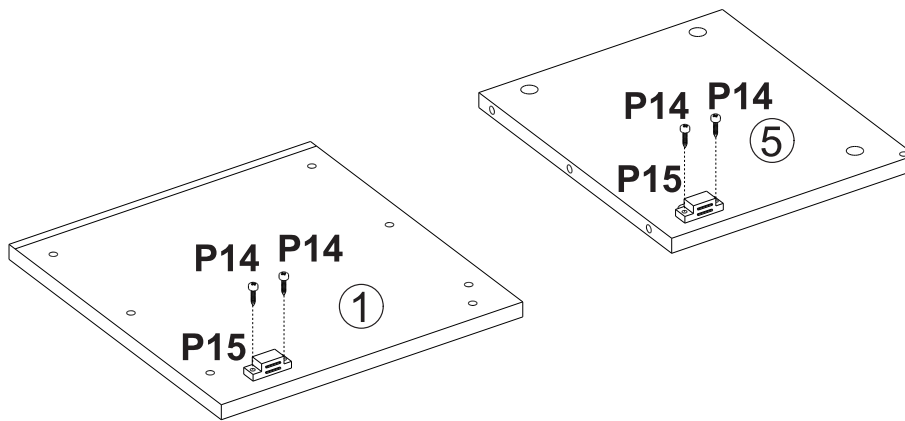


P14 x 4



P15 x 2

STEP2

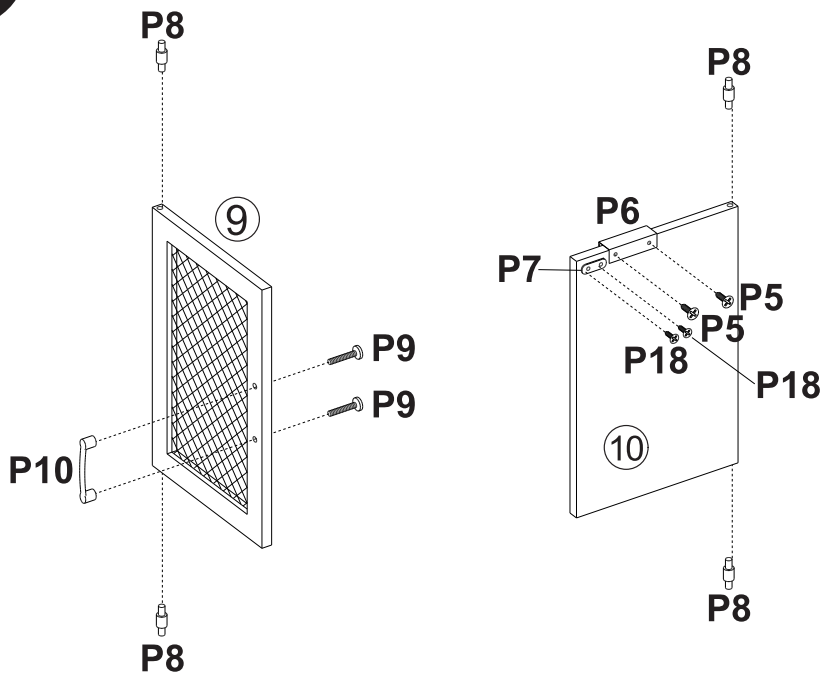

P5 x 2



P7 x 1



P6 x 1



P8 x 4



P9 x 2



P10 x 1





P18 x 2

COBERG 2 DOOR BATHROOM CABINET

Item Code: 418770

Assembly Instructions

STEP3

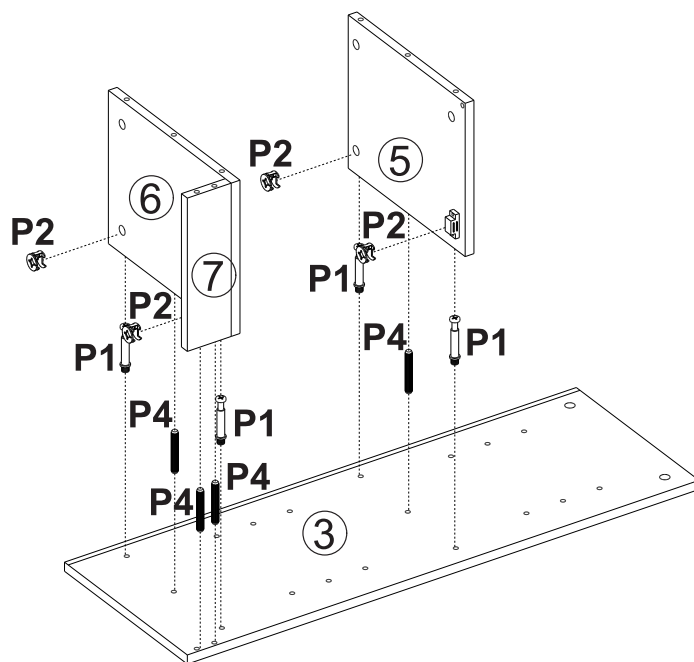

P1 x 4





P2 x 4



P4 x 4

STEP4

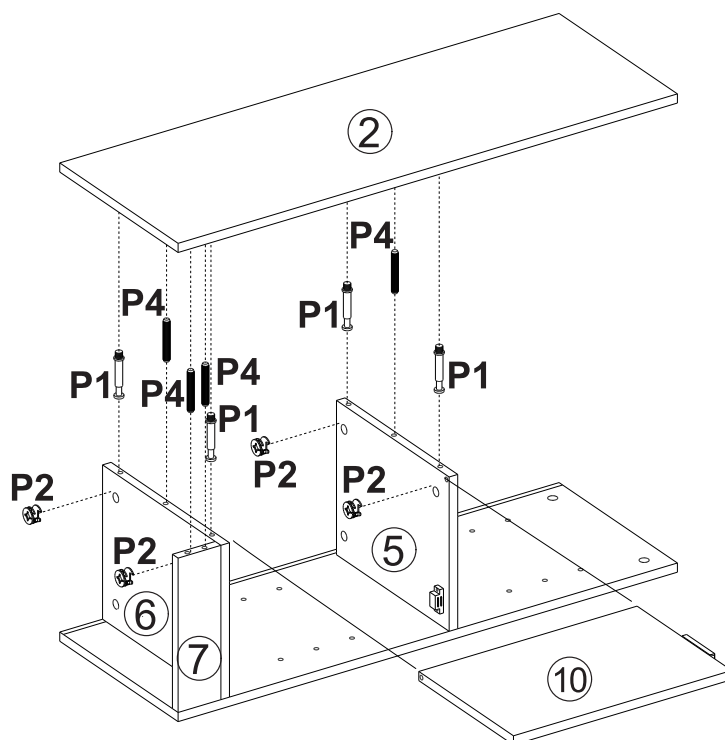

P1 x 4




P2 x 4





P4 x 4

Assembly Instructions

STEP5

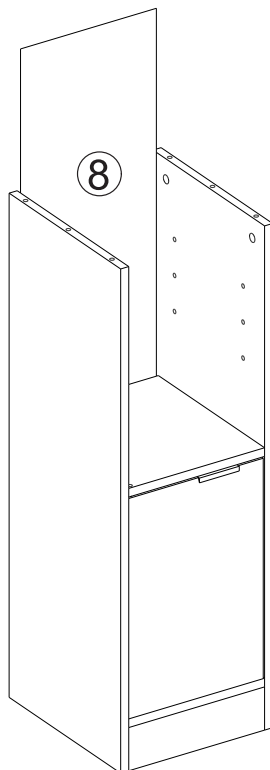

STEP6

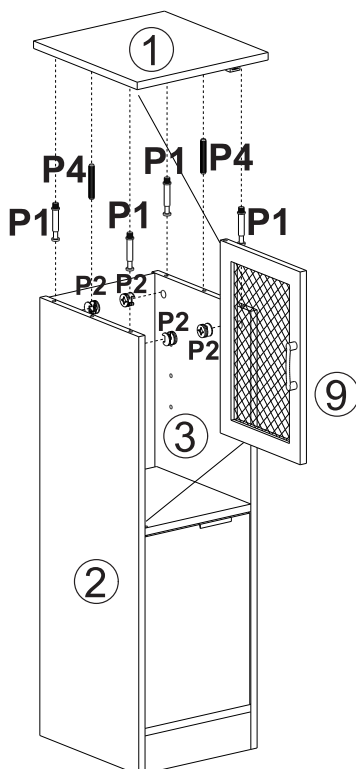

P1 x 4



P2 x 4





P4 x 2

COBERG 2 DOOR BATHROOM CABINET



Item Code: 418770

Assembly Instructions

STEP 7

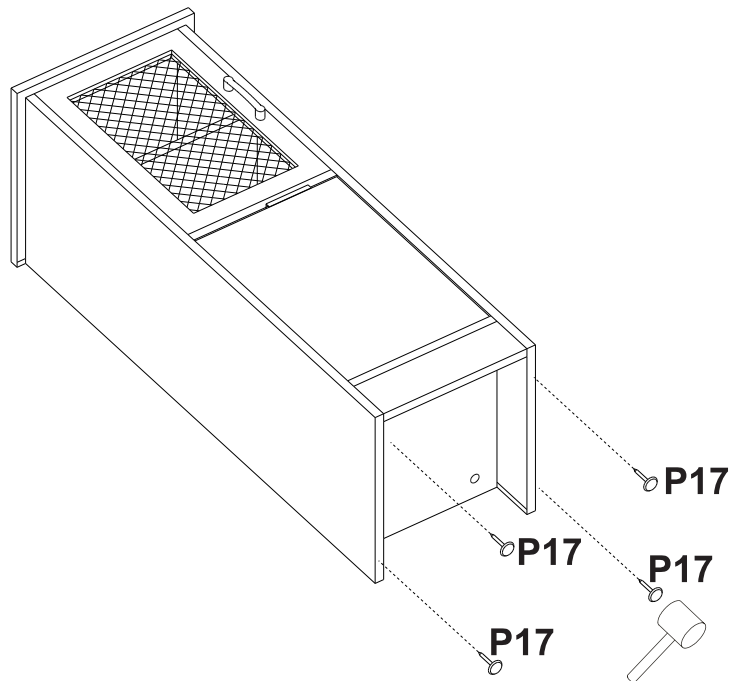

STEP 8

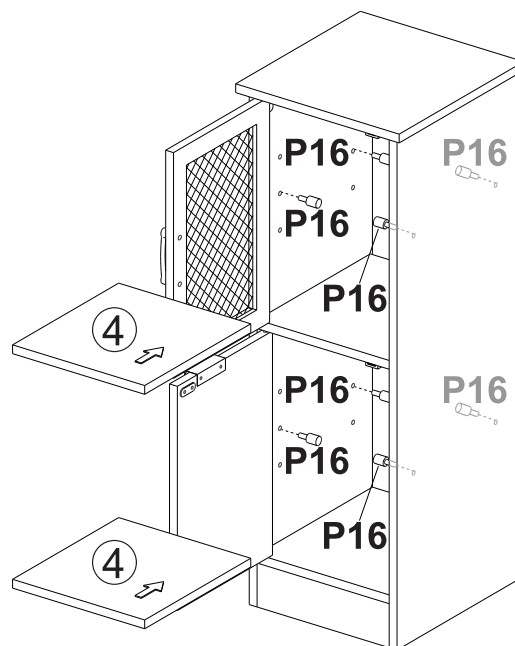


COBERG 2 DOOR BATHROOM CABINET

Item Code: 418770

Assembly Instructions

STEP9

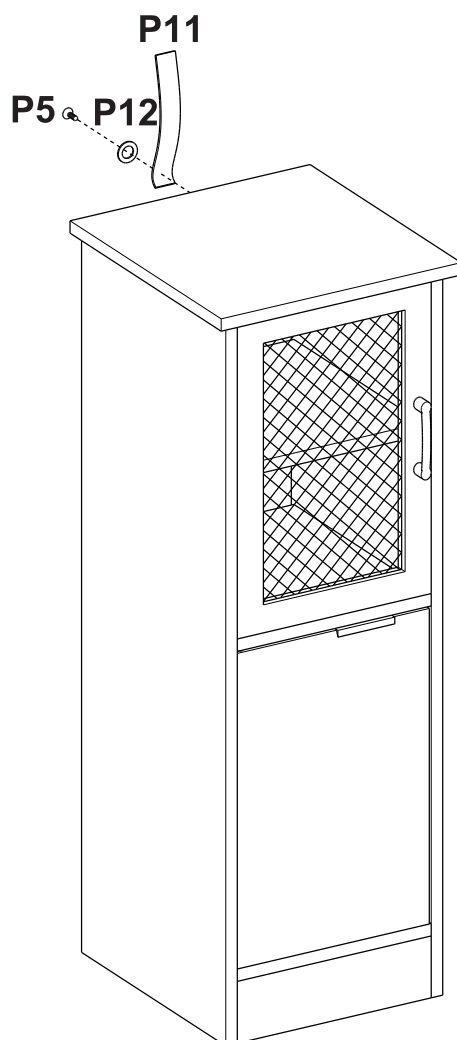

P5 x 1



P11 x 1



P12 x 1



COBERG 2 DOOR BATHROOM CABINET

Item Code: 418770

Assembly Instructions

STEP 10

Wall

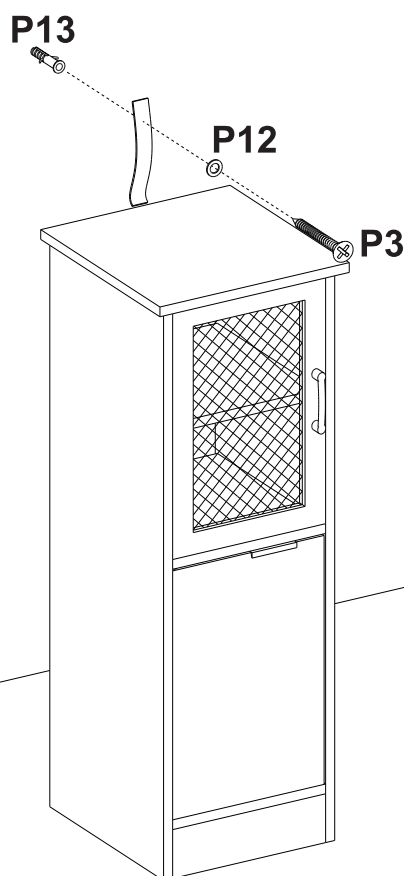

P3 x 1




P12 x 1



P13 x 1

WARNING: Anti-tipping hardware is only a deterrent. It is not a substitute for proper adult supervision. Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended.

This hardware, when properly installed, could provide protection against the unexpected tipping of furniture due to improper use. Please ensure the anti-tipping hardware provided is suitable for your wall or else it might damage your wall during installation.

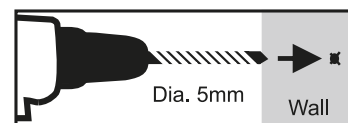

B&M Retail, L24 8RJ, UK

www.bmstores.co.uk

B&M France SAS, 8 Rue du Bois Joli, 63800, France

MADE IN CHINA

Domestic use only